 
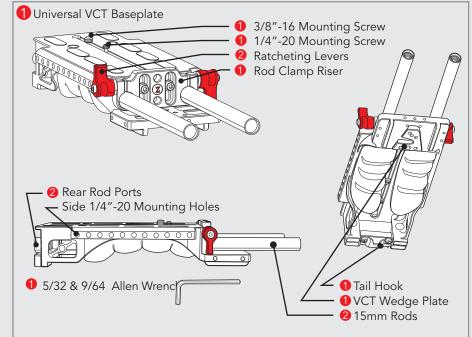
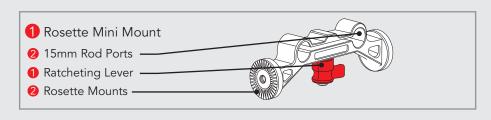



## Sony FS7 Recoil Kit


Compatible with the Sony FS7 this Recoil shoulder-mounted rig includes our VCT Universal baseplate, the Rosette Mini-mount for the Sony FS7 handgrip, and our Axis Mini for Sony FS7 which can be used with either the Gratical HD or the Sony monitor. Centered around the Universal VCT Baseplate, this kit allows you to transfer your rig from tripod to shoulder in seconds.








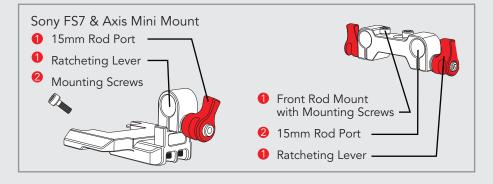

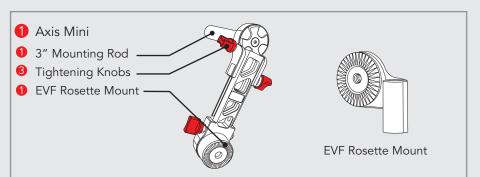

 


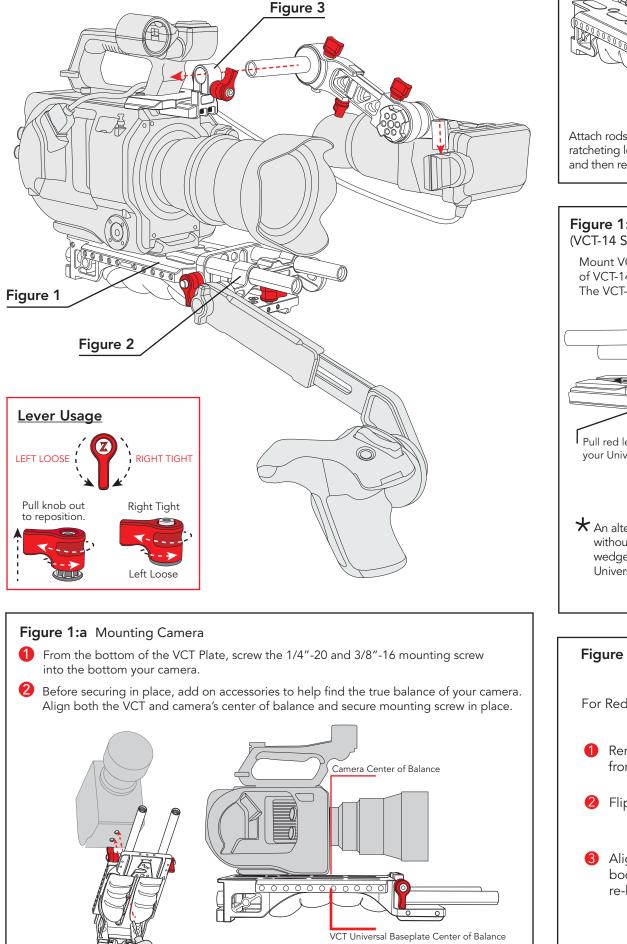



Figure 1:b Adjusting Rods

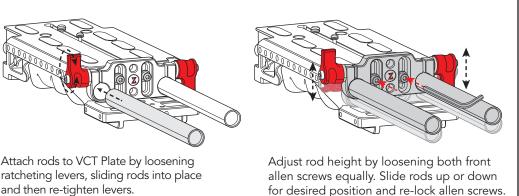

and then re-tighten levers.

## (VCT-14 Sold Separately)

Mount VCT Plate to VCT-14 by sliding the front wedge into front slot of VCT-14 and the tail hook around the rear knob of VCT-14. The VCT-14 will click when the VCT Plate is locked into place.

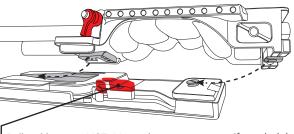

Pull red lever on VCT-14 to release your Universal VCT Plate.

Universal VCT Plate.

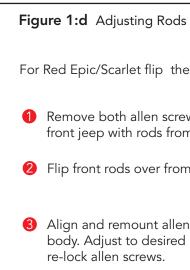


Figure 1:c Mounting VCT Plate to VCT-14 Tripod Quick Release Plate

If needed the tail hook position can be raised or lowered Loosen both allen screws equally, raise or lower tail hook and relock both allen screws when in desired position.

 $\star$  An alternative mounting method when using a tripod without a VCT14, is to mount your tripod's guick release wedge plate to the wedge on the bottom of the



For Red Epic/Scarlet flip the rod clamp riser.

**1** Remove both allen screws and separate front jeep with rods from VCT body.

2 Flip front rods over from original position.

3 Align and remount allen screws to VCT body. Adjust to desired height and

