

Thank You

Whether this is your first or fifth Westcott product, we greatly appreciate your business.

Our commitment is to offer the most innovative solutions, exceptional product quality, and first class customer support.

Visit fjwestcott.com for:

- Product videos and tips
- Photo and video inspiration
- Product reviews and support
- Knowledge base and FAQ
- Registering a product

We hope you enjoy your new gear!

Sincerely,
Team Westcott



westcott

WARRANTY

Two years against manufacturer defect.

Westcott's warranty obligations for this product are limited to the terms set forth below: The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of TWO (2) YEARS from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the "Westcott" trademark, trade name, or logo affixed to them.

This warranty does not apply: (a) to damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes; (b) to damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) to a product or part that has been modified to alter functionality or capability without the written permission of Westcott.; or (d) to cosmetic damage, including but not limited to scratches, dents and broken plastic.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the TWO (2) YEAR limited warranty will be returned at the expense of the sender.

Register this item at FJWESTCOTT.COM/WARRANTY
Repairs: 800-886-1689 or 419-243-7311
E-Mail: info@fjwestcott.com, Subject: Attn: Repair Dept.
Shipping: F.J. Westcott Co, 1425-B Holland Rd,
Maumee, OH 43537


©F.J. WESTCOTT CO. ALL RIGHTS RESERVED. AU0516

westcott
RAPIDBOX
BEAUTY DISH BY JOEL GRIMES

QUICK START GUIDE

SETUP & USAGE

CONTENTS

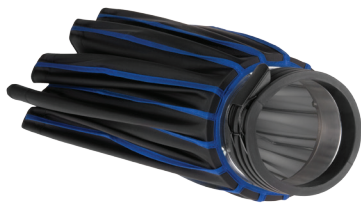

RAPID BOX BEAUTY DISH
WITH BUILT-IN SPEEDRING



DEFLECTOR PLATE



FULL-STOP DIFFUSION PANEL



TRAVEL CASE

ASSEMBLY INSTRUCTIONS

The Rapid Box Beauty Dish is equipped with a built-in speedring available in various mounting-styles. Ensure that you have purchased the Rapid Box Beauty Dish that is compatible with your light source.



1 Hold the Beauty Dish with one hand by grasping the speedring. Place the front of the modifier (opposite the speedring) upwards. Do not slide the runner onto the center pole or lock the unit open at this point.




2 With the opposite hand, grasp the Deflector Plate with the tabs around the center hole facing the rear of the Beauty Dish toward the speedring. Guide the Deflector Plate between two ribs on the inside of the Beauty Dish and gently push the Deflector Plate into place around the center pole base.



3 With the Deflector Plate in place, gently press down on the runner towards the center pole and guide into place. If necessary, rotate the runner slightly to lock into place.

Please note: The grooves inside of the runner should connect with two small metal ridges located on the center pole base. In most instances you will need to rotate the runner slightly until you feel it lock into place. When the runner and center pole base grooves are connected and positioned correctly all of the ribs in the Beauty Dish will appear aligned and straight. Failure to properly align the runner and center pole base will allow the ribs to twist, causing unnecessary stress on the Rapid Box Beauty Dish's framework. This added stress can cause permanent damage to the unit.

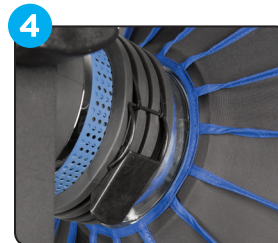

4 Once the Beauty Dish is completely setup, attach the Rapid Box Beauty Dish to your light source via the built-in speedring. Consult your light source's user manual to ensure proper and secure mounting prior to use.

Please note: The Rapid Box Beauty Dish has a maximum heat rating of 650-watts.



5 With the Beauty Dish attached to your light head, unfold the front diffusion panel and secure it to the outer edge of the Rapid Box Beauty Dish via the hook and loop tape.



TEARDOWN & STORAGE

The Rapid Box Beauty Dish Deflector Plate must be removed prior to collapsing the unit for storage and/or travel. Failure to remove the plate could permanently damage the fabric and is not covered under the manufacturer's warranty.