



SPECTROMASTER C-700 C-700R Quick Guide

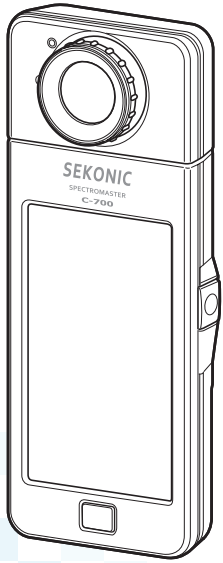

Thank you for purchasing SPECTROMASTER. This Quick Guide introduces the basic operation for this instrument. Please refer to "Operating Manual" on the CD-ROM (included product) for usage details.

4. Input of Figures/Characters

[Numeric Figure Input Screen]

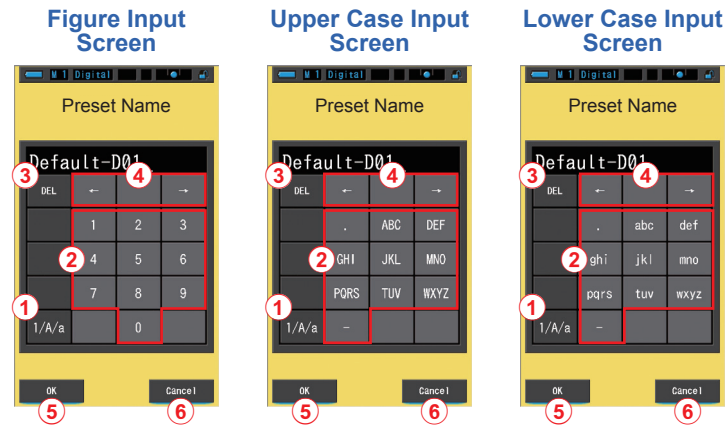

Input Method of Characters and Figures (Character Setting Screen, Figure Setting Screen)

No.	Key	Description
①	1/A/a	Shifts between figures/upper case letters/lower case letters.
②	0-9, ABC, abc, hyphen, period	Touching it displays an input value in the upper section. By touching the same button multiple times, you can change the character input to the English alphabet (ABC).
③	Delete	Deletes the character at the cursored position.
④	← →	Moves input position.
⑤	OK	Confirms the input value and returns to the original screen.
⑥	Cancel	Cancels the input and returns to the original screen.

1. Confirming the Bundled Items


This instrument and the following accessories are included. Confirm if any accessories are missing after unpacking.

Quick Guide	Main Body	CD-ROM
		 - Operating Manual - C-700 Series Utility
Safety Precaution	Neck Strap	Soft Case

- * If something is missing, contact the sales agent.
- * Batteries (size AA) and a USB cable are not included. Please prepare them in advance yourself.

2. Part Designations

The part designations are as follows.

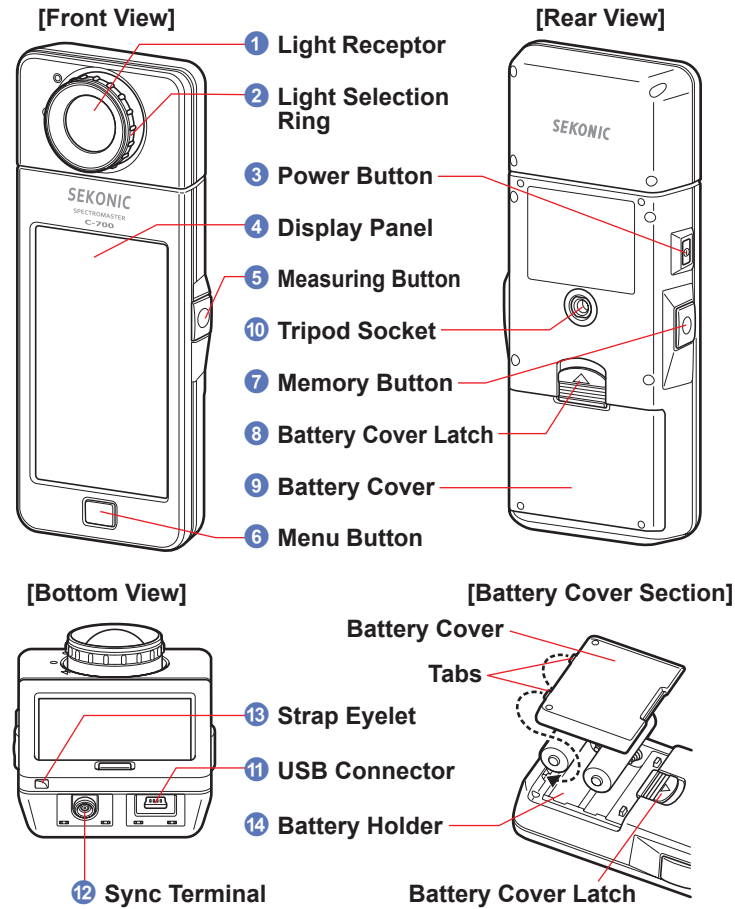


3. Operation Method

The operation method of this instrument's Display Panel is described.

By touching an icon with your finger, you can select your intended setting or item.

(Ex.) Shutter Speed Selection Screen

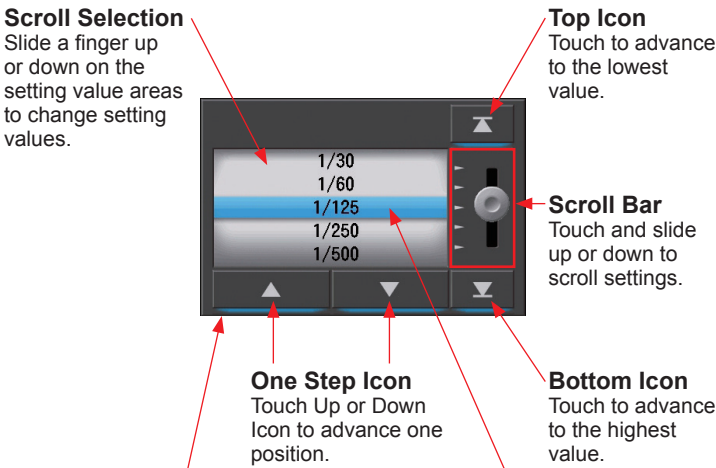


- * A blue illumination under icons indicates which icons are operational.
- * Blue bar indicates value selected.

5. Turning the Power ON

After putting in the batteries, turn the Light Selection Ring ② to set to the dark calibration position (M) and turn on this instrument by pressing the Power Button ③. After the Opening screen displays (for 2 seconds) in the Display Panel, dark calibration starts. After dark calibration properly ends, the Measurement screen displays.

Setting to the dark calibration position. Press Power Button ③.

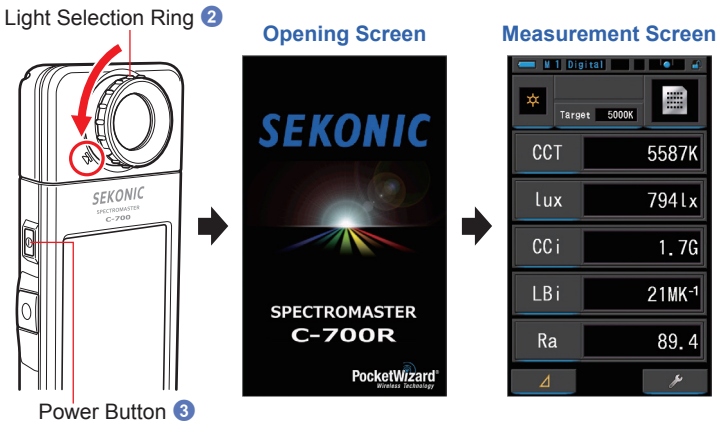

- * When the Dark Calibration Position Confirmation screen displays, set to the dark calibration position and perform again.
- * To turn off the power, press and hold the Power Button for more than one second.
- * This instrument is powered off after the display disappears.
- * Please wait 3 or more seconds between turning the power ON/OFF.

Dark Calibration Position Confirmation Screen




- * If the message, "Please set Light Selection Ring for dark calibration," displays, set the Light Selection Ring ② to the dark calibration position.
- * When taking a measurement, set the Light Selection Ring ② to the range L (icon at the middle) for ambient light. For flash light, set it to the range H (bright light: icon at the top) or to the range L (low light: icon at the middle) according to the flash output power.

Select a language used when you turn on the power for the first time. The language selected will be displayed and encircled in blue. Touch the "OK" icon to confirm. Even after you have confirmed the language, you can change it.

Language Selection Screen




Language Selection Confirmation Screen

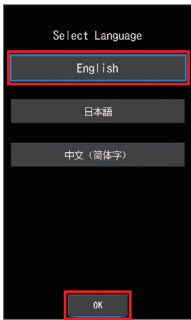

6-1. Measurement Preparation (Measuring Mode, Display Mode)

You can change screens after turning the power on as follows. Changes from the Measurement screen to each screen.


* Pressing Menu Button ⑥ shifts to the Display Mode Selection screen.

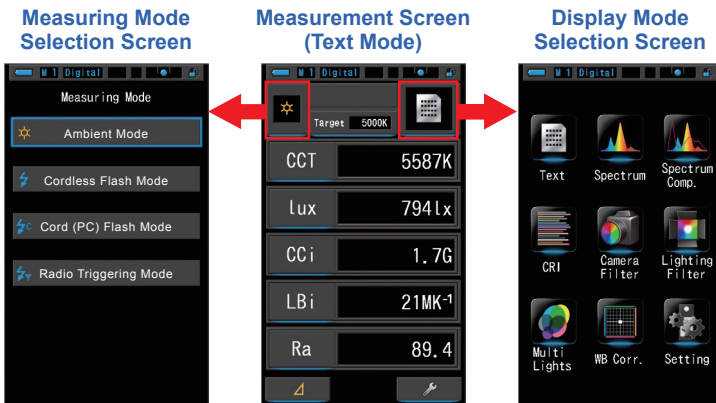

Measuring Mode	Icon	Description
Ambient Light Mode		Measures continuous light such as sunlight, tungsten, fluorescent, LED lights.
Flash Light Cordless Mode		Detects flash brightness without meter-flash connection after Measuring Button pressed to arm meter for 90 seconds and flash fired separately. Measure using a flash during the wait time.
Flash Light Cord (PC) Mode		Detects flash brightness with PC (synchro) cord meter-flash connection.
Flash Light Radio Triggering Mode (only for C-700R model)		Detects flash brightness without meter-flash connection after radio transmitted signal is received by radio-receiver connected flash.

6-2. Display Mode

Pressing Measuring Button 5 to take a measurement in each Display Mode.
Press Memory Button 7 to memorize measured value.

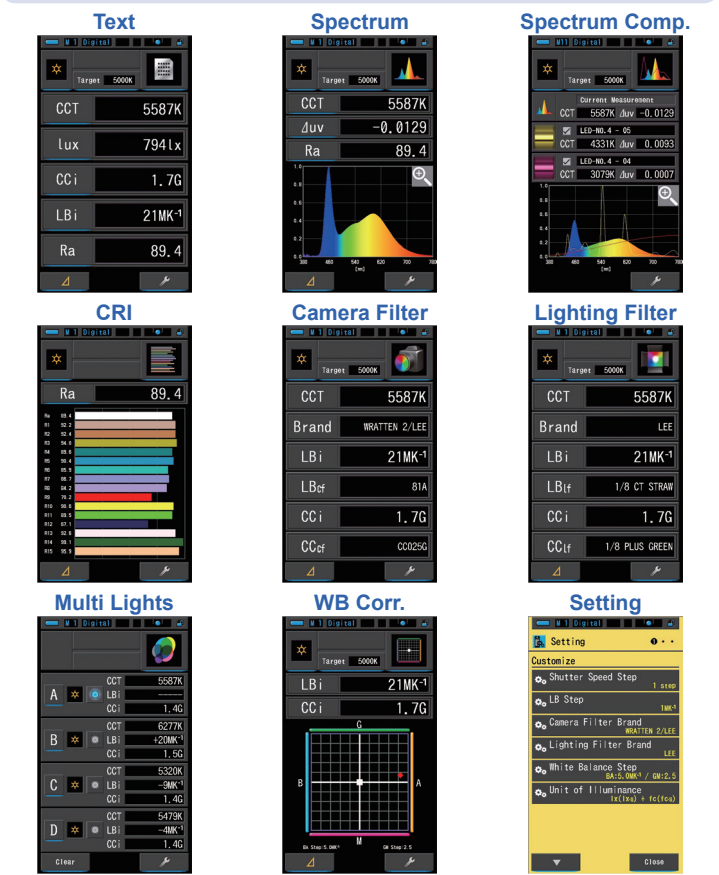


FUJIFILM Filter [Camera Filter]

Amber Type			Blue Type		
LB Index (MK ⁻¹)	Filter Number	Exposure Increase Increment (+EV)	LB Index (MK ⁻¹)	Filter Number	Exposure Increase Increment (+EV)
+10	LBA-1	0	-10	LBB-1	0
+20	LBA-2	1/3	-20	LBB-2	1/3
+30	LBA-3	1/3	-30	LBB-3	1/2
+40	LBA-4	1/3	-40	LBB-4	2/3
+60	LBA-6	2/3	-60	LBB-6	2/3
+80	LBA-8	2/3	-80	LBB-8	1
+120	LBA-12	2/3	-120	LBB-12	1 2/3
+160	LBA-16	1	-160	LBB-16	2
+200	LBA-20	1	-200	LBB-20	2 1/3

Magenta Type			Green Type		
CC index	Filter Number	Exposure Increase Increment (+EV)	CC index	Filter Number	Exposure Increase Increment (+EV)
+0.5	CC-1.25M	0	-0.5	CC-1.25G	0
+1.0	CC-2.5M	0	-1.0	CC-2.5G	0
+2.0	CC-5M	1/3	-2.0	CC-5G	1/4
+3.0	CC-7.5M	1/3	-3.0	CC-7.5G	1/3
+4.0	CC-10M	1/2	-4.0	CC-10G	1/3
+8.0	CC-20M	2/3	-8.0	CC-20G	1/2
+12.0	CC-30M	2/3	-12.0	CC-30G	2/3
+16.0	CC-40M	1	-16.0	CC-40G	2/3
+20.0	CC-50M	1 1/3	-20.0	CC-50G	1

7. Functions

Touching the "Tool Box ()" icon in the Measurement screen shifts to the Tool Box screen where the settings of functions which are frequently used are listed. If a measurement value is not memorized, you cannot select memory clear or memory recall which is grayed out in the title. When the preset edit is not being conducted, you cannot select the preset selection which is grayed out in the title.

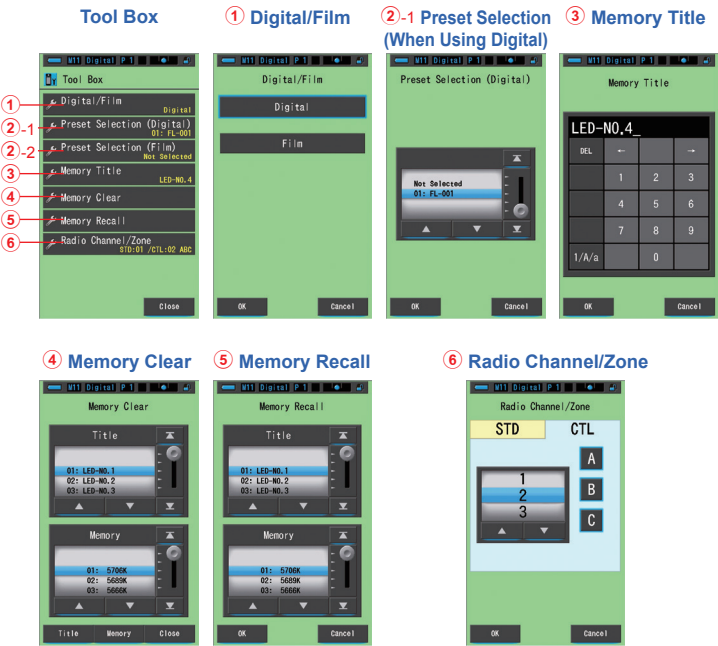


LEE [Lighting Filter]

LB index (MK ⁻¹)	Filter No.	Filter Name	CCT(K) Conversion
-18	L218	1/8 CTB	3200 to 3400
-35	L203	1/4 CTB	3200 to 3600
-78	L202	1/2 CTB	3200 to 4300
-113	L281	3/4 CTB	3200 to 5000
-137	L201	FULL CTB	3200 to 5700
-200	L283	ONE AND 1/2 CTB (1.5 CTB)	3200 to 8888
-274	L200	DOUBLE CTB	3200 to 26000
+26	L223	1/8 CTO	6500 to 5550
+64	L206	1/4 CTO	6500 to 4600
+109	L205	1/2 CTO	6500 to 3800
+124	L285	3/4 CTO	6500 to 3600
+159	L204	FULL CTO	6500 to 3200
+245	L286	ONE AND 1/2 CTO (1.5 CTO)	6500 to 2507
+312	L287	DOUBLE CTO	6500 to 2147


CC index	Filter No.	Filter Name	CC Filter Equivalent
-1.4	L278	1/8 PLUS GREEN (1/8 PLUS G)	CC 035 Green
-3.0	L246	1/4 PLUS GREEN (1/4 PLUS G)	CC 075 Green
-6.0	L245	1/2 PLUS GREEN (1/2 PLUS G)	CC 15 Green
-12.0	L244	FULL PLUS GREEN (PLUS GREEN)	CC 30 Green
+1.4	L279	1/8 MINUS GREEN	CC 035 Magenta
+3.0	L249	1/4 MINUS GREEN	CC 075 Magenta
+6.0	L248	1/2 MINUS GREEN	CC 15 Magenta
+12.0	L247	FULL MINUS GREEN	CC 30 Magenta

8. Selection of Display Items

Touching the "Setting" icon in the Display Mode Selection screen shifts to the Setting screen. Here you can set functions and display methods required for measurement in advance. Icons displayed are as follows.

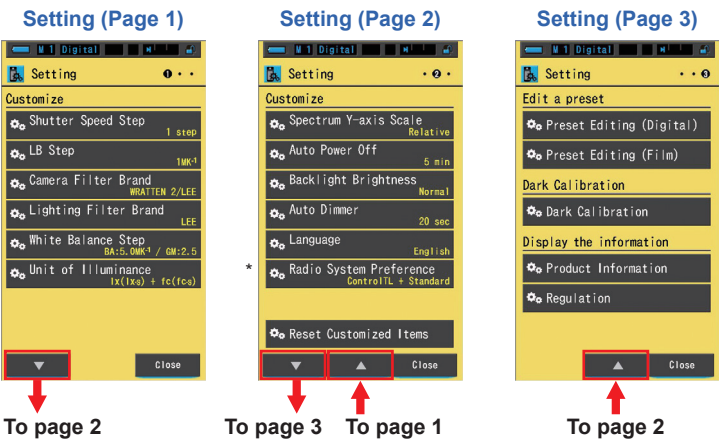

*Indicated only for C-700R model

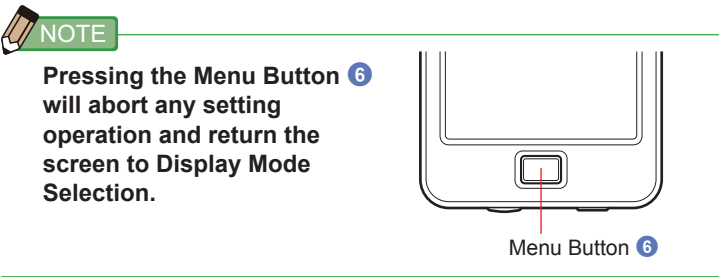

ROSCO CINEGEL [Lighting Filter]

LB index (MK ⁻¹)	Filter No.	Filter Name	CCT(K) Conversion
-12	R3216	1/8 CTB	3200 to 3300
-30	R3208	1/4 CTB	3200 to 3500
-49	R3206	1/3 CTB	3200 to 3800
-68	R3204	1/2 CTB	3200 to 4100
-100	R3203	3/4 CTB	3200 to 4700
-131	R3202	FULL CTB	3200 to 5500
-260	R3220	DOUBLE CTB	2800 to 10000
+20	R3410	1/8 CTO	5500 to 4900
+42	R3409	1/4 CTO	5500 to 4500
+81	R3408	1/2 CTO	5500 to 3800
+131	R3411	3/4 CTO	5500 to 3200
+167	R3407	FULL CTO	5500 to 2900
+320	R3420	DOUBLE CTO	10000 to 2400

CC index	Filter No.	Filter Name	CC Filter Equivalent
-1.4	R3317	1/8 PLUS GREEN (1/8 PLUS G)	CC 035 Green
-3.0	R3316	1/4 PLUS GREEN (1/4 PLUS G)	CC 075 Green
-6.0	R3315	1/2 PLUS GREEN (1/2 PLUS G)	CC 15 Green
-12.0	R3304	PLUS GREEN	CC 30 Green
+1.4	R3318	1/8 MINUS GREEN (1/8 MINUS G)	CC 035 Magenta
+3.0	R3314	1/4 MINUS GREEN (1/4 MINUS G)	CC 075 Magenta
+6.0	R3313	1/2 MINUS GREEN (1/2 MINUS G)	CC 15 Magenta
+9.0	R3309	3/4 MINUS GREEN (3/4 MINUS G)	CC 22.5 Magenta
+12.0	R3308	MINUS GREEN	CC 30 Magenta

() Displayed in C-700/C-700R

9. Type of Filter

When using camera's LB/CC filters based on the recommended compensation displayed in the meter (C-700 series), please note that the light entering the lens/camera will be less intense. If your camera doesn't have a Through the Lens (TTL) metering system, than use the chart below to determine the correct exposure compensation from the hand-held light meter's reading. When you use a lighting filter, exposure compensation is not necessary.

Kodak WRATTEN 2/LEE Filter [Camera Filter]

Amber Type			Blue Type		
LB Index (MK ⁻¹)	Filter Number	Exposure Increase Increment (+EV)	LB Index (MK ⁻¹)	Filter Number	Exposure Increase Increment (+EV)
+9	81	1/3	-10	82	1/3
+18	81A	1/3	-21	82A	1/3
+27	81B	1/3	-32	82B	2/3
+35	81C	1/3	-45	82C	2/3
+42	81D	2/3	-56	80D	2/3
+52	81EF	2/3	-81	80C	1
+81	85C	1/3	-112	80B	1 2/3
+112	85	2/3	-131	80A	2
+131	85B	2/3			

Magenta Type			Green Type		
CC index	Filter Number	Exposure Increase Increment (+EV)	CC index	Filter Number	Exposure Increase Increment (+EV)
+1.0	CC025M	0	-1.0	CC025G	0
+2.0	CC05M	1/3	-2.0	CC05G	1/3
+4.0	CC10M	1/3	-4.0	CC10G	1/3
+8.0	CC20M	1/3	-8.0	CC20G	1/3
+12.0	CC30M	2/3	-12.0	CC30G	2/3
+16.0	CC40M	2/3	-16.0	CC40G	2/3
+20.0	CC50M	1	-20.0	CC50G	2/3

ROSCO E-COLOUR+ [Lighting Filter]

LB index (MK ⁻¹)	Filter No.	Filter Name	CCT(K) Conversion
-18	E218	1/8 CTB	3200 to 3400
-35	E203	1/4 CTB	3200 to 3600
-78	E202	1/2 CTB	3200 to 4300
-113	E281	3/4 CTB	3200 to 5000
-137	E201	FULL CTB	3200 to 5700
-200	E283	ONE AND 1/2 CTB (1.5 CTB)	3200 to 8900
-274	E200	DOUBLE CTB	2800 to 10000
+26	E223	1/8 CTO	Daylight to 5300
+64	E206	1/4 CTO	Daylight to 4600
+109	E205	1/2 CTO	Daylight to 3800
+124	E285	3/4 CTO	Daylight to 3500
+159	E204	FULL CTO	Daylight to 3200
+245	E286	ONE AND 1/2 CTO (1.5 CTO)	Daylight to 2507
+312	E287	DOUBLE CTO	Daylight to 2120

CC index	Filter No.	Filter Name	CC Filter Equivalent
-1.4	E278	1/8 PLUS GREEN	CC 035 Green
-3.0	E246	1/4 PLUS GREEN	CC 075 Green
-6.0	E245	1/2 PLUS GREEN	CC 15 Green
-12.0	E244	FULL PLUS GREEN	CC 30 Green
+1.4	E279	1/8 MINUS GREEN	CC 035 Magenta
+3.0	E249	1/4 MINUS GREEN	CC 075 Magenta
+6.0	E248	1/2 MINUS GREEN	CC 15 Magenta
+12.0	E247	FULL MINUS GREEN	CC 30 Magenta

() Displayed in C-700/C-700R

SEKONIC CORPORATION

7-24-14, Oizumi-Gakuen-Cho, Nerima-Ku, Tokyo
178-8686 Japan

TEL +81-3-3978-2335 FAX +81-3-3978-5229
http://www.sekonic.com