



# EASY RISER (WEAPON/RAVEN)

Included:

(2) 3/8-16 captured screw

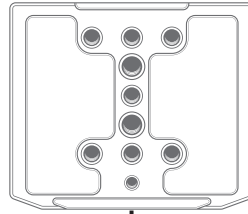

EASY RISER TOP



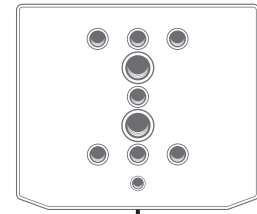


EASY RISER BOTTOM


## INSTALLATION

1. Locate and align the two 3/8-16 HOLES on bottom of CAMERA and EASY RISER TOP.

2. Select 3/8-16 SCREWS, tighten EASY RISER to CAMERA with screwdriver.

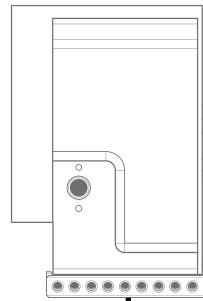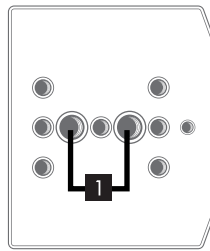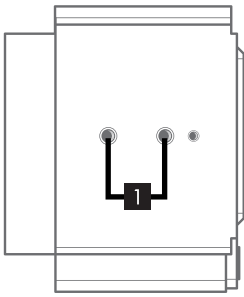

1

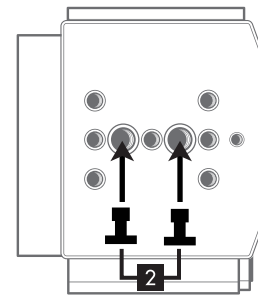


2

© Wooden Camera, Inc. 2011-2015


# EASY RISER (WEAPON/RAVEN)

Included:

(2) 3/8-16 captured screw

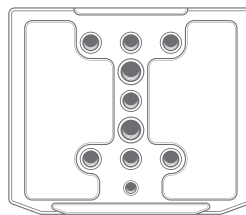

EASY RISER TOP



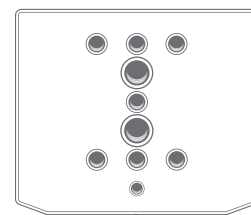


EASY RISER BOTTOM


## INSTALLATION

1. Locate and align the two 3/8-16 HOLES on bottom of CAMERA and EASY RISER TOP.

2. Select 3/8-16 SCREWS, tighten EASY RISER to CAMERA with screwdriver.

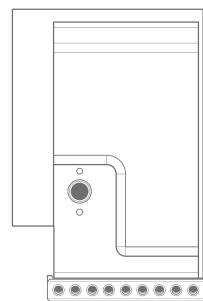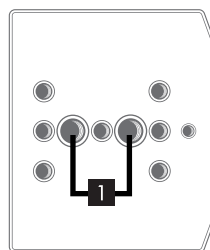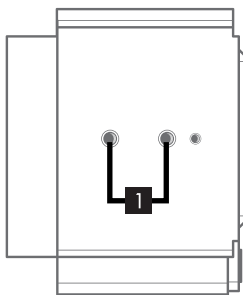

1

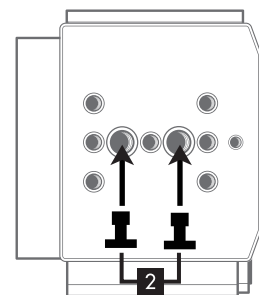

2

© Wooden Camera, Inc. 2011-2015