
TO UNFOLD GUNSTOCK PUSH DOWN ON SILVER BOLT WITH YOUR THUMB WHILE PULLING UP ON THE BOTTOM OF THE GUNSTOCK ARM.

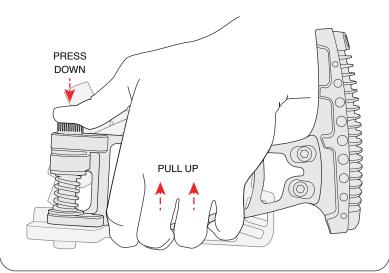



WITH THE GUNSTOCK ARM LIFTED, ROTATE THE ARM 180° INTO THE OPEN POSITION AS SHOWN.


check out our tutorial videos at zacuto.com


NEED MORE

HELP

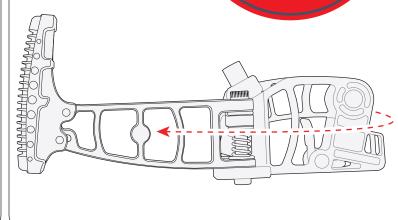

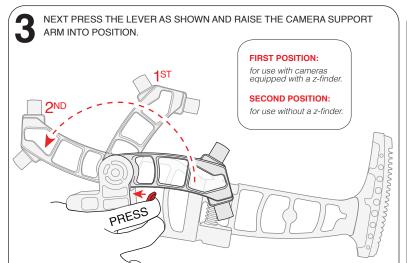

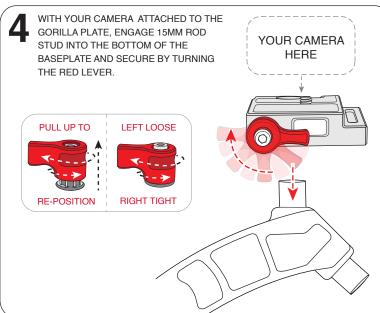

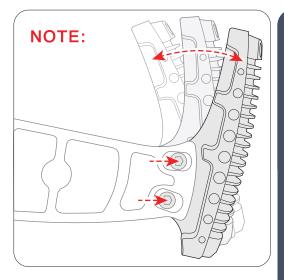

NOTE: Gunstock:

The gunstock can be pivoted so that it makes optimal contact with the shooter's chest or shoulder. Loosen the 2 screws to pivot the pad to the correct angle.

In some instances, depending on the type of camera used or the size of the shooter, the gunstock pad will need to be flipped into the down position for optimal comfort. To do this, unscrew the 2 10-32 allen screws completely, flip the gunstock 180 and reattach the screws.