

# PocketWizard®

Thank you for purchasing a PocketWizard Remote Camera Cable Adapter!

## Included:

1 Pre-Trigger Mono Miniphone (PTMM) Adapter

From: 1/8" (3.5 mm) mono miniphone male (PocketWizard radio)

via: Pre-Trigger / Shutter release half-press switch


To: 1/8" (3.5 mm) stereo miniphone female (-ACC cable)

Requires -ACC Remote Camera Cable (not included):

[www.pocketwizard.com/support/cable\\_finder/](http://www.pocketwizard.com/support/cable_finder/)

## Instructions:

1. Connect PTMM mono miniphone male to PocketWizard radio
2. Connect -ACC cable (not included)
3. Connect -ACC cable to camera remote shutter release terminal
4. Use PTMM switch to control camera's shutter release half-press at camera position

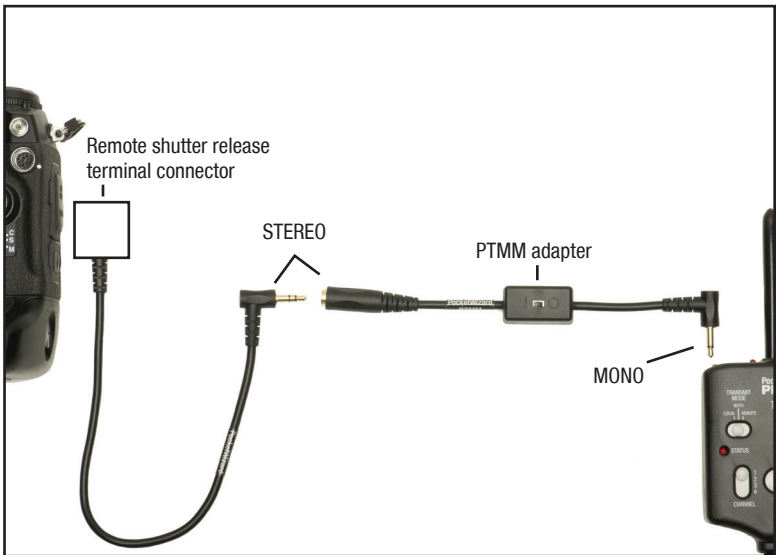

Compatible with all Plus®, MultiMAX®, and FlexTT5® radios.

## Note:

*(-ACC cable) + (PTMM) = Legacy Pre-Trigger (-P) cable.*

See radio manuals for more info:

[www.pocketwizard.com/support/manual/](http://www.pocketwizard.com/support/manual/)



Pre-Trigger

Normal

---

## Pre-Trigger / Continuous shutter release half-press

- Camera continuously meters and focuses (if set)
- Reduces lag time / more consistent lag time
- Camera uses batteries faster
- Image review not available
- Some camera controls (menus) not available

## Normal

- Camera meters and focuses only when triggered
- Lag time affected by focus time
- Camera uses batteries normally
- Image review available
- All camera controls available

---

Visit the PocketWizard wiki and website for more information:

[www.wiki.pocketwizard.com](http://www.wiki.pocketwizard.com)

[www.pocketwizard.com](http://www.pocketwizard.com)