

# SOLIDCOM M1

FULL-DUPLEX WIRELESS INTERCOM SOLUTION

## Upgrade Introduction



# UPDATES

- **Adjust Microphone Gain**
- **Dynamic IP Allocation**
- **Customized Naming of Belt Pack**
- **Add 8 Work Mode**



# BELT PACK MODE


**NOTE:** Please long press the “+” and “-” button which are beside the belt pack to enter the menu page





# DYNAMIC IP



**NOTE:** Please long press the middle button of the base station then select Network icon to do the network setting

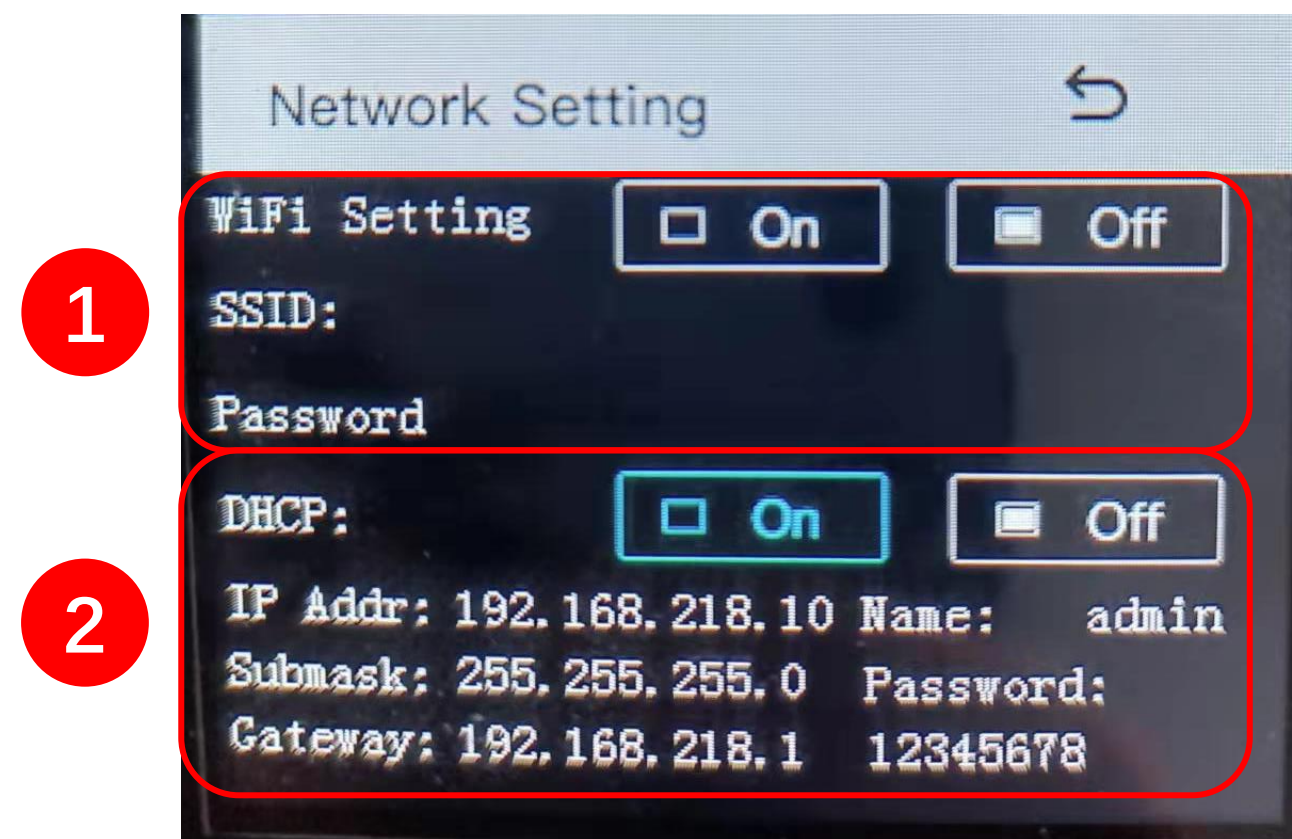

1 The default Wi-Fi settings is OFF, SSID and password will be displayed after you select ON, then you can connect Wi-Fi via phone to connect our APP.





2 The function of DHCP is OFF by default, all IP information are fixed. The IP address will be assigned by the router after you select ON and you can not check the information on the base station

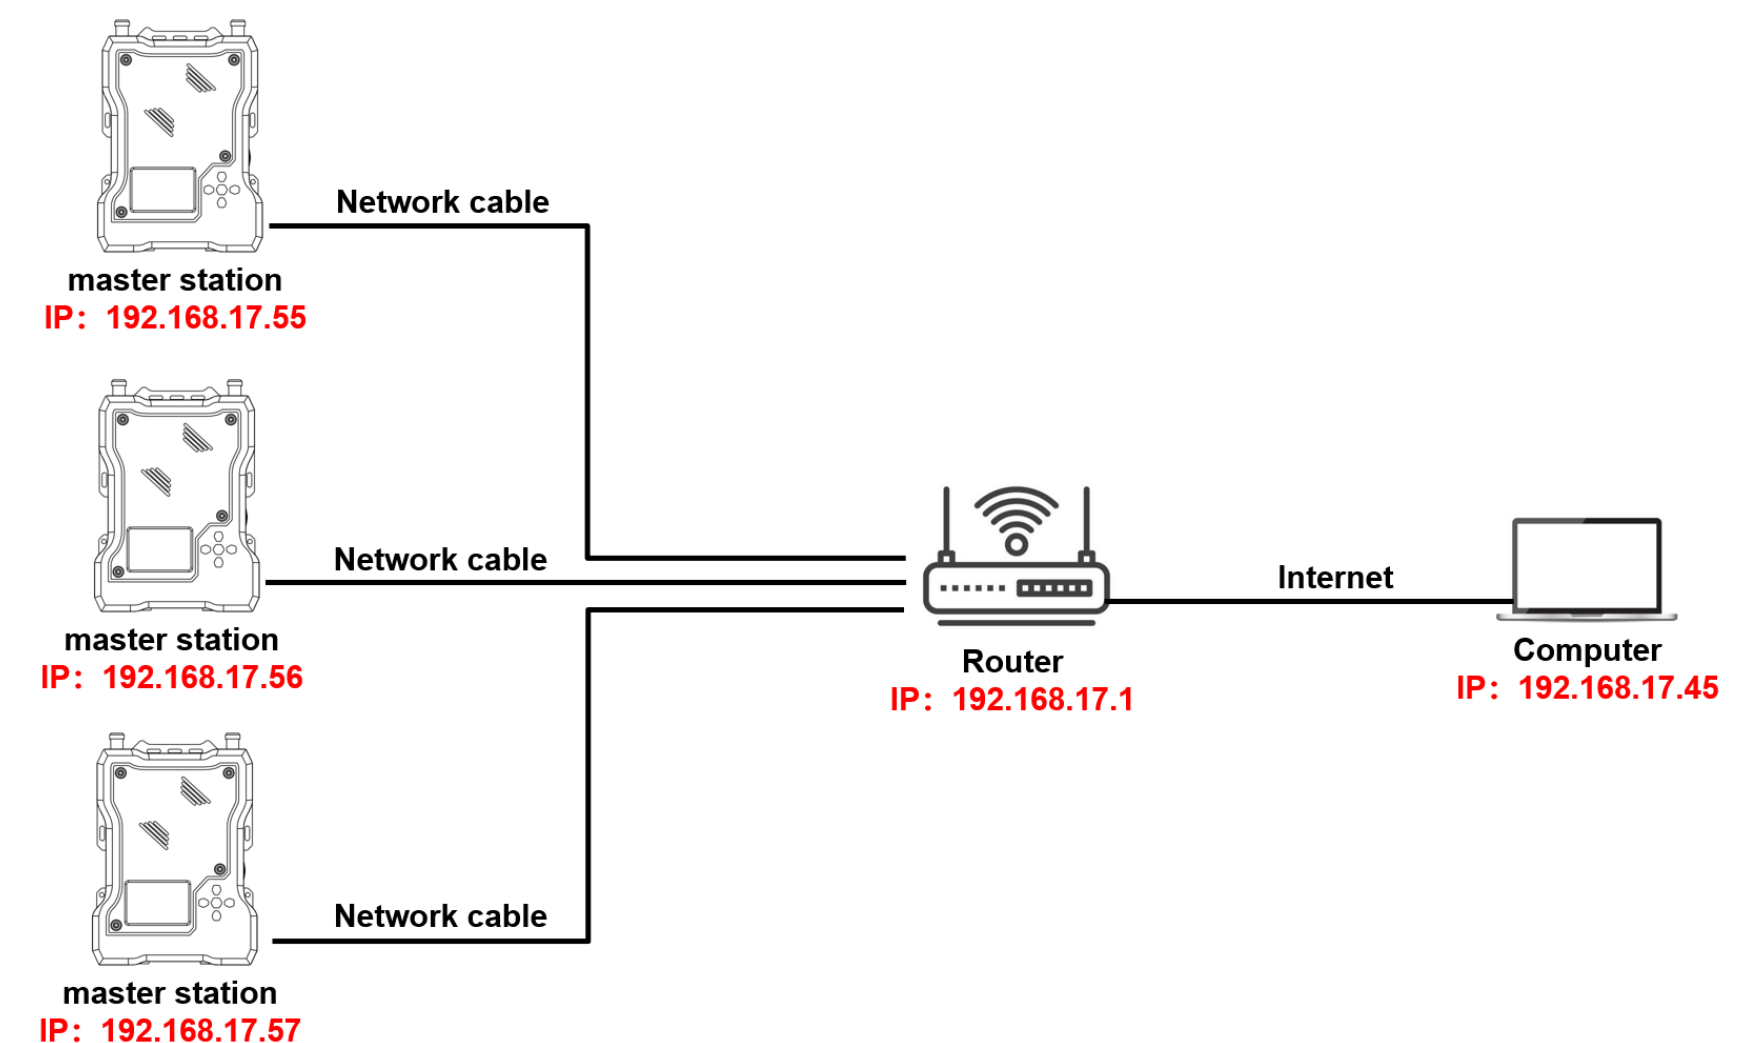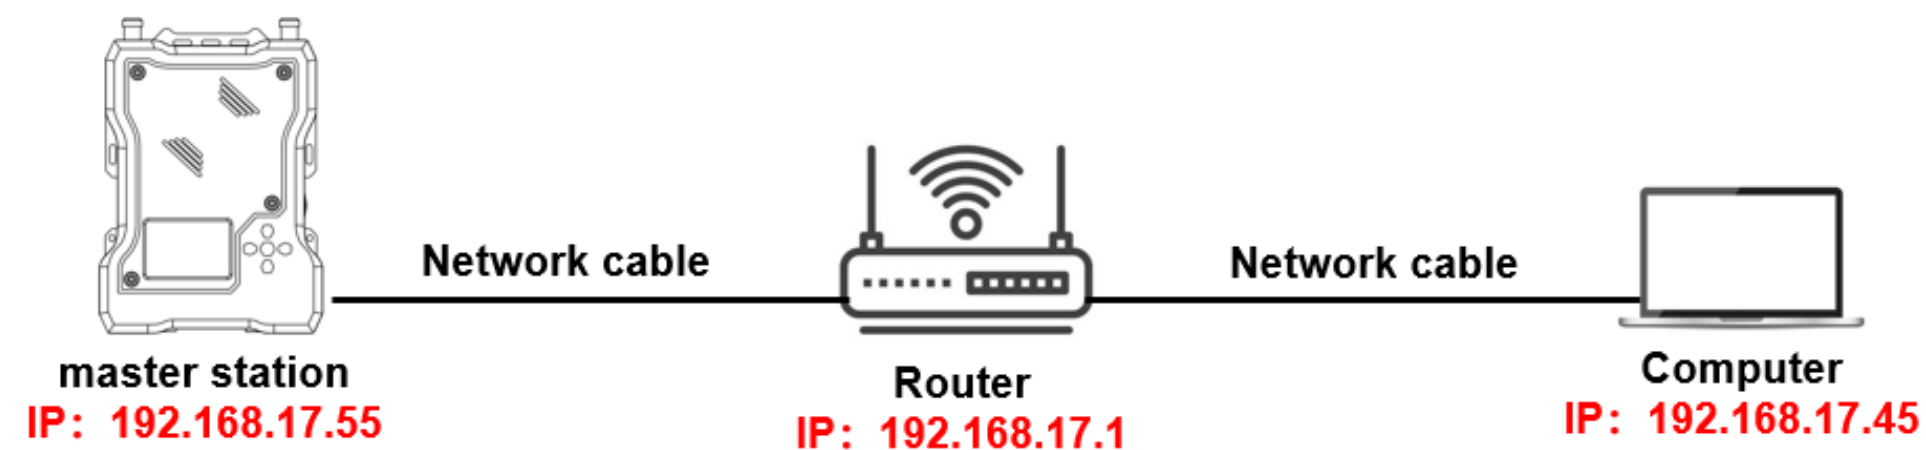


# Network



3 Enter the device's IP address on Google Chrome

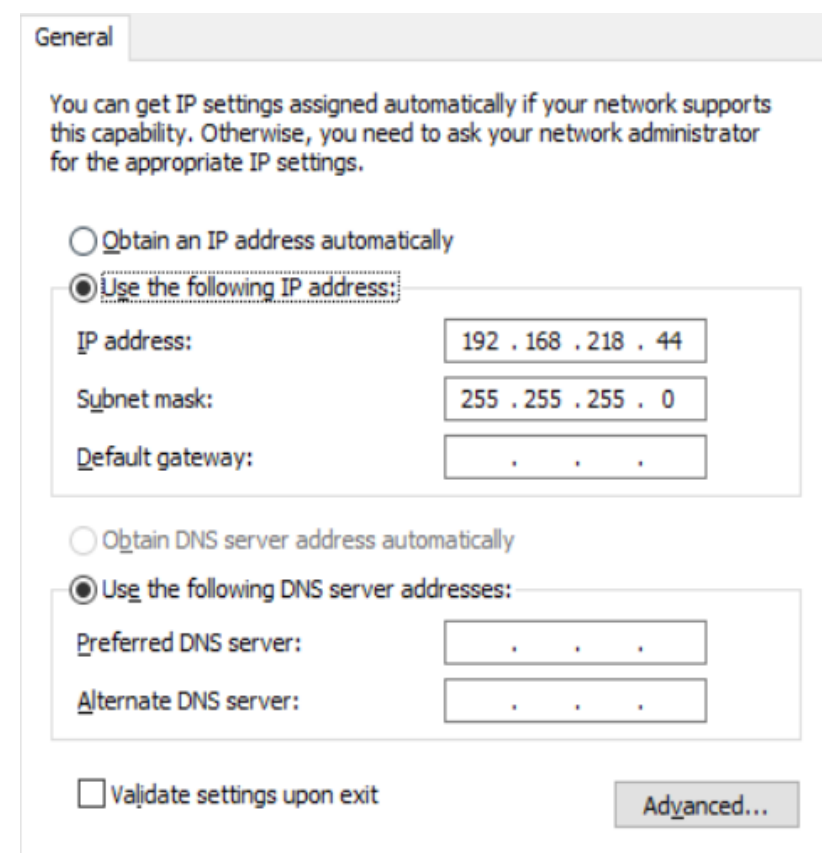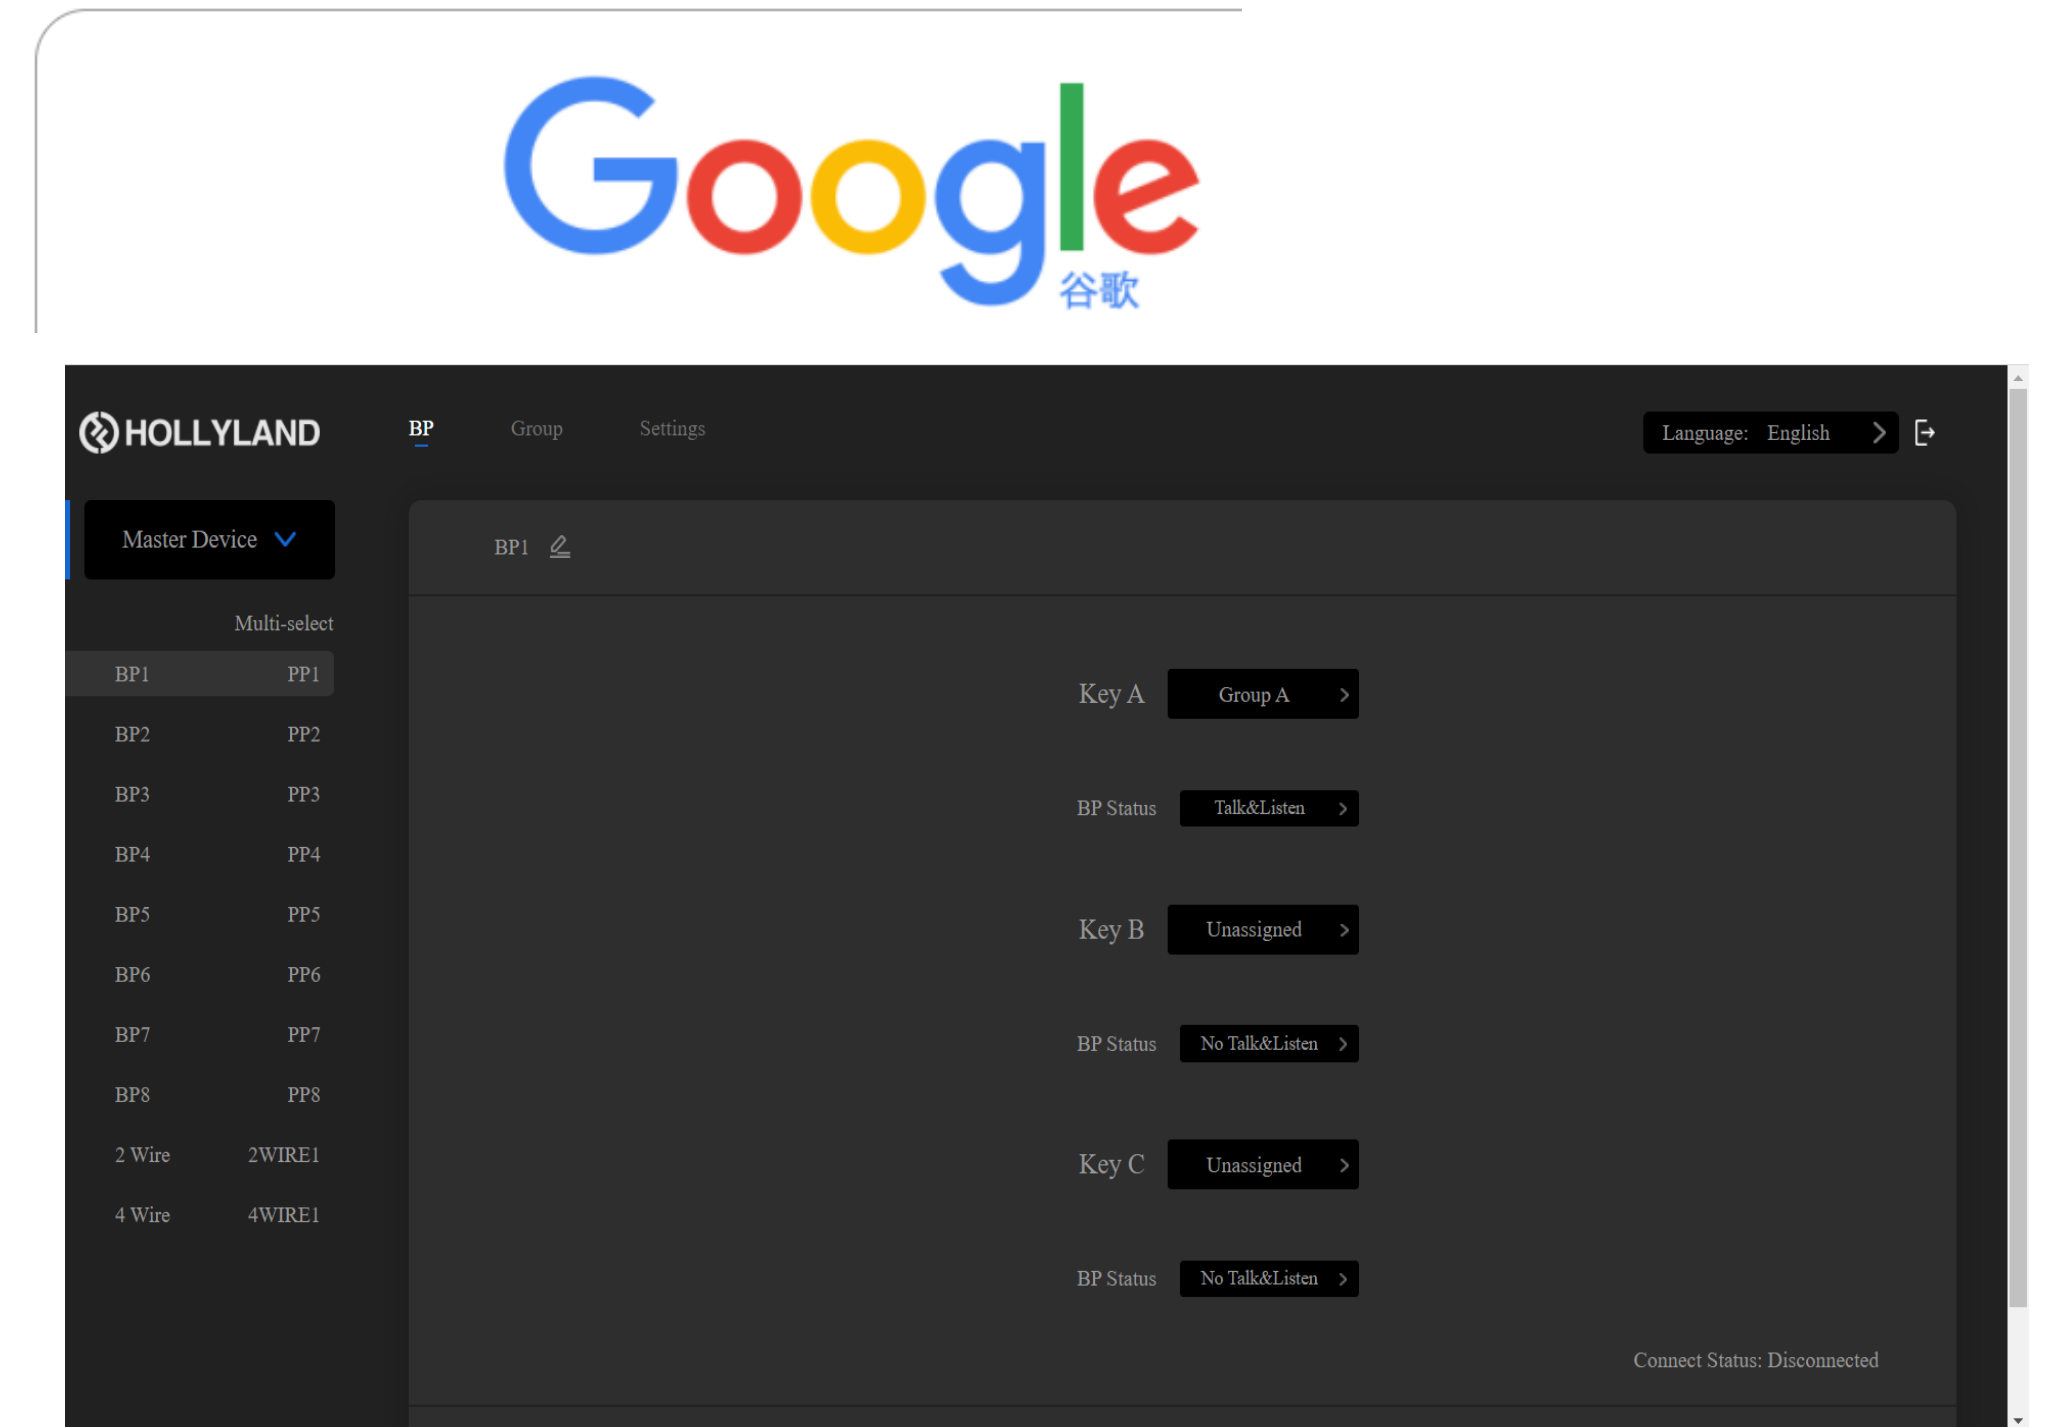

2

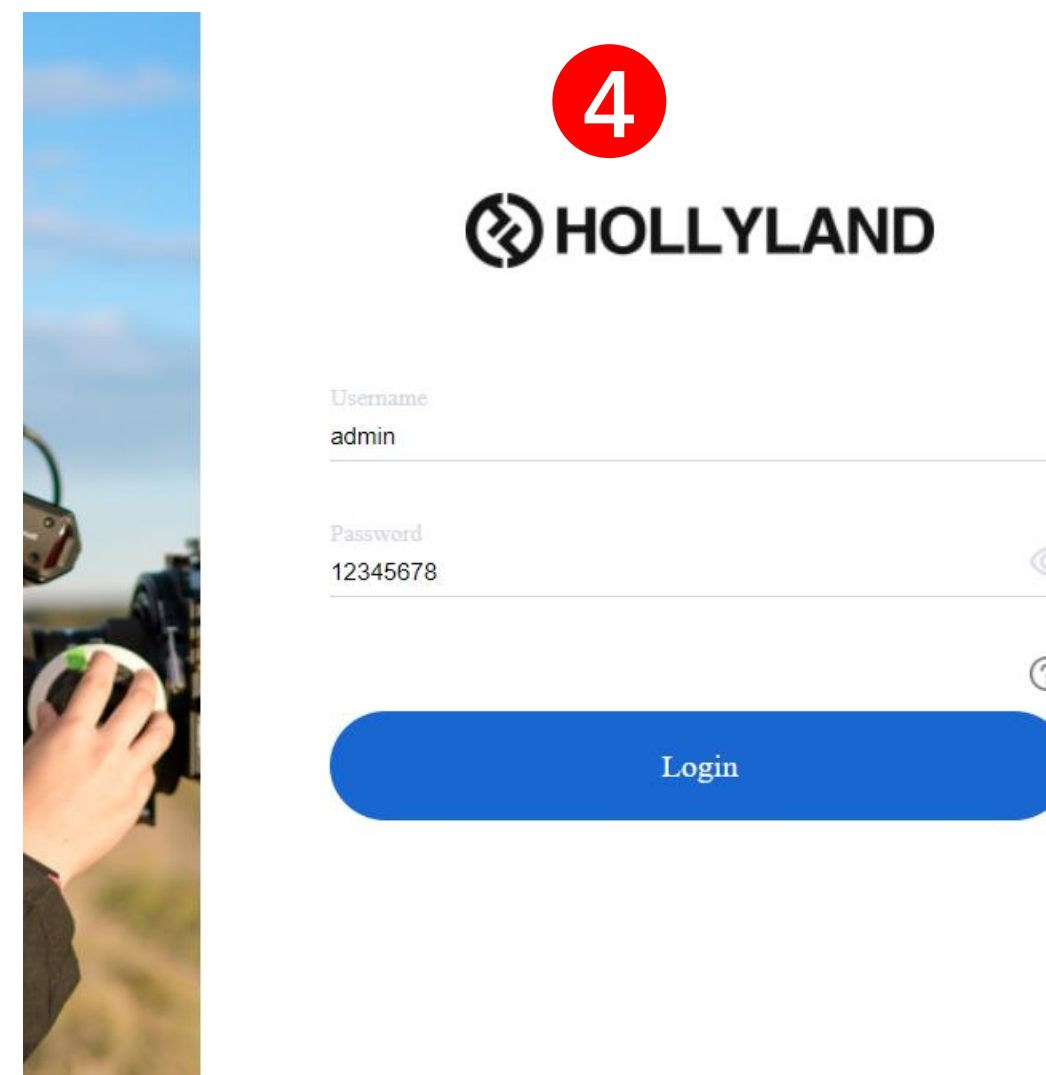

4

Set IP address manually to **192.168.218.XX**

The IP address can not be the same as the device

Enter Username and Password


**Username:** admin

**Password:** 12345678

Device setting on web interface


# BELT PACK NAMING

**NOTE:** You can change the name of belt pack on our APP and Webserver

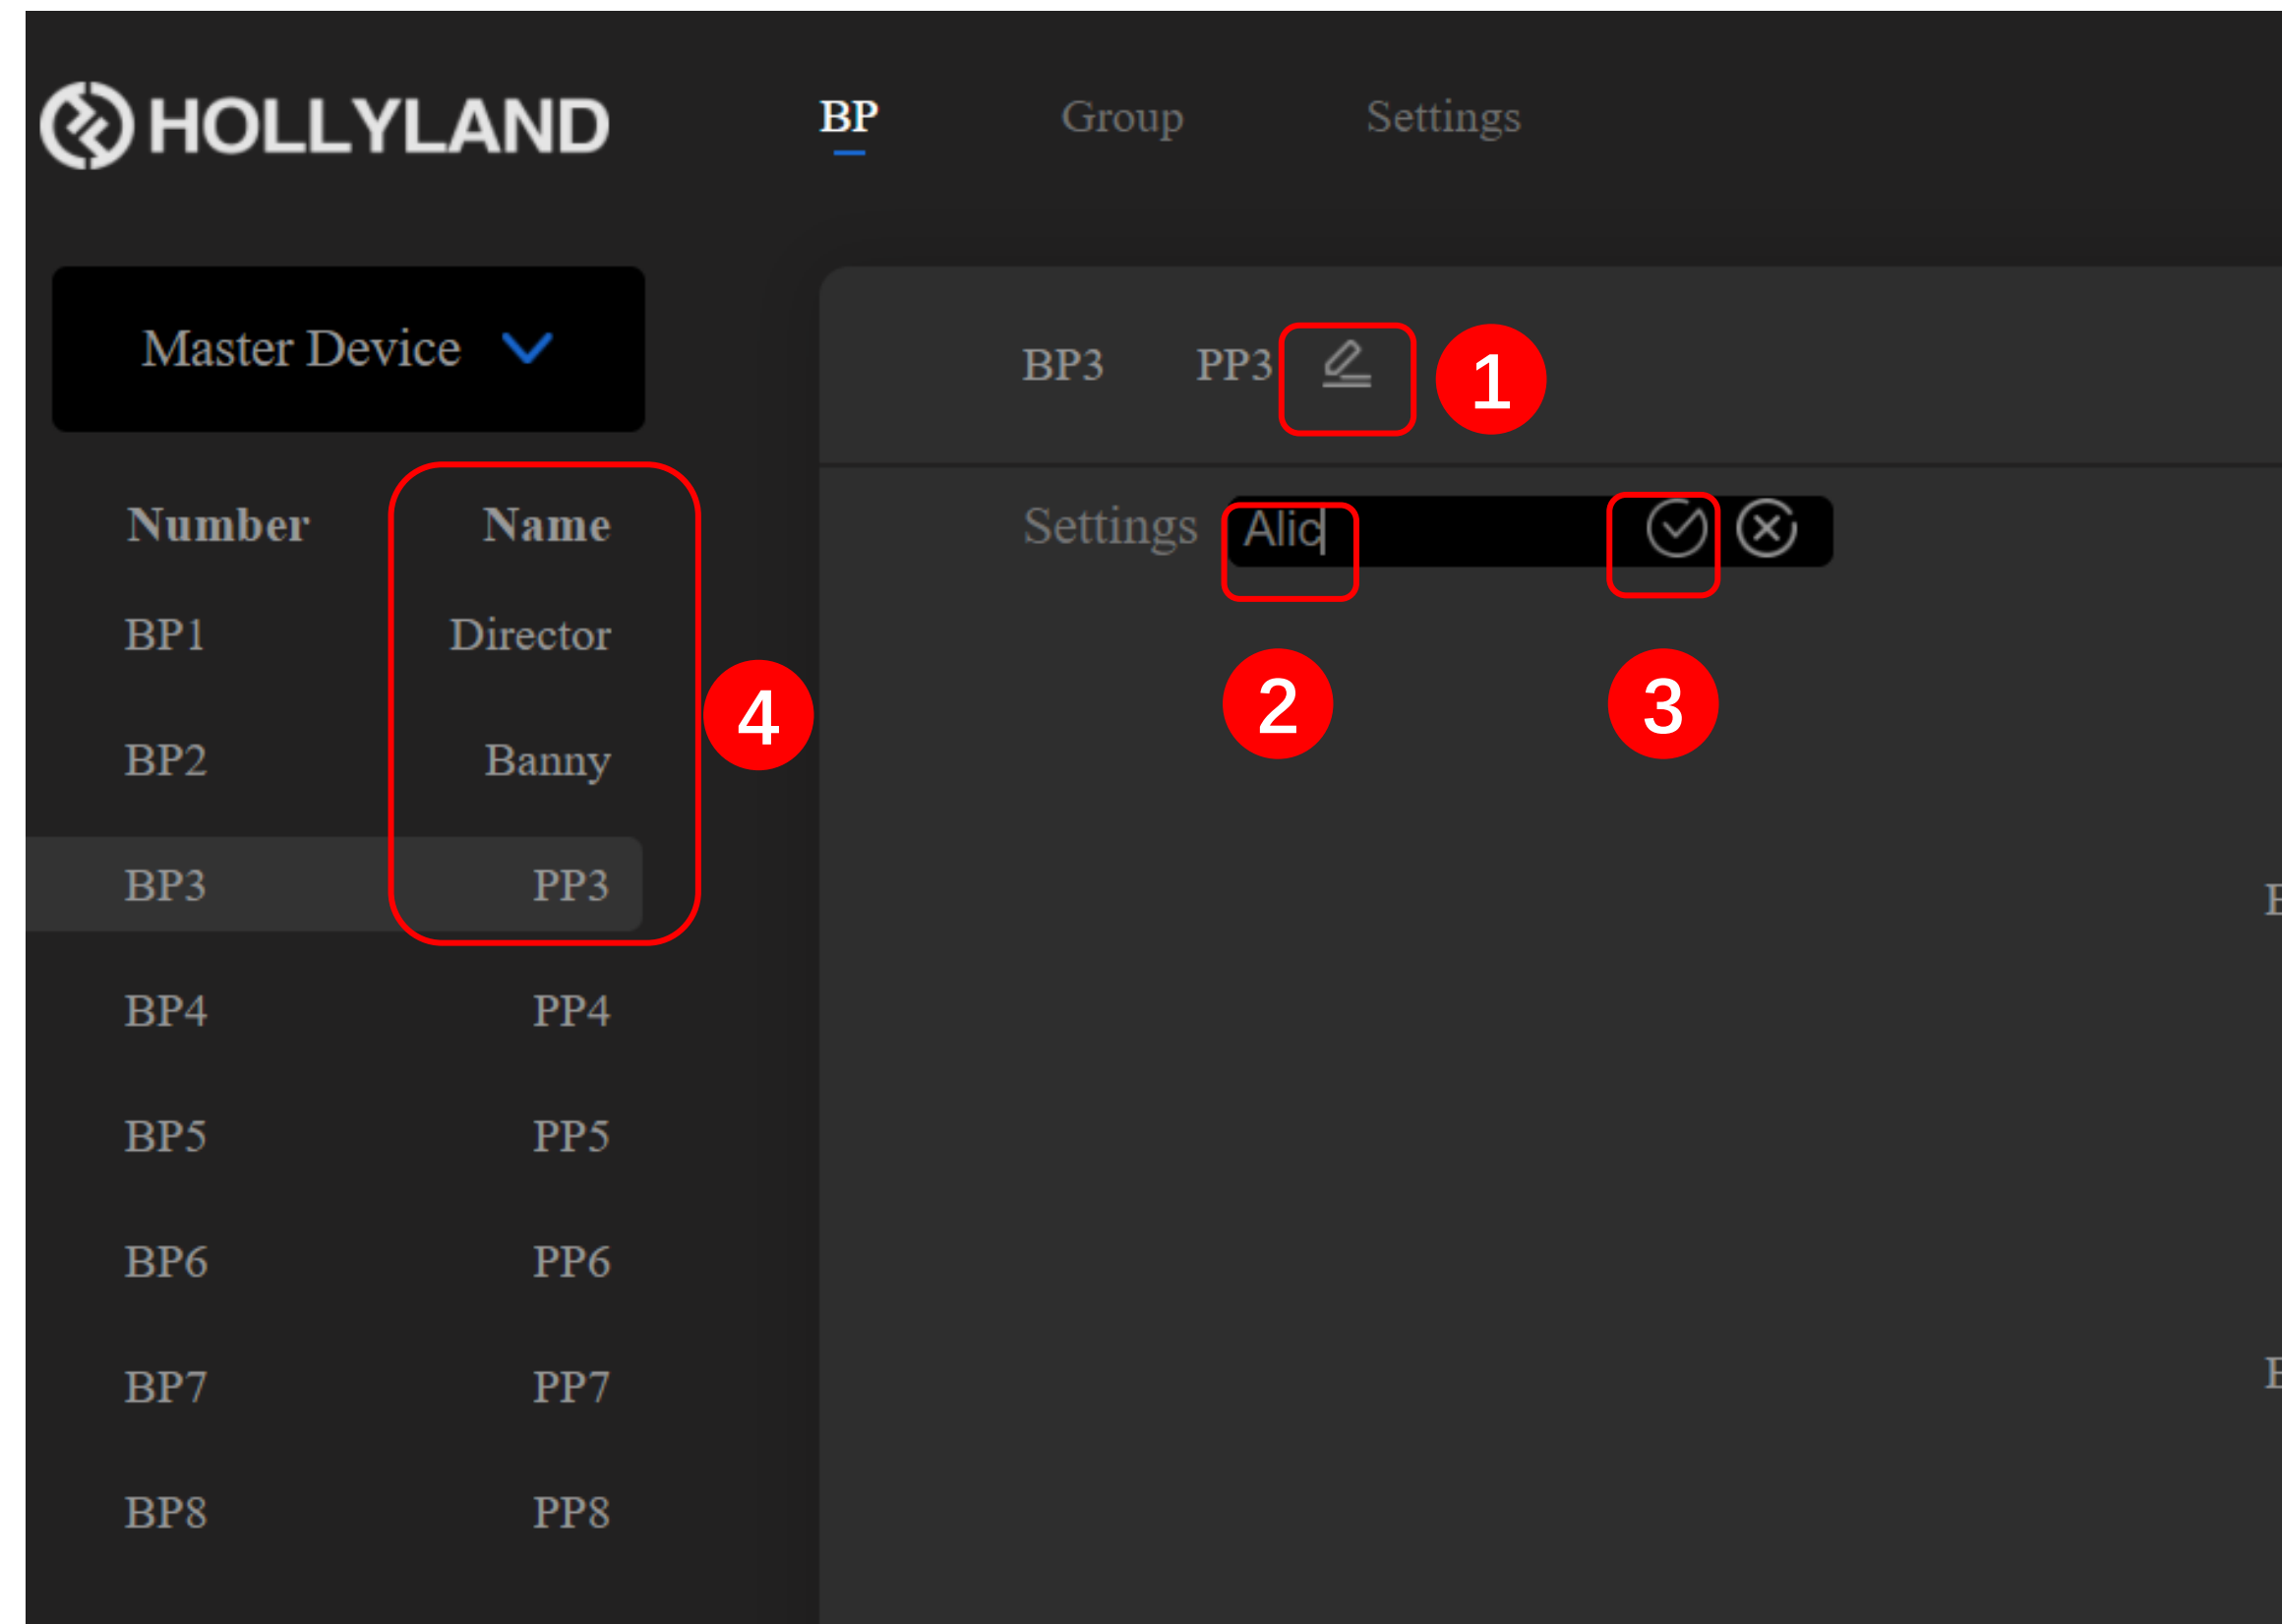


- 1 Click here to change the name of belt pack
- 2 Enter the name you want (Up to 8 character)
- 3 Click “√” to confirm
- 4 Check the name you setted

# 8 WORKING MODES

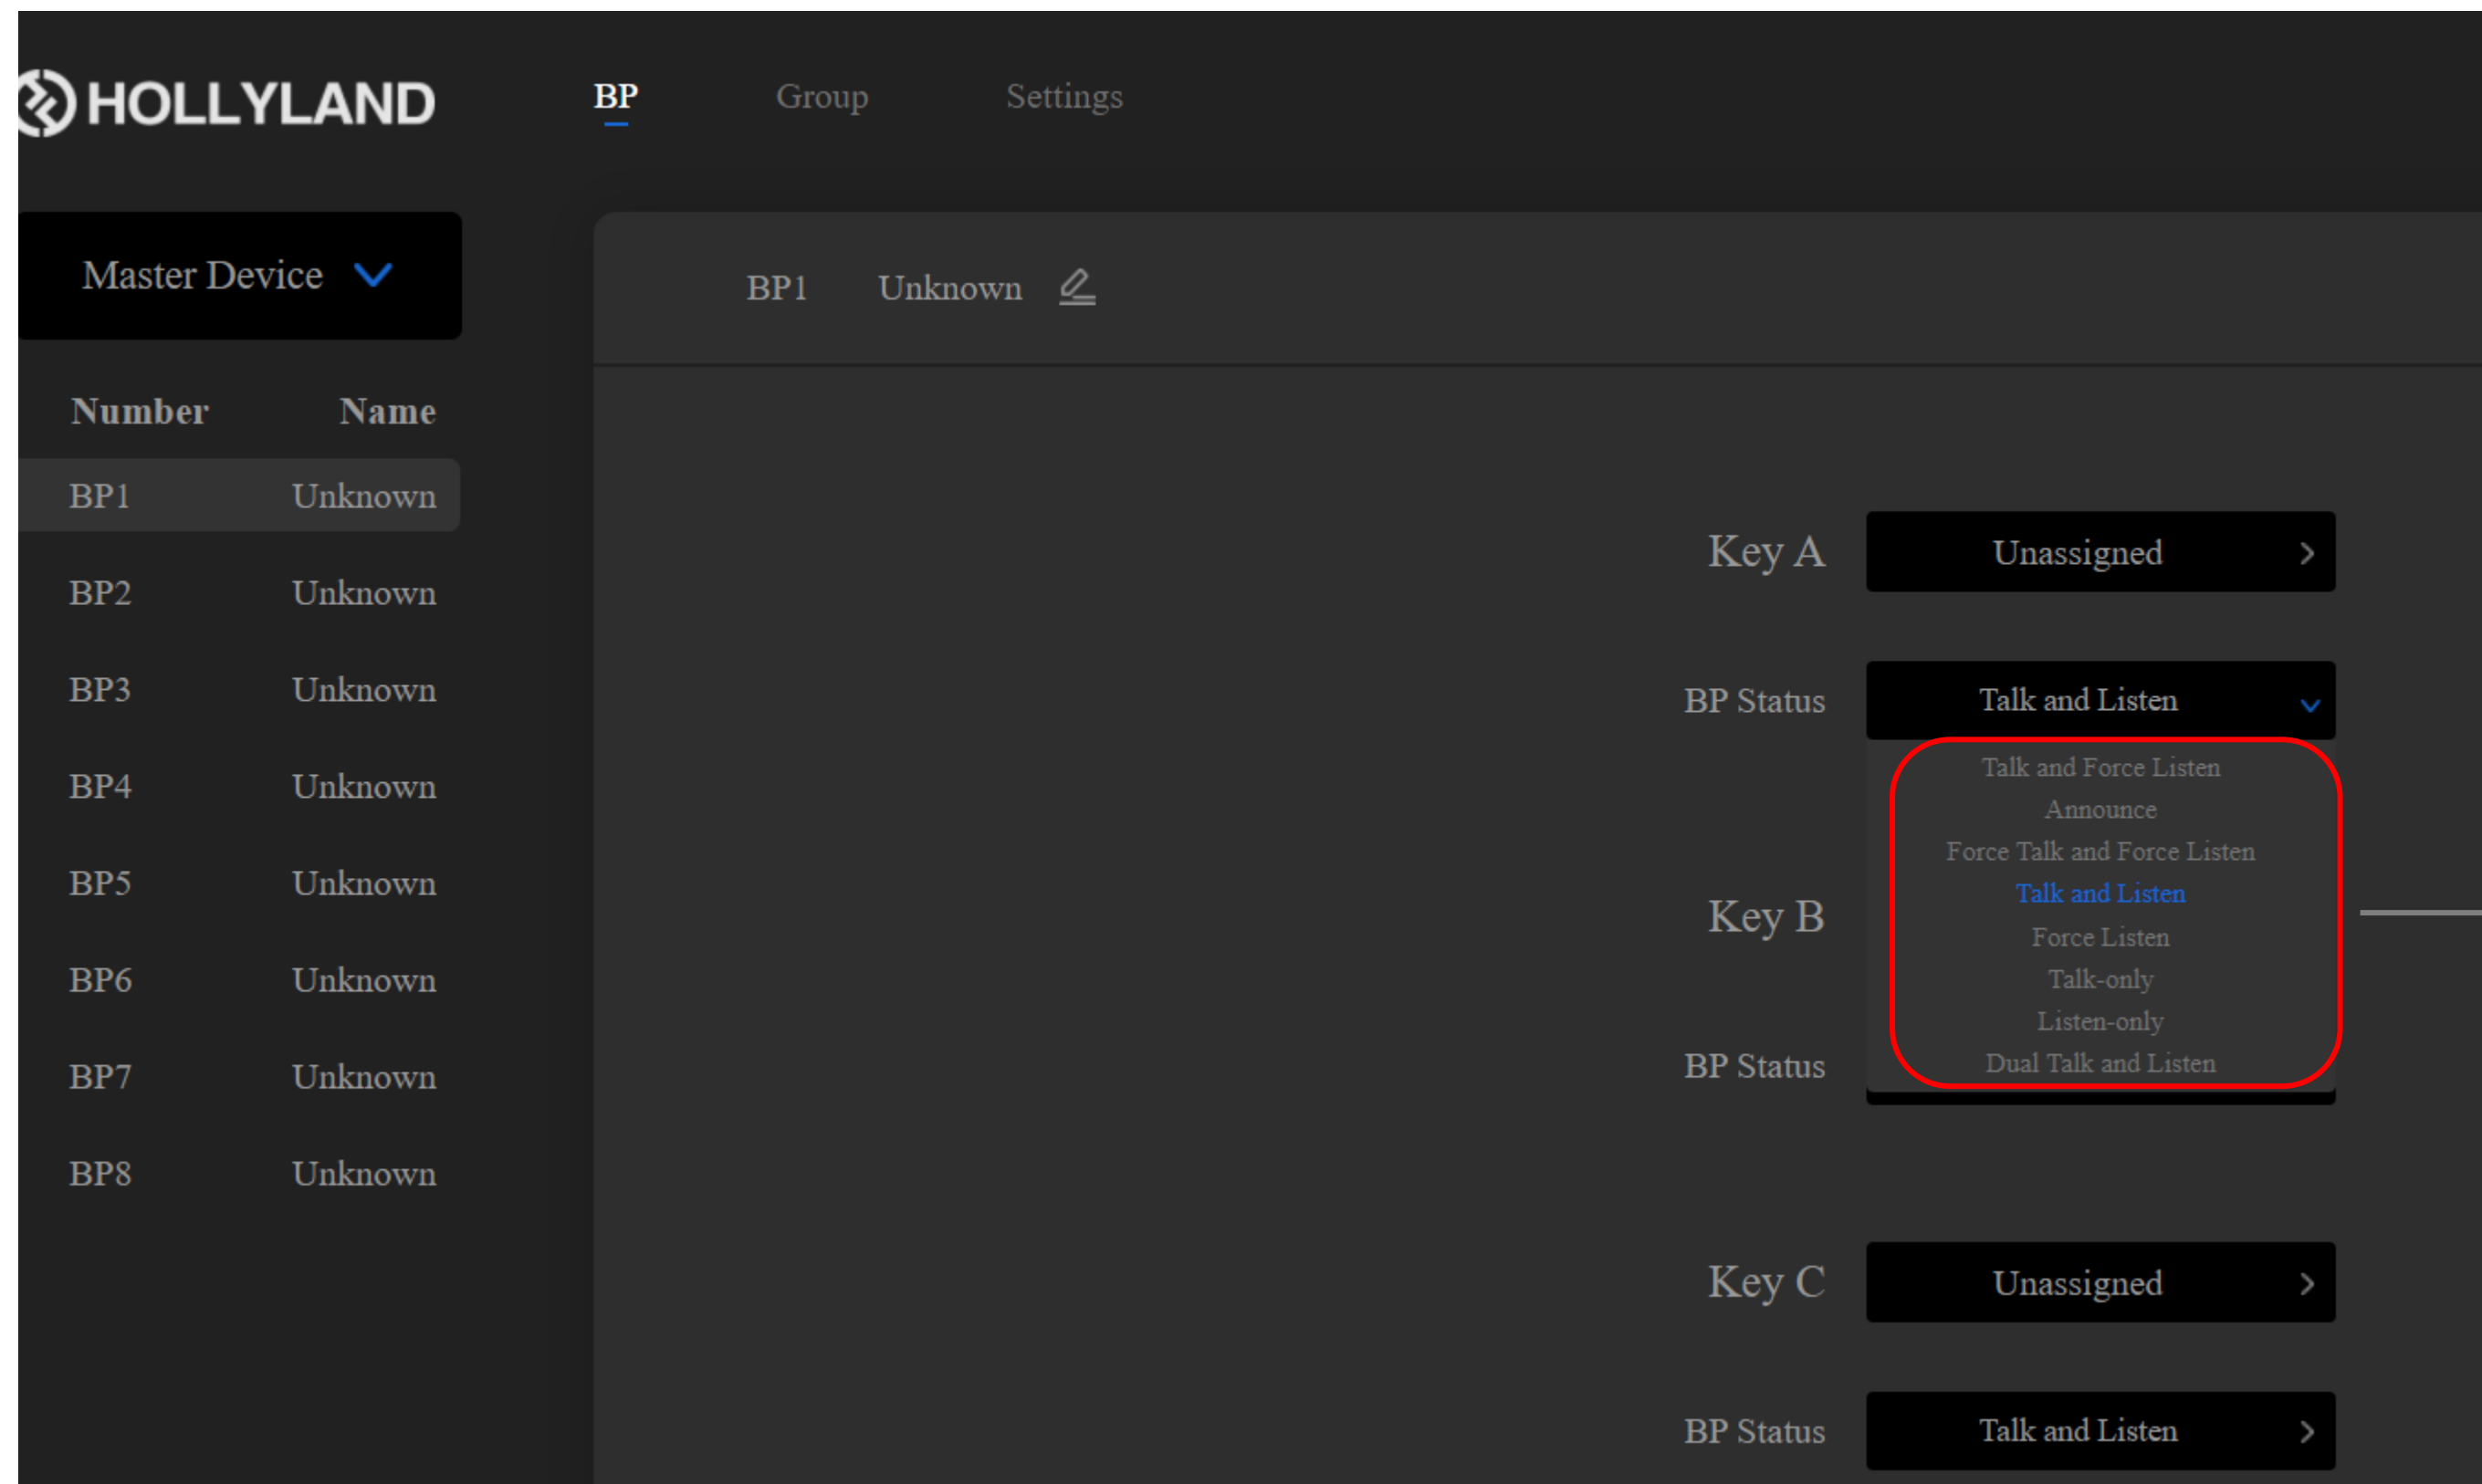

The screenshot shows the HOLLYLAND interface with a sidebar on the left containing a list of BP1 through BP8. The main area displays settings for BP1, including 'Key A', 'Key B', and 'Key C', each with a dropdown menu. The 'BP Status' dropdown for 'Key B' is highlighted with a red box, showing a list of 8 working modes: Talk and Force Listen, Announce, Force Talk and Force Listen, Talk and Listen, Force Listen, Talk-only, Listen-only, and Dual Talk and Listen.

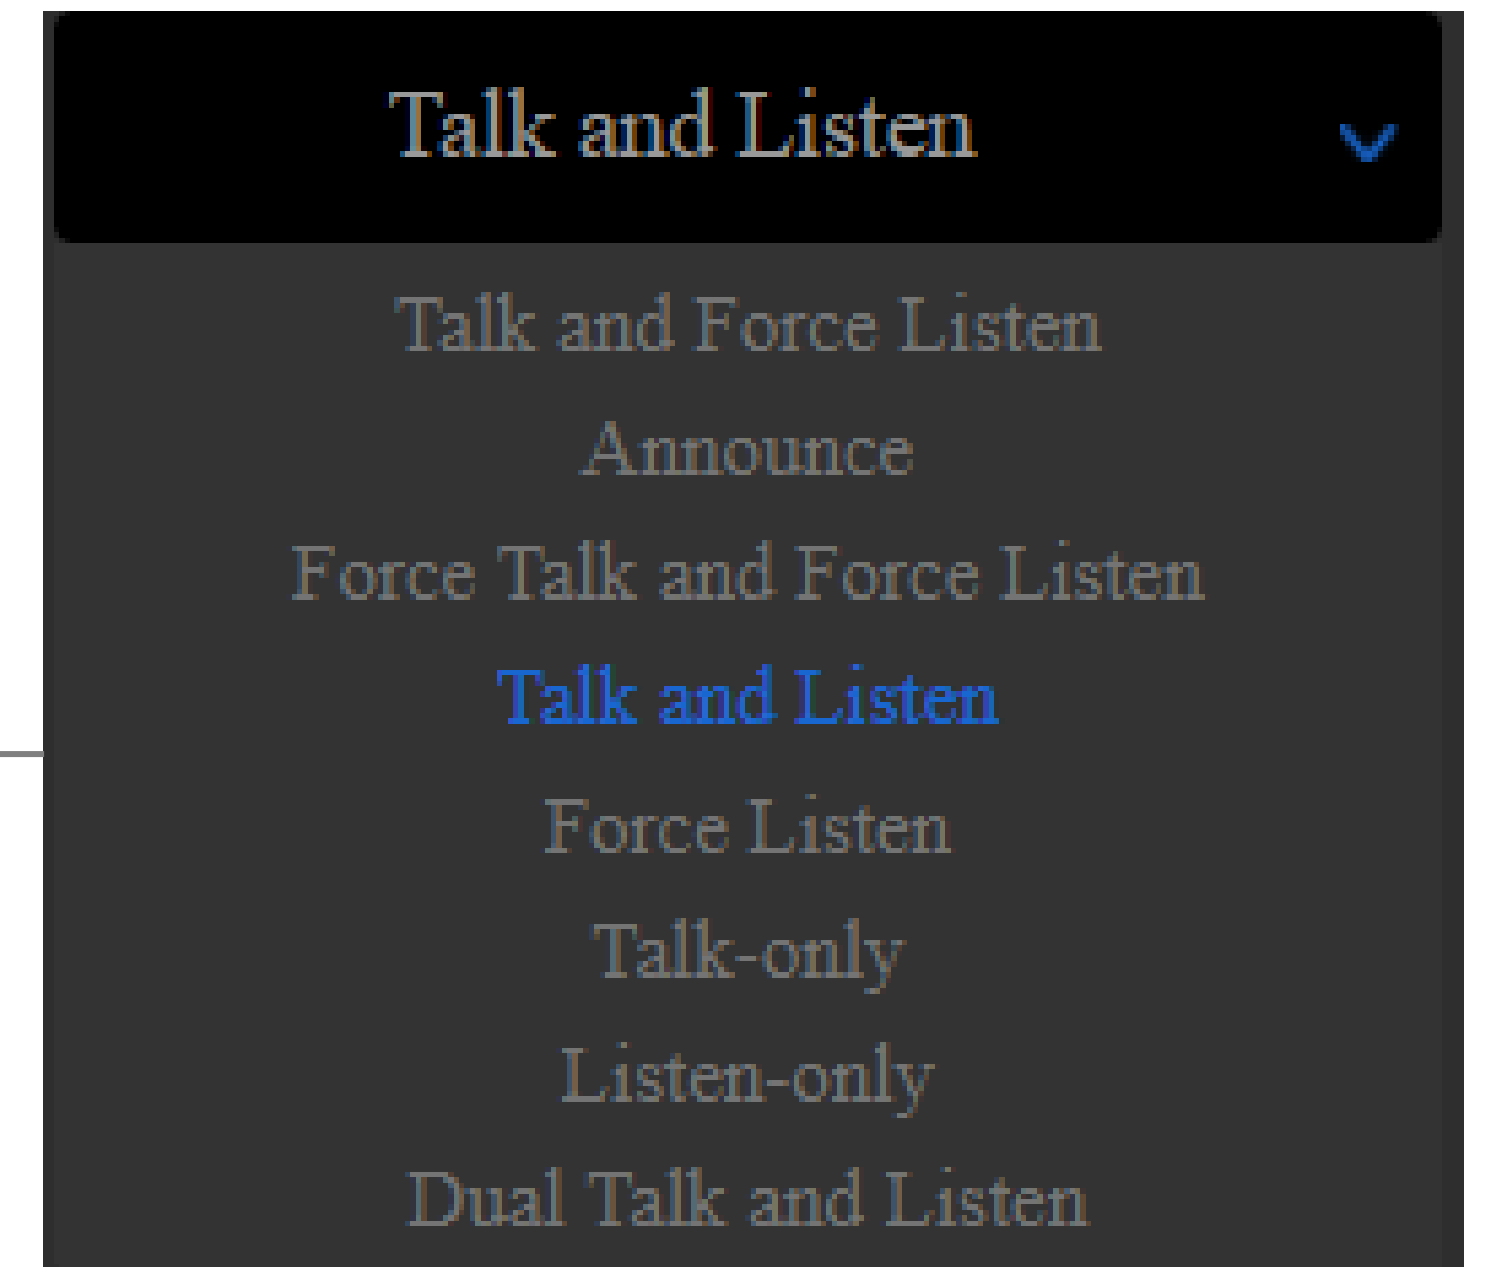

The close-up shows the 'Talk and Listen' dropdown menu with the following 8 working modes listed from top to bottom: Talk and Force Listen, Announce, Force Talk and Force Listen, Talk and Listen (highlighted in blue), Force Listen, Talk-only, Listen-only, and Dual Talk and Listen.



# 8 WORKING MODES

**NOTE:** You can use the group function as before if you do not like these 8 work modes, just need to enter the menu page of the base station, then select the reset options, after that you can double click the key button of belt pack to enter/exit the group.

**MODE1:** Talk Only

Work Status Indicator

No Light: Invalid  
Red: **Talk Only**

Click to switch work mode  
Long press to use the function of **PTT**



**MODE2:** Listen Only

Work Status Indicator

No Light: Invalid  
Green: **Listen Only**

Click to switch work mode  
Long press to listen only





# 8 WORKING MODES

## MODE3: Talk And Listen

Work Status Indicator

No Light: Invalid  
Orange: **Talk and Listen**

Click to switch work mode  
Long press to listen and talk



## MODE4: Dual Talk And Listen

Work Status Indicator

No Light: Invalid  
Green: **Listen Only**

Click to switch work mode  
Long press to Talk only



# 8 WORKING MODES

## MODE5: Force Listen

Work Status Indicator

Green: Listen Only

Click button invalid



## MODE6: Talk And Force Listen

Work Status Indicator

Green: Listen Only

Orange: Talk and Listen

Click to switch work mode  
Long press to Talk



# 8 WORKING MODES

**MODE7:** Force Talk And Force Listen

Work Status Indicator

Orange: **Talk and Listen**

**Click button invalid**



**MODE8:** Announce

Work Status Indicator

Green: **Listen Only**

Click invalid  
Long press to broadcast



**THANK YOU**

