


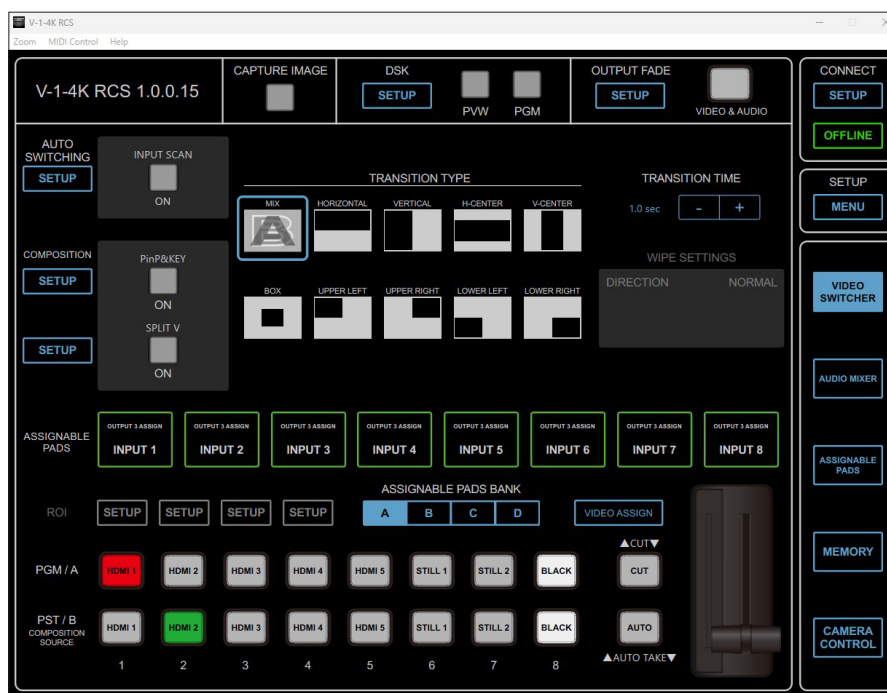

V-1-4K RCS

Connection Guide

V-1-4K RCS is a program for remote control of the V-1-4K.


- * The program runs on both Windows and Mac.
- * Make sure that the system program of the V-1-4K is updated to the latest version.

- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Roland is an either registered trademark or trademark of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

USB connection

This shows you how to use a USB cable to directly connect your computer to the V-1-4K.

1. Connect the computer to the USB STREAM port on the V-1-4K.

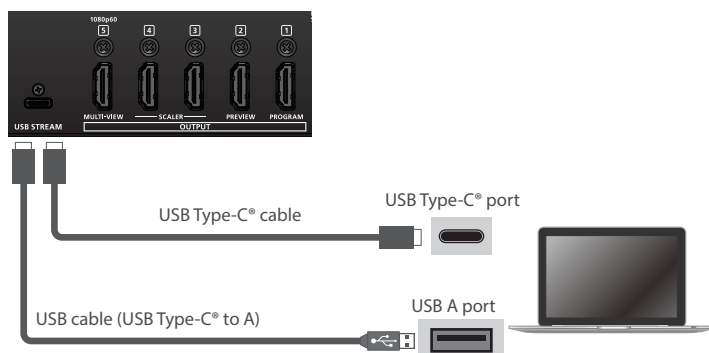


* If you want to use the USB MONITOR function, connect with a USB 3.0 compatible cable.

2. Power-on the V-1-4K.


Computer

1. Turn on the computer and launch V-1-4K RCS.

2. Click the CONNECT [SETUP] button.

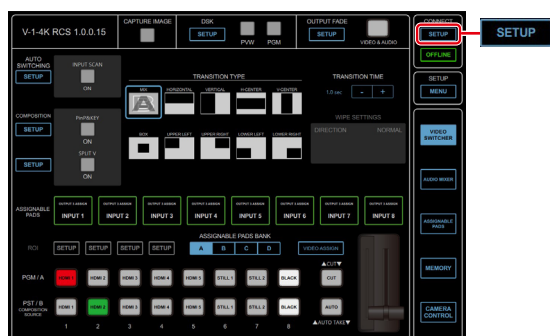

3. Select the "USB".

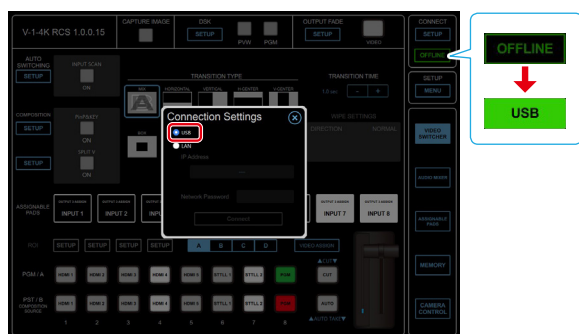


When the status icon changes to "USB", the device is connected.

Connecting via LAN cable

This shows you how to use a LAN cable to directly connect your computer to the V-1-4K.

V-1-4K

 1. Using a LAN cable, connect the LAN CONTROL port on the V-1-4K and the computer.



Communication standards

Port	CONTROL port (LAN)
Protocol	TCP
Port number	8023

2. Power-on the V-1-4K.
3. [MENU] button → “NETWORK” → “LAN SETUP” → set “CONFIGURE” to “MANUALLY”, and press the [VALUE] knob.

```
LAN SETUP ( 1 / 1 )
CONFIGURE MANUAL
IP ADDRESS 192.168. 0.254
SUBNET MASK 255.255.255. 0
DEFAULT GATEWAY 192.168. 0. 1
```


4. Press the [MENU] (EXIT) button to return to the previous screen.
5. Use the [VALUE] knob to select “NETWORK PASSWORD”, and press the [VALUE] knob.
The NETWORK PASSWORD screen appears.
6. Set a network password (eight characters).
Input the password that's set here when accessing the V-1-4K from V-1-4K RCS.
7. Use the [VALUE] knob to select “NETWORK STATUS”, and press the [VALUE] knob.
The NETWORK STATUS screen appears.
When “CONNECTED” is shown in “STATUS”, the V-1-4K connection settings are finished.
8. Press the [MENU] button several times to close the menu.

Computer


Making the network settings on the computer

Windows

1. Working in sequence, click the [ (Start)] button → “Settings” (gear icon).
2. Click “Network and Internet”.
3. Click “Change Adapter Options”.
4. Right-click the network connection you're using, then click “Properties”.
5. Select “Internet Protocol Version 4 (TCP/IPv4)” and click the [Properties] button.

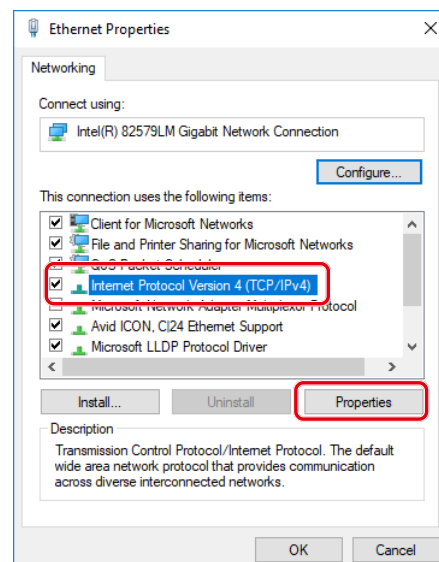


6. Select “Use the following IP address”, set the values for the IP address and subnet mask, then click the [OK] button.

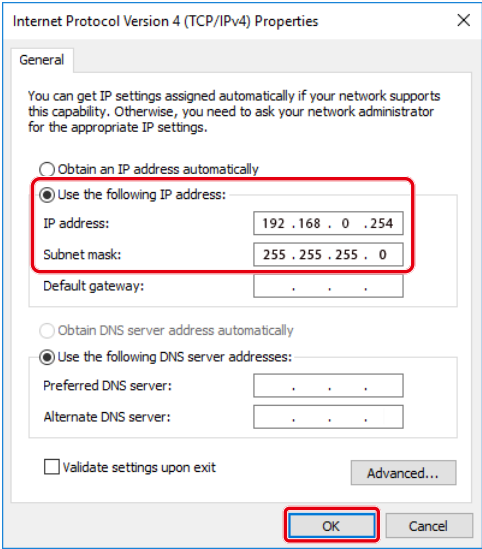

Setting item	Setting
IP address	Set a value that does not conflict with the IP address of any other device connected to the network. Set this in accordance with the connected network.
Subnet mask	This sets the subnet mask. Set this in accordance with the connected network.

Mac


1. Display the Apple menu → “System Preferences” → “Network”.
2. From the list on the left, select the network connection service you’re using.
3. Set the values for the parameters shown below, then click the [Apply] button.

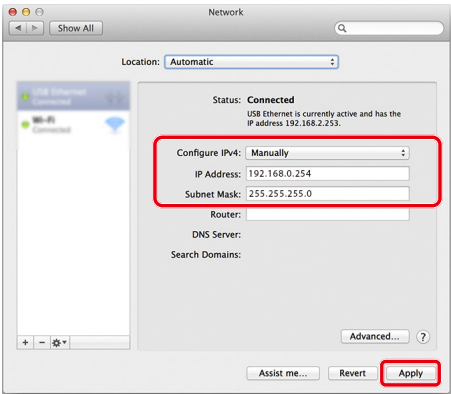


Setting item	Setting
Configure IPv4	Set to “Manually”.
IP Address	Set a value that does not conflict with the IP address of any other device connected to the network. Set this in accordance with the connected network.
Subnet Mask	This sets the subnet mask. Set this in accordance with the connected network.

Settings the V-1-4K RCS app


1. Launch the V-1-4K RCS app.
2. Click the CONNECT [SETUP] button.

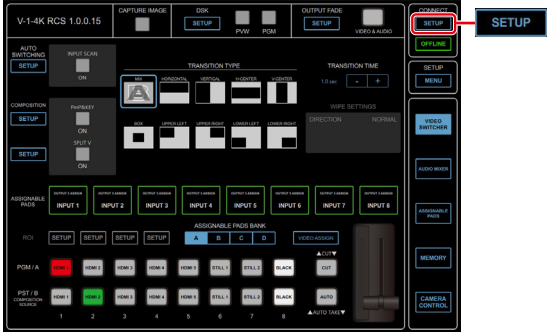

3. Select the “LAN”.

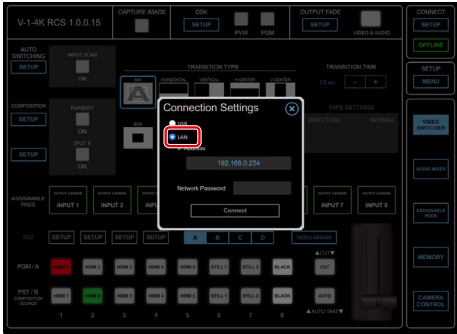

4. Input the “IP Address” and “Network Password” fields, and click the [Connect] button.

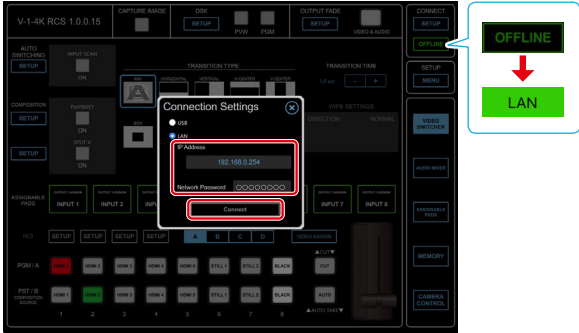


IP Address	Input the IP address of the V-1-4K. Check this by pressing the [MENU] button on the V-1-4K and selecting “NETWORK STATUS”.
Network Password	Input the network password (eight characters) set on the V-1-4K.

When the status icon changes to “LAN”, the device is connected.

Connecting via wireless LAN (Wi-Fi)

Connect the V-1-4K and your wireless LAN master device using a LAN cable, so that you can wirelessly connect to the iPad via the wireless LAN master device.

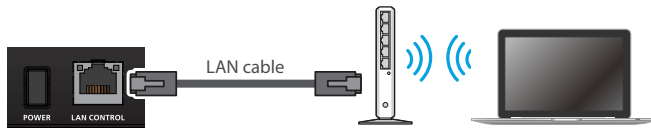

- * See the Owner's Manual of the wireless LAN master device for how to use that device.
- * The wireless LAN (Wi-Fi) connection speed and connectivity may be unstable in certain network environments.

V-1-4K

1. Use a LAN cable to connect the LAN port on your wireless LAN master device to the DIRECT STREAM port on the V-1-4K.
2. Turn on the wireless LAN master device and enable DHCP server functionality on the wireless LAN master device.
3. Power-on the V-1-4K.
4. [MENU] button → "NETWORK" → "LAN SETUP" → set "CONFIGURE" to "USING DHCP", and press the [VALUE] knob.

```
LAN SETUP ( 1 / 1 )
CONFIGURE USING DHCP
IP ADDRESS 192.168.11.2
SUBNET MASK 255.255.255.0
DEFAULT GATEWAY 192.168.11.1
```

The IP address, subnet mask, and default gateway are obtained automatically.

5. Press the [MENU] (EXIT) button to return to the previous screen.
6. Use the [VALUE] knob to select "NETWORK PASSWORD", and press the [VALUE] knob.

The NETWORK PASSWORD screen appears.

7. Set a network password (eight characters).
8. Use the [VALUE] knob to select "NETWORK STATUS", and press the [VALUE] knob.

The NETWORK STATUS screen appears.

When "CONNECTED" is shown in "STATUS", the V-1-4K connection settings are finished.


9. Press the [MENU] button several times to close the menu.

Computer


1. Connect your computer via Wi-Fi (wireless LAN).

For more information on how to make connections, refer to the respective documentation for the computer and the Wi-Fi router you're using.


2. Launch the V-1-4K RCS app.
3. Click the CONNECT [SETUP] button.

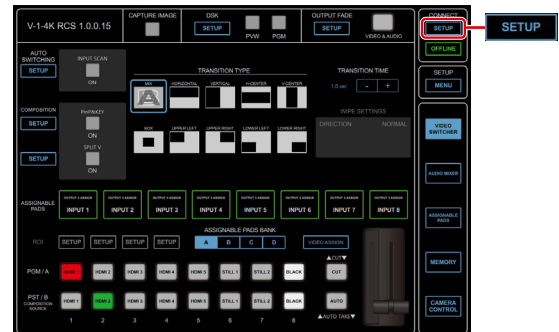

4. Select the "LAN".

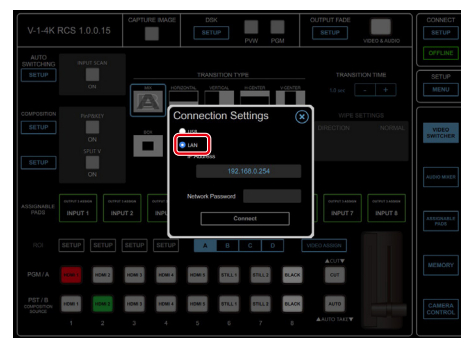

5. Input the "IP Address" and "Network Password" fields, and click the [Connect] button.

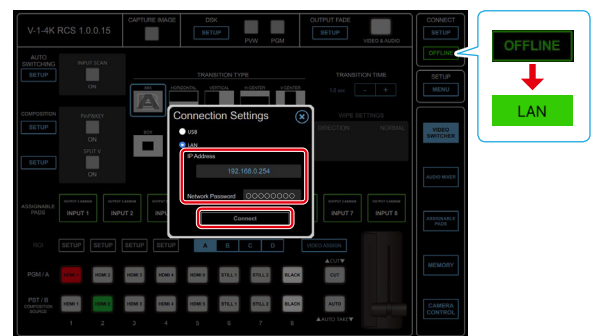

IP Address	Input the IP address of the V-1-4K. Check this by pressing the [MENU] button on the V-1-4K and selecting "NETWORK STATUS".
Network Password	Input the network password (eight characters) set on the V-1-4K.

When the status icon changes to "LAN", the device is connected.

Using a MIDI controller for operation

You can connect a MIDI controller to your computer, and use the MIDI controller to control V-1-4K RCS. You can use the MIDI controller to directly control HDMI input and music file volume that otherwise would be controlled via a menu.

Connecting a MIDI controller


1. Using a USB cable, connect your MIDI controller to the computer that is running V-1-4K RCS.



* Some MIDI controllers might require a dedicated USB-MIDI driver.

2. From the V-1-4K RCS menu bar, choose "MIDI Control" → "MIDI Control Settings".

The MIDI Control Settings window appears.

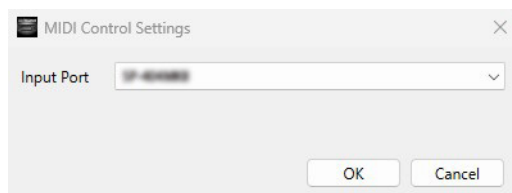

3. In the MIDI Control Settings window, in "INPUT PORT", choose the MIDI controller that's connected to the computer, and click the [OK] button.

This completes the connection between V-1-4K RCS and the MIDI controller.


Assigning MIDI controller operations to V-1-4K RCS (MIDI mapping)

Here's how to assign (map) the MIDI controller to the buttons, knobs, and faders that are shown in the Audio Mixer screen.

* V-1-4K RCS receives the following MIDI messages regardless of the MIDI controller's channel settings.


Audio Mixer screen

When you click the [Audio Mixer] button, the Audio Mixer screen appears.

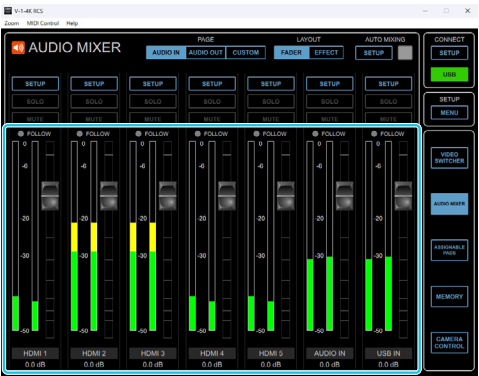

Buttons, Faders	MIDI messages
[SOLO] buttons	Control Change: 0-119 (0-63: OFF, 64-127: ON)
[MUTE] buttons	Note On (switch on/off each time the message is received)
Faders	Control Change: 0-119 (0-127)

1. Right-click the button, knob, or fader that you want to map, and from the popup menu choose "Learn MIDI Control".

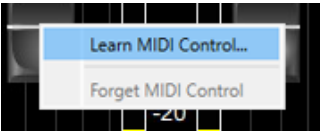

The message "Waiting for MIDI message" appears.


2. Operate a button or knob of your MIDI controller.

When the corresponding button or knob in V-1-4K RCS operates, mapping is complete.

MEMO

- **Viewing the MIDI mapping**

You can check the mapped MIDI messages by viewing them in the screen. From the menu bar, choose "MIDI Control" → "Show MIDI Control Mapping".

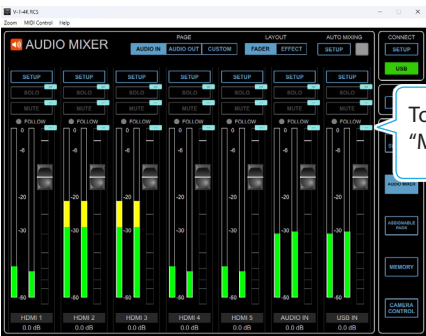

- **Deleting MIDI mapping**


To delete an individual MIDI mapping, right-click a mapped button or knob, and from the popup menu choose "Forget MIDI Control". To delete all MIDI mappings, from the menu bar choose "MIDI Control" → "Clear MIDI Control Mapping".

Using a game controller to control PTZ camera

You can connect a commercially available game controller to your computer, and use the game controller to control PTZ camera.

CAMERA CONTROL screen

When you click the [CAMERA CONTROL] button, the CAMERA CONTROL screen appears.

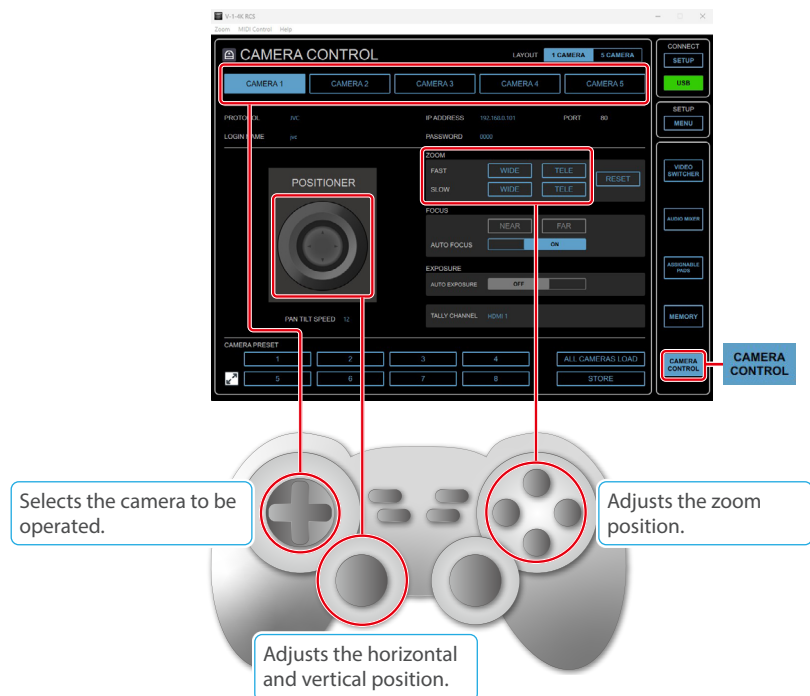

* The location of the buttons mapped to ZOOM differs depending on the manufacturer of the controller.