



Camp Snap Camera

Model:103

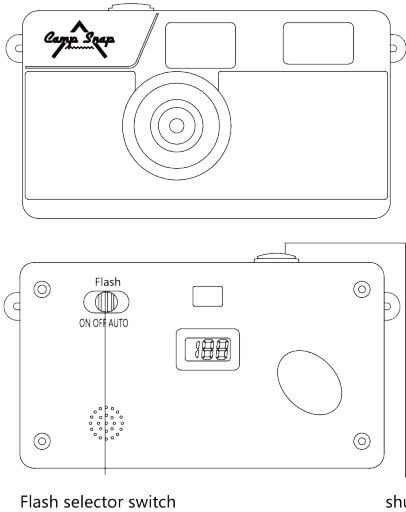

Before using the product, please read these instructions carefully and ensure that you keep them for future reference. Alternatively, you can find these instructions on our website at www.campsnapcamera.com/support.

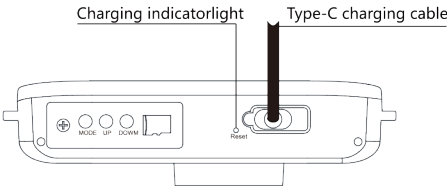

Instructions:

- 1、Shutter Button:
- a. Press and hold the shutter button for approximately 2 seconds to power on the camera. You will hear a beep. When the photo counter displays a number, you are ready to take photos.

b. Tap the shutter button to capture a photo. You will hear the shutter sound indicating that the photo has been taken.

c. To power off the camera, press and hold the shutter button for approximately 2 seconds. You will hear a single beep, and the photo counter will turn off.
- 2、Flash Selector Switch
- a. Left is on, center is off, right is automatic. Use the flash in low light settings.
- 3、Automatic Shutdown:
- a. The camera will automatically shut down after being idle for 10 minutes to conserve battery.
- 4、Charging The Camera:
- a. To charge the camera attach the USB-C cable to the camera and connect to a charging block or a computer’ s USB port.

b. The light will turn red when the camera is charging. At the same time, the display shows a flashing “Chg” .

c. When charging is complete, the light will turn green. At the same time, the display screen shows a static “Chg”
- 5、Taking a Photo:
- a. If the camera is off (photo counter is not displayed), power on the camera as described in step 1a.

b. Hold the camera still and tap the shutter button. Keep the camera steady until you hear the shutter sound.

c. For best results, stand at least 3 feet away from your subject and capture photos in good lighting conditions with the sun behind you.

d. Use the flash when taking photos in low light or indoors.
- 6、Photo View / Download:
- a. Use the data cable to connect the camera to a computer.

b. The display shows “Chg”

c. Open the file manager/finder on your computer and navigate to the "CAMPSNAP" folder.

d. Copy or view the files as desired.

e. Once the photos have been copied over, you can delete all the files from the camera.

f. After moving the files, you can change the metadata date field (see below).
- 7、Photo Storage Card:
- a. Your Camp Snap camera comes with a pre-installed 4GB TF card capable of holding approximately 2000 photos.

b. To remove the TF card, unscrew the Phillips screw at the bottom of your camera and carefully remove the plastic covering. Push the TF card in, and it will pop out.

c. To replace the TF card, carefully insert the card into the slot with the gold contacts facing towards the camera lens. It will click into place. Replace the plastic covering and the Phillips screw.
- 8、Set the metadata date on the photo:
- a. Please unscrew the phillips screw on the bottom of the camera and carefully remove the plastic , You will find that there are three buttons for setting the time.

b. The first time you use the camera, you need to set the correct time and date. Press and hold the MODE button to enter the date setting mode, adjust it to the correct year through the UP button and DOWN button, press the MODE button again to save the year, and then enter the month setting, and so on until the number of photos displayed is returned, indicating that the setting time is completed.

Note: When the “S 2” display appears, it means the sound level of the camera, 0 mute, 1 small, 2 medium, 3 high

NOTE:

The camera is an electronic product and is not waterproof. Do not expose the camera to liquids, keep dry.

Troubleshoot

No	Failure Fault Type	Solution
A	Will not power up	Make sure camera is fully charged
B	Will not take photos	1、 Download photos according to #5. 2、 Format or replace tf
C	Camera is frozen, will not shut down	Press the reset button using a needle or toothpick