 


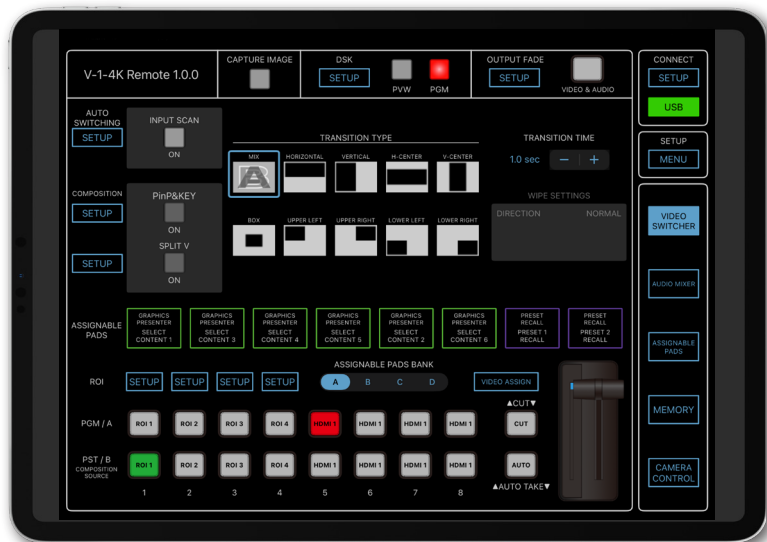

V-1-4K Remote

Connection Guide

V-1-4K Remote is a dedicated iPad app used exclusively for the Roland V-1-4K.

You can connect the V-1-4K to your iPad via USB or wireless LAN (Wi-Fi) and use the V-1-4K Remote app to remotely control the V-1-4K.

Connectivity

The V-1-4K Remote app and the V-1-4K disconnect when you switch to a different app or when the iPad enters sleep mode (auto-lock). The app and the unit automatically reconnect when you return to the V-1-4K Remote app, but it may take several seconds for the connection to be restored.


When you want to use V-1-4K Remote for a long time, we recommend that you turn off the auto-lock feature on the iPad.

Change this setting in Settings → Display & Brightness → Auto-Lock.

* Make sure that the system program of the V-1-4K is updated to the latest version.

Connecting via wireless LAN (Wi-Fi)

Connect the V-1-4K and your wireless LAN master device using a LAN cable, so that you can wirelessly connect to the iPad via the wireless LAN master device.

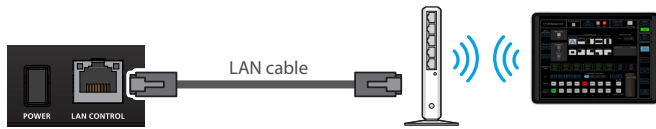

- * See the Owner's Manual of the wireless LAN master device for how to use that device.
- * The wireless LAN (Wi-Fi) connection speed and connectivity may be unstable in certain network environments.

V-1-4K

1. Use a LAN cable to connect the LAN port on your wireless LAN master device to the DIRECT STREAM port on the V-1-4K.

* Do not connect to the internet port or WAN port.

2. Turn on the wireless LAN master device and enable DHCP server functionality on the wireless LAN master device.
3. Power-on the V-1-4K.
4. [MENU] button "NETWORK" "LAN SETUP" set "CONFIGURE" to "USING DHCP", and press the [VALUE] knob.

```
LAN SETUP ( 1 / 1 )
CONFIGURE USING DHCP
IP ADDRESS 192.168. 11. 2
SUBNET MASK 255.255.255. 0
DEFAULT GATEWAY 192.168. 11. 1
```

The IP address, subnet mask, and default gateway are obtained automatically.

5. Press the [MENU] (EXIT) button to return to the previous screen.
6. Use the [VALUE] knob to select "NETWORK PASSWORD", and press the [VALUE] knob.

The NETWORK PASSWORD screen appears.

7. Set a network password (eight characters).

Input the password that's set here when accessing the V-1-4K from V-1-4K Remote.

8. Use the [VALUE] knob to select "NETWORK STATUS", and press the [VALUE] knob.

The NETWORK STATUS screen appears.

When "CONNECTED" is shown in "STATUS", the V-1-4K connection settings are finished.


9. Press the [MENU] button several times to close the menu.

iPad

1. Connect your iPad via Wi-Fi (wireless LAN).

- 1 Turn Wi-Fi on in the Settings menu.


- 2 From the list of networks, tap the wireless LAN master device to which the V-1-4K is connected.

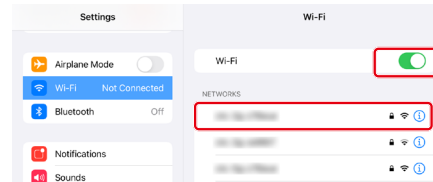


- 3 Enter the password listed on the wireless LAN master device, and tap "Connect".

2. Launch the V-1-4K Remote app.

3. Tap the Connect [SETUP] button.

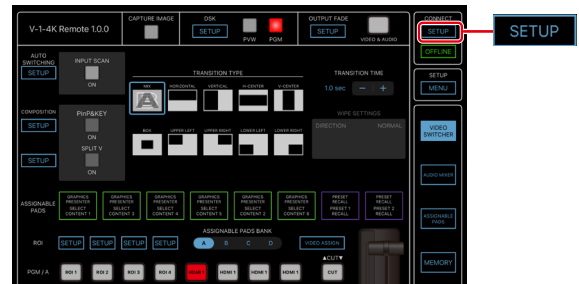

4. Tap the [LAN] button.

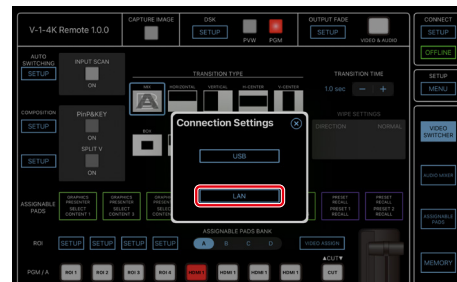

5. Input the "IP Address" and "Network Password" fields, and tap the [Connect] button.



IP Address	Input the IP address of the V-1-4K. Check this by pressing the [MENU] button on the V-1-4K and selecting "Network" "Network Information".
Network Password	Input the network password (eight characters) set on the V-1-4K.

When the status icon changes to "LAN", the device is connected.