

## En SnapBridge™ Connection Guide (Android™)

Read this guide for information on using SnapBridge to pair your camera with your smart device.

### Get SnapBridge Now!

Use SnapBridge to control the camera remotely from your smart device and download pictures from the camera.

#### Download It Free Today!

SnapBridge is available free-of-charge from Google Play™ and from the following website:

<http://snapbridge.nikon.com>



Visit the Nikon website for the latest SnapBridge news.

#### 🔗 Online Help

For information on using SnapBridge, select the SnapBridge **Other** tab and tap **Info/settings > Instructions** to view online help.

### Pairing

To use SnapBridge, you must pair the camera with your smart device (the camera illustrations that follow show the D500). Note that the actual camera and smart device displays may differ from those shown below.

#### ✔ Before Pairing

Before pairing, confirm that there is space available on the camera memory card. To prevent unexpected interruptions, you should also check that the batteries in the camera and smart device are fully charged.

- 1 Camera:** Turn the camera on. Wait for the camera to display the connection wizard and then press .

#### Connection wizard



Use SnapBridge to send photos to your smart device and share them online.

 
To skip this screen and set SnapBridge later from the SETUP MENU, press MENU.

Skip

Set

**2 Camera:** Ready the camera for pairing. The procedure varies depending on whether the camera supports NFC:

• **If the camera displays an NFC dialog,** touch the NFC antenna on the smart device to the camera  logo (N-Mark), then **wait for SnapBridge to launch and proceed to Step 5.** To connect without using NFC, press the camera  button and then proceed to Step 3 when prompted to launch SnapBridge as shown in the dialog below at right.

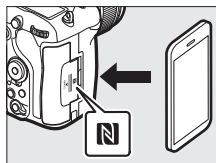

• **If the camera prompts you to launch SnapBridge,** proceed to Step 3.



## NFC

For information on enabling NFC and on the location of your smart device's NFC antenna, refer to the documentation provided with your smart device. Be sure to enable NFC before connecting.

## Restarting Pairing at a Later Date

 
If you didn't finish pairing the first time you turned your camera on, you can start pairing by selecting **Connect to smart device** in the setup menu (digital SLR cameras) or network menu (compact digital cameras) and touching the smart device to the camera (if you are using NFC) or displaying the SnapBridge launch prompt (if you are not using NFC).




- 3 **Smart device:** Launch SnapBridge on your smart device and confirm that the camera name (SSID) is displayed.

**✔ Camera Name Not Displayed**

The camera name may not be listed if SnapBridge is started before the camera displays the launch prompt. Confirm that the launch prompt is displayed and then quit and restart SnapBridge.

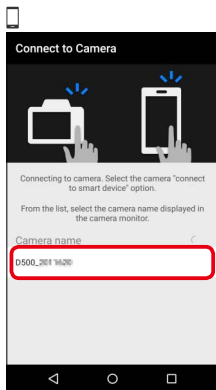


 - 4 **Smart device:** Tap the camera name.

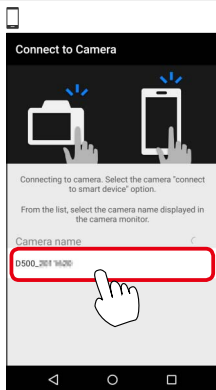



## 5 **Camera/smart device:** Check the authentication code.

 - **Camera:** The authentication code is displayed in the camera monitor.


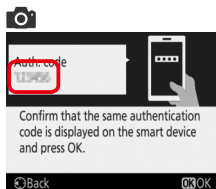


 
- **Smart device:** Check that the authentication code shown in SnapBridge is the same as that displayed by the camera.

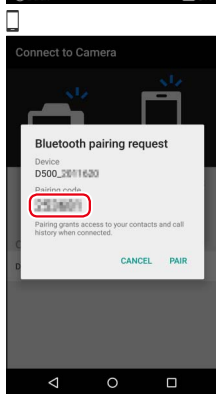

- 6**  **This step involves both the camera and the smart device. Have them ready side-by-side before proceeding.**

  **Camera/smart device:** Press **OK** on the camera and tap **PAIR** in SnapBridge (the **PAIR** button may be labelled differently depending on what version of the operating system you are using).

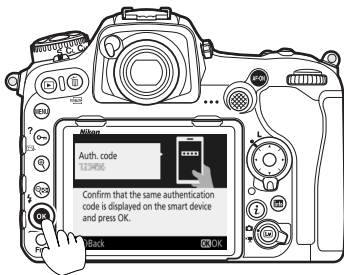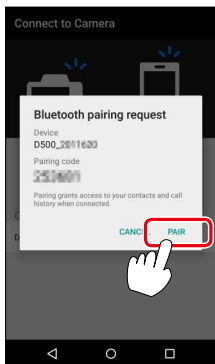

 If you wait too long between pressing the button on the camera and tapping the button in SnapBridge, pairing will fail and an error will be displayed.

- **Camera:** Press **OK** and return to Step 1.
- **Smart device:** Tap **OK** and return to Step 3.

**7** **Camera/smart device:** Follow the on-screen instructions to complete pairing.



- **Camera:** Press **OK**.
- **Smart device:** Follow the on-screen instructions to sign up for a Nikon ID.



## **Trouble Downloading?**

  If download is slow or you experience other problems copying pictures from the camera to your smart device, try ending and restarting pairing.



- 1 Smart device:** Open the **Connect** tab, select **Connection options**, tap **End pairing**, and tap **Yes** when prompted.

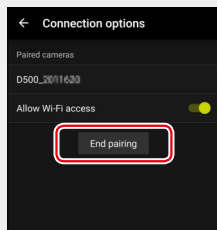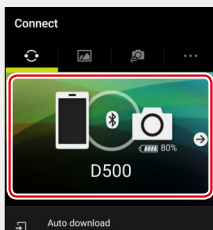

- 2 Camera:** Display the SnapBridge launch prompt by selecting **Connect to smart device** in the setup menu (digital SLR cameras) or network menu (compact digital cameras) and following the on-screen instructions.



  - 3 Smart device:** Tap **Connection options** again. The camera icon in the SnapBridge **Connect** tab will be replaced by a dotted outline to show that the camera is no longer paired with your device; tap the camera name in the **Select camera** list and follow the on-screen instructions to re-establish pairing.

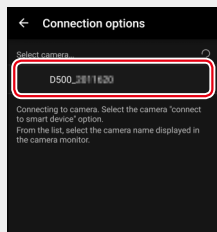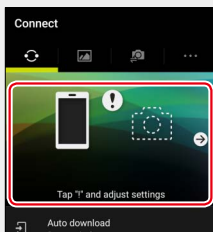

## **Standby Timer/Auto Off**

Until you are familiar with SnapBridge and your camera, we recommend choosing a longer standby timer (SLR cameras) or auto off delay (compact digital cameras).

## Trademark Information

Android is a trademark of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.