

Fujinon EPD-41A-D02 Focus Demand

Turn off the camera before installing the focus demand



There are a series of function select switches ("dip switches") that allow you to assign functions to the two AUX buttons. Please make sure the let power is of the before operating these switches.



Switches 1 & 2 are assigned to AUX1

Switch 2: On a Swan functions of the AUY1 and AUY2 switche

Switches 3, 4, & 5 are assigned to AUX2; Switches 8, 7, & 8 are spare

Switch 4: On = Optical Stabilizer

Switch 5: On = Focus Preset.

Note: If more than two of these switches are on, the function with th

smallest number has priority.

Switch 5 handles Focus Pre-

Setting Focus Preset Mode: When AUX2 is pressed and held, the setting

Storing Focus Preset Position: Pressing AUX2 at the specified focus

position stores it as a focus preset position, the setting mode is terminated, and the indicator light turns off.

Starting Focus Preset Function: When AUX2 is pressed, the focus moves to the stored focus preset position. The indicator light will turn on.

Focus Preset Operation is canceled. The focus will move to the position set by rotating the control knob, and the indicator light will turn off.

Please note: when the focus control knob is used while the Focus Preset function is on, the focus moves using the preset position as a reference point. It may not be possible to operate the focus control knob in the range from the MOD end to the Infinity end, depending on the position of the reference point.

The operation of the scen and facus simultaneous pre-est function can only be performed when both tern and facus position. Demandably the proceded with digital central What you perform the command facus simultaneous prest