

# 907X CONTROL GRIP




**HASSELBLAD**

## 907X CONTROL GRIP

Available as an optional accessory, the control grip makes the 907X camera even easier and more convenient to use by adding dedicated buttons, scroll wheels and a joystick. For additional information about the 907X 50C camera, please refer to the separate full user guide.



### PARTS AND CONTROLS

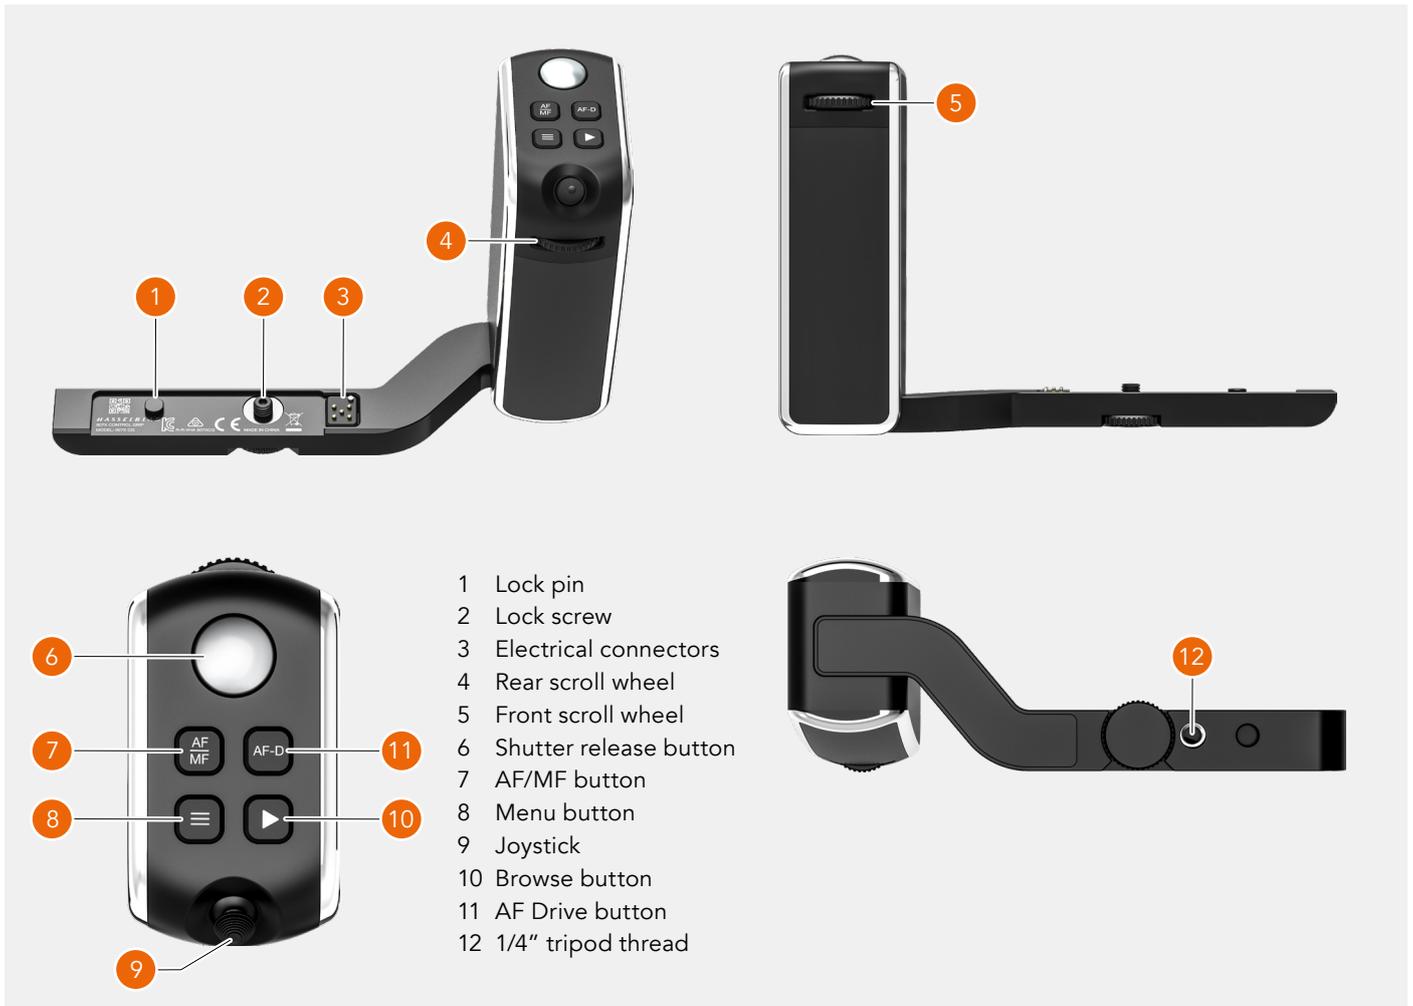

Functions of buttons and controls are described on page 96.

## ATTACHING THE CONTROL GRIP

Place the camera upside-down with the lens mount facing you.

- 1 Align the lock pin (A) and lock screw (B) as shown below.
- 2 Make sure you insert the lock screw in the correct hole.
- 3 Tighten the lock screw securely (C) by hand.



## USING THE CONTROL GRIP

### Buttons and controls

#### 1 Front scroll wheel

The front and Rear Scroll Wheels are used to make changes in exposure settings, navigate the Touch Display Menu as well as acting as browse controls. See bottom right table.

#### 2 Shutter release button

This button has two positions. Press half way (or soft) to activate the camera, auto focus function and exposure meter. Press all the way down (or more firm) to release the shutter. The chosen exposure procedure and the self timer are also activated with this button.

#### 3 AF/MF button

The AF/MF button toggles between Autofocus and Manual Focus mode.

#### 4 Menu button

This button opens the Main Menu. If the Main Menu is already active, the Control Screen is shown.

#### 5 Joystick

Used for different tasks depending on mode. See more on page 97.

#### 6 Rear scroll wheel

The scroll wheel is used to make changes in exposure settings, to navigate the Camera menus as well as acting as browse control. See bottom right table.

#### 7 Browse button

Activates the display and shows the last image. The user can review images, browse and zoom. Preview images and zoom in to view close-ups of previews for focus checking. Zoom out to view several at once and finally to view and select folders and media.

#### 8 AF Drive button


The AF Drive button (AF-D) starts the Autofocus process. Press to start Autofocus and release to stop the Autofocus function.

#### Note!

You can set the camera to Stand-by mode to save power by pressing the Menu button (4) and the Browse button (7) at the same time.

#### Note!

The four top buttons (3, 4, 7 and 8) can be reprogrammed to a different function.

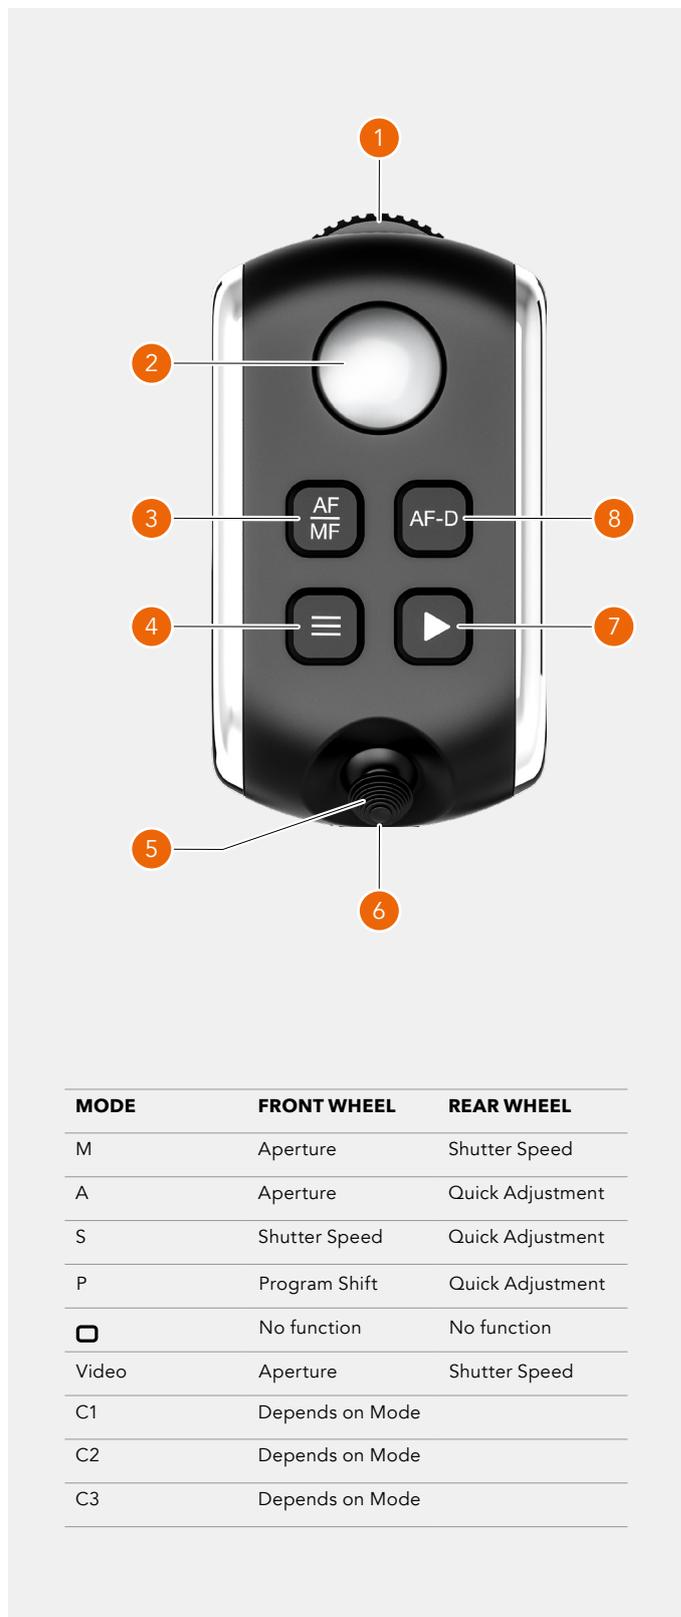

MODE	FRONT WHEEL	REAR WHEEL
M	Aperture	Shutter Speed
A	Aperture	Quick Adjustment
S	Shutter Speed	Quick Adjustment
P	Program Shift	Quick Adjustment
☐	No function	No function
Video	Aperture	Shutter Speed
C1	Depends on Mode	
C2	Depends on Mode	
C3	Depends on Mode	

#### Note!

With the camera in a low position it may be easiest to use the thumb for the all buttons.

## JOYSTICK

The joystick can be moved in 4 directions as shown in the illustration. It also can be clicked on as a button. Depending on camera mode, different things will happen.

### 1 Live View mode

In AF mode, moving the joystick will move the AF area to a new position. In MF mode, nothing will happen. Pressing the joystick will zoom in to 50% or 100% depending on setting.

### 2 Menu mode

By moving the joystick up or down, different menu items are selected. Click the joystick to enter the selected item.

### 3 Control screen


Moving the joystick in any direction will select one of the items that can be changed. Click the joystick to enter the setting for selected item.




### Browse mode

Moving the joystick sideways will change preview image. Up or down movement will cycle through the available overlays. Pressing the joystick will zoom in steps until 100% is reached. When in 100% zoom-in, pressing the joystick will zoom out again.


## Menu navigation

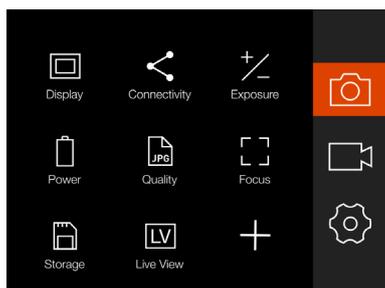


Move the joystick to select Camera settings and click to enter.

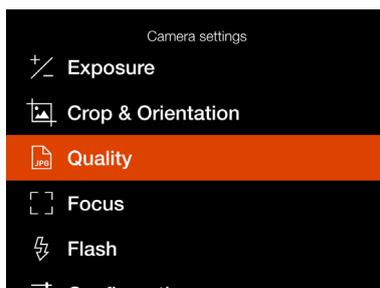

Move the joystick down to highlight Quality. Move the joystick to the right to enter.

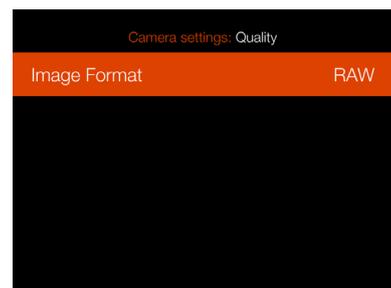


Move the joystick right to enter the setting.

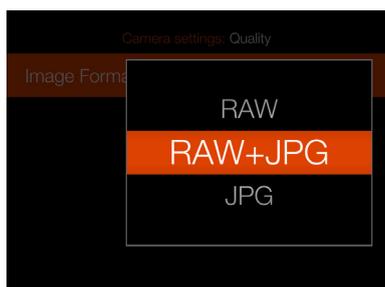

Move the joystick up/down and click to select a new setting.


## Control screen setting

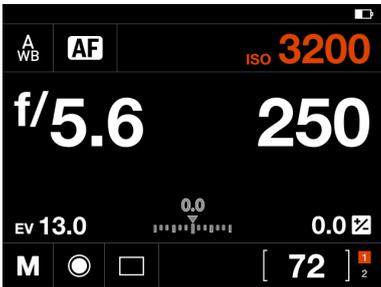

Move the joystick to highlight ISO.




Click the joystick and move it up or down to select a new value.

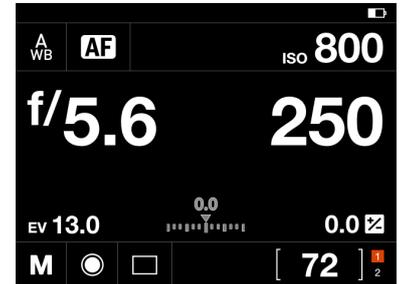

Press the joystick to accept the new value.


## Move AF area

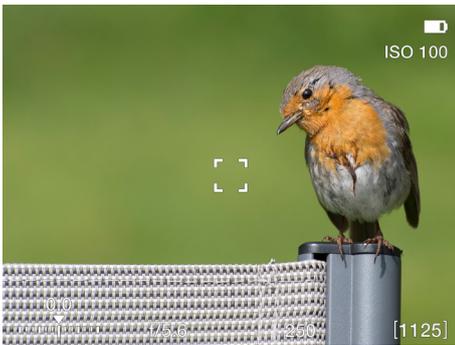

AF area is centered.



Move the joystick two times to the right and two times up to move the AF area in this example.

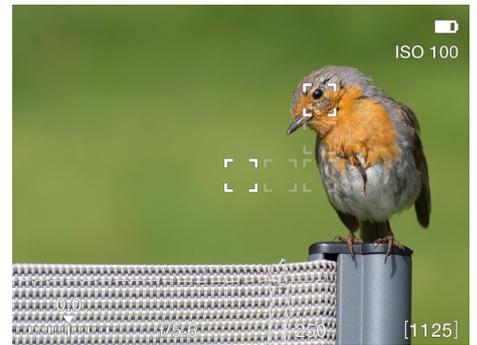

## Browse images



Sideways movement changes preview image.



Up or down movement changes overlay.



## INFORMATION ABOUT THE 907X CONTROL GRIP USER GUIDE

### GENERAL

The information in this user guide is intended for informational use only. The information and the 3D Product Images and Photos, are subject to change without notice, and should not be construed as a commitment by Victor Hasselblad AB.

### UPDATES

Updates to this user guide will be issued regularly. Please check [www.hasselblad.com](http://www.hasselblad.com) for the latest version. If you are a registered user, you will get mail notifications when a new version is available.

### 3D PRODUCT IMAGES

The Product Images in this user guide were not taken with a Hasselblad camera. They are produced in 3D as visualization. They are used for illustrative purposes only and are not intended to represent the image quality produced by Hasselblad cameras.

### COPYRIGHT

All text in this user guide copyright © Victor Hasselblad AB. All images in this User Guide, not credited to a specific photographer, copyright © Victor Hasselblad AB. The text, or parts of the texts, in this manual cannot be reprinted or reused without the written express permission of Victor Hasselblad AB.

The images in this User Guide cannot be reprinted or reused without the written express permission of the photographers who owns the copyright.

Victor Hasselblad AB assumes no responsibility or liability for any errors or inaccuracies that may appear in this User Guide. Victor Hasselblad AB assumes no responsibility or liability for loss or damage incurred during, or as a result of using Hasselblad software or products.

Copyright © 2020 Victor Hasselblad AB. All rights reserved.