



PYXIS Pro Handle and PYXIS Pro Grip


Blackmagic PYXIS Pro Handle and Blackmagic PYXIS Pro Grip are optional accessories for your Blackmagic PYXIS camera. They are ideal if you want to use your camera for ENG or documentary work, or if you are shooting in a fast paced environment.

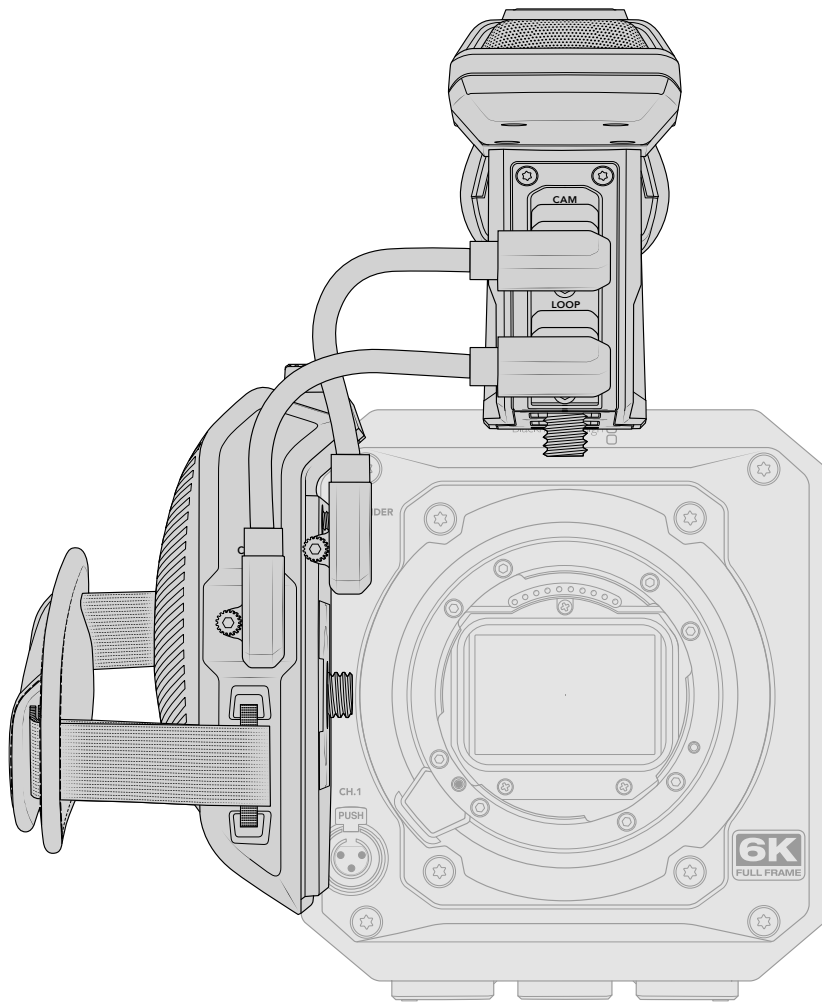

Blackmagic PYXIS Pro Handle features a high quality HD OLED viewfinder and a stereo microphone. The top panel includes a mappable zoom rocker switch, record button and two mappable function buttons.

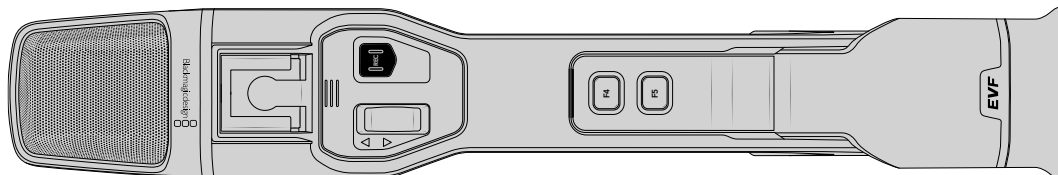

Blackmagic PYXIS Pro handle

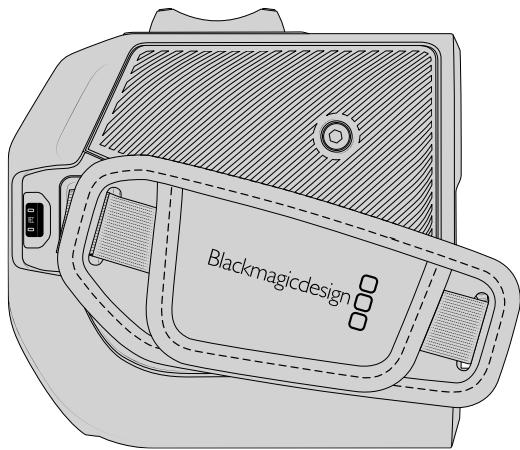

Blackmagic PYXIS Pro Grip


Blackmagic PYXIS Pro Grip attaches to your camera's side panel and includes a record button and mappable rocker switch, plus a secure hand grip.

PYXIS Pro Handle and PYXIS Pro Grip are connected and powered via your camera's front USB-C port. You can use each unit individually or both units together, more information is provided later in this section.


Attaching Blackmagic PYXIS Pro Handle

Blackmagic PYXIS Pro Handle attaches to your camera's top panel.

To attach Blackmagic PYXIS Pro Handle:

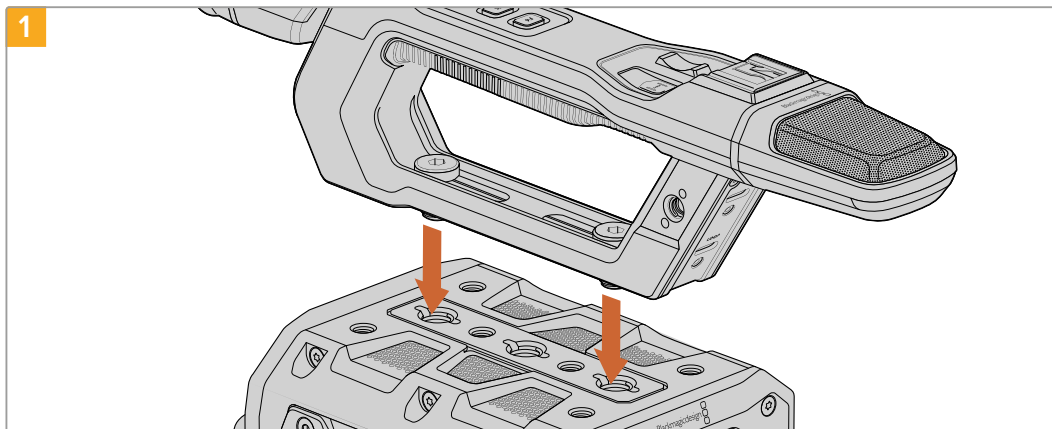

Align Blackmagic PYXIS Pro Handle with the top panel of your camera with the handle bolts aligned with the front and rear 3/8" mounting points.

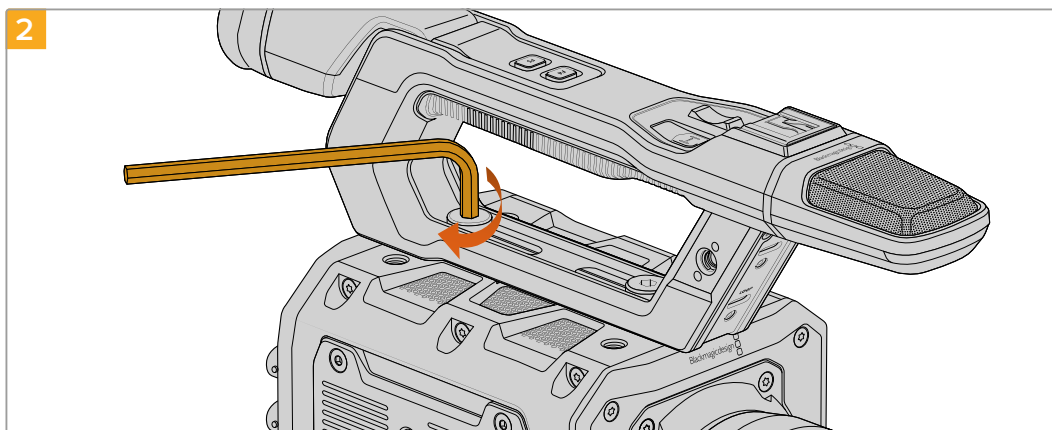


Using a Hex key, tighten both Hex bolts to the top of the camera.


Attaching Blackmagic PYXIS Pro Grip

Blackmagic PYXIS Pro Grip attaches to your camera's right side panel.


To attach Blackmagic PYXIS Pro Grip:

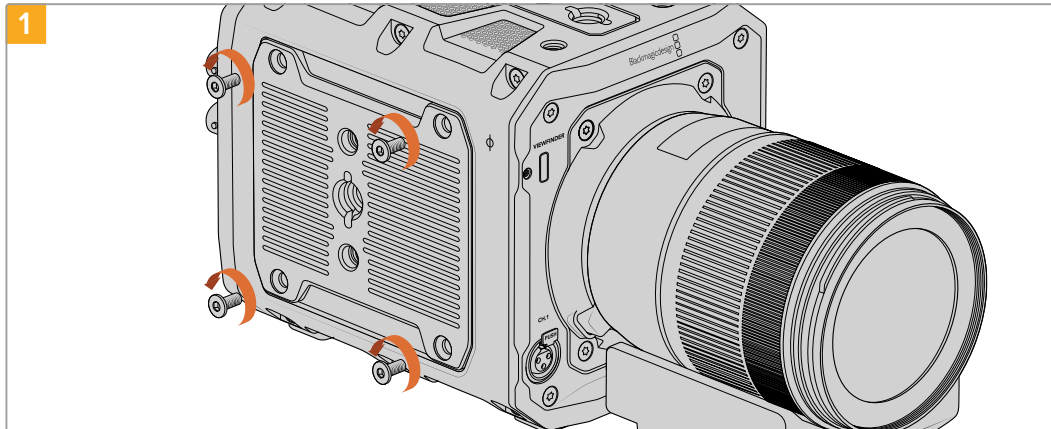

Remove your camera's side plate. Using a 3mm Hex Key, remove the four side plate screws and remove the side plate from your camera's body.

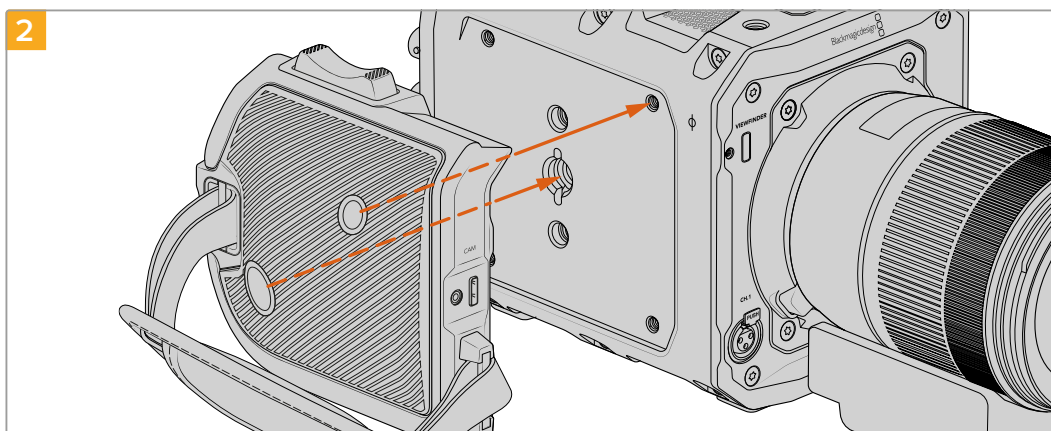


Align PYXIS Pro Grip with the camera body. The larger Hex bolt on PYXIS Pro Grip aligns with the central 3/8" mounting point on the side of your camera. The smaller Hex bolt on PYXIS Pro Grip aligns with the top right M4 mounting point.

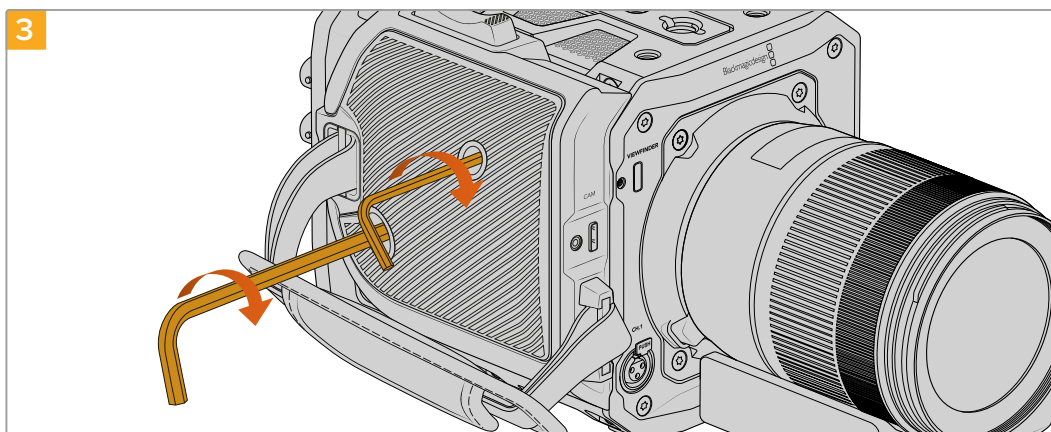


Tighten both Hex bolts to secure PYXIS Pro Grip to your camera using a 3/16" Hex key for the larger bolt and 3mm Hex key for the smaller bolt.

Connecting to your Camera


Blackmagic PYXIS Pro Handle and PYXIS Pro Grip connect to your camera via the front USB-C port. You can connect either unit to your camera individually by connecting a USB-C cable from the unit's 'cam' port to the front USB-C port on your Blackmagic PYXIS.

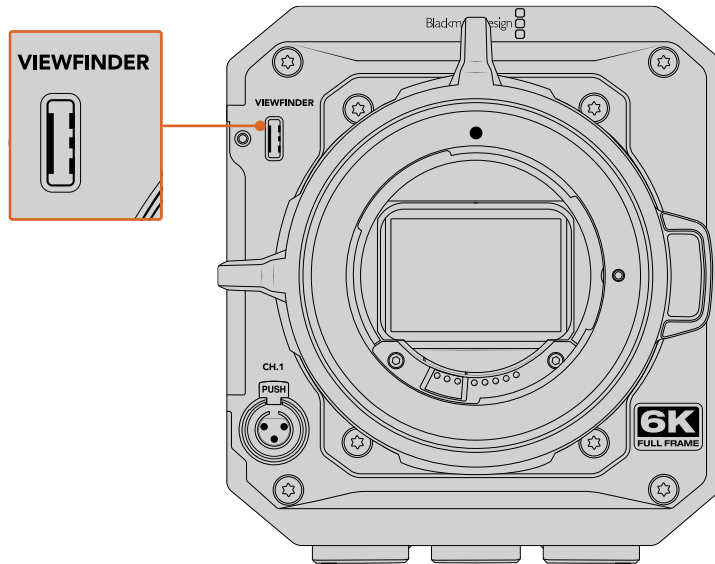


If you are using both PYXIS Pro Handle and PYXIS Pro Grip, you can daisy chain them together so both units can be controlled from your camera's front USB-C port.

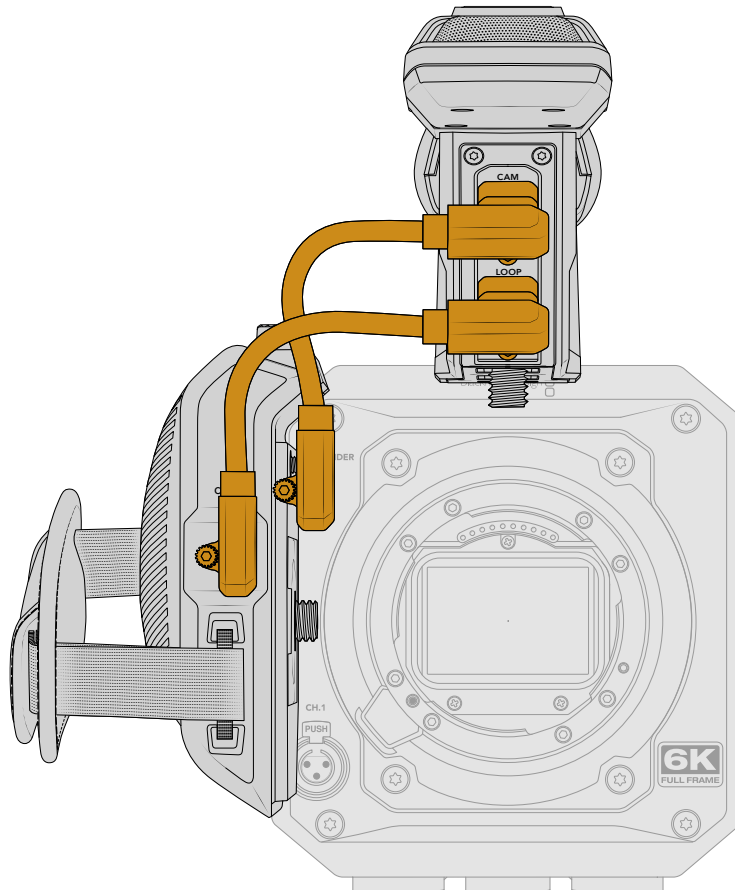

To connect both units:

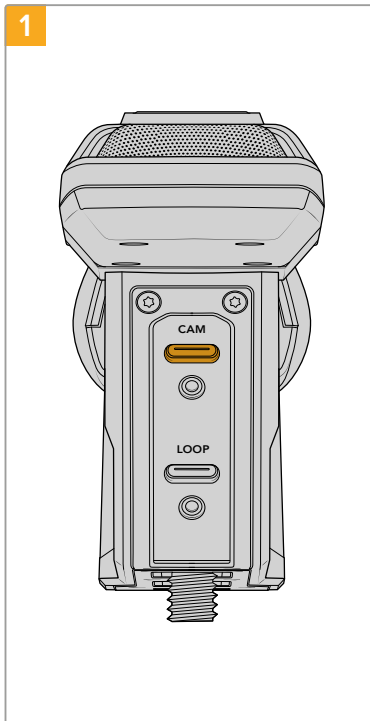


Using the supplied USB-C cable, connect the front USB-C port of your camera to the 'cam' USB-C port on Blackmagic PYXIS Pro Handle.

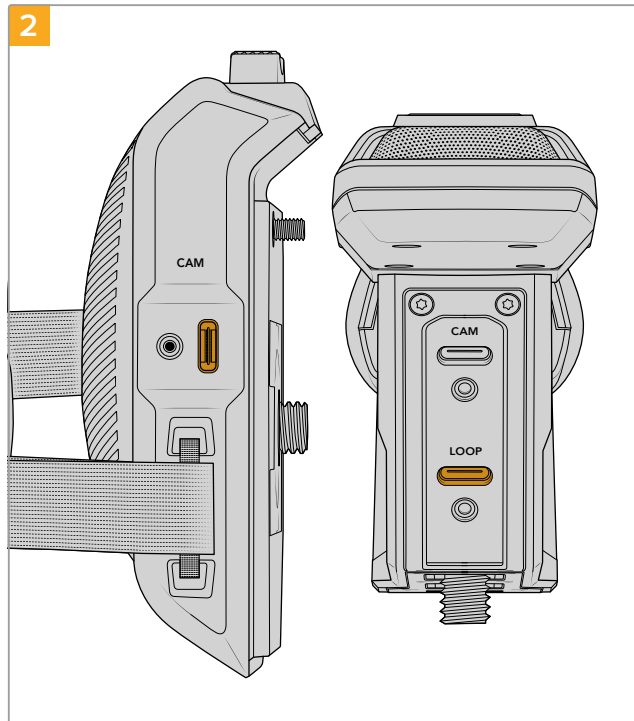

Using a second USB-C cable, connect the 'cam' port on Blackmagic PYXIS Pro Grip to the 'loop' port on Blackmagic PYXIS Pro Handle.

Blackmagic PYXIS Pro Grip Features and Buttons

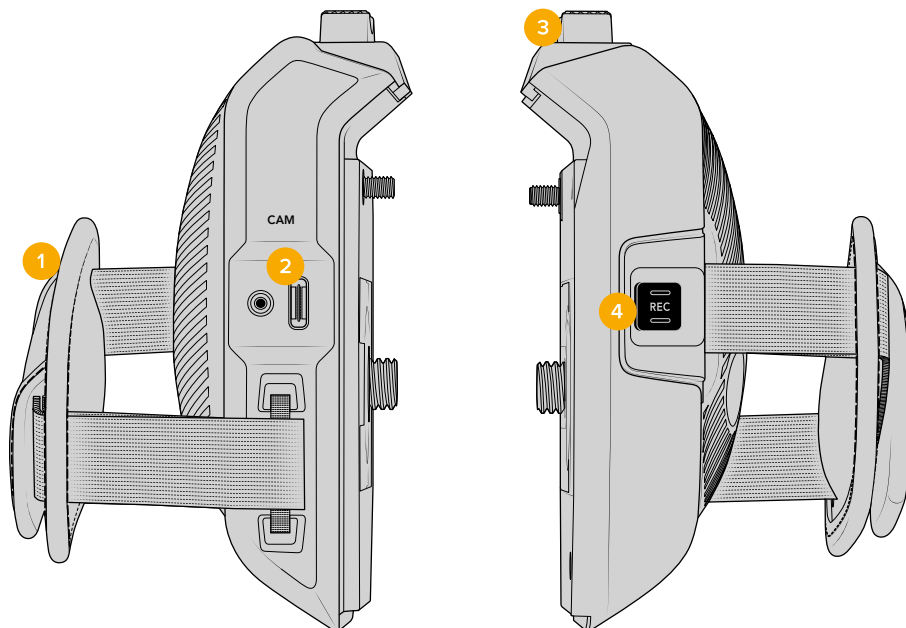

1 Hand Strap

The hand strap supplied with your PYXIS Pro Grip provides a secure way of holding your camera while operating the record and zoom controls.

2 USB-C Port

'Cam' USB-C port for connecting to the front USB-C port on Blackmagic PYXIS, or to the 'loop' port on Blackmagic PYXIS Pro Handle. The 'cam' port is also used for updating the internal software via Blackmagic Camera Setup.

3 Zoom Rocker Switch

The zoom rocker switch lets you control compatible power zoom lenses, push the rocker forward to zoom in and backwards to zoom out. The zoom rocker switch can also be mapped to commonly used functions. For more information refer to the 'settings' section.


4 Record Button

The record button on Blackmagic PYXIS Pro Grip works in the same way as the record button on your camera. Press the record button once to start recording immediately and press again to stop recording. Press and hold the record button to start pre-record, more information on your camera's pre-record feature is provided in the 'settings' section.

Blackmagic PYXIS Pro Handle Features and Buttons

Top Panel

The top panel of Blackmagic PYXIS Pro Handle includes the zoom rocker and function buttons.

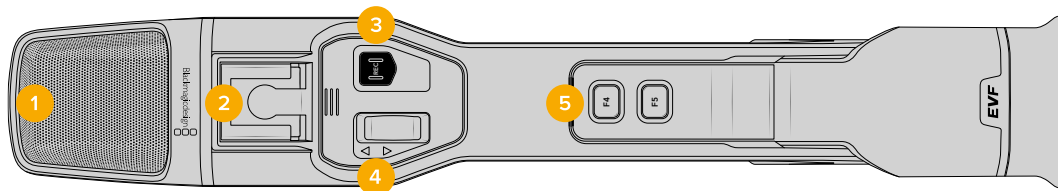

1 Stereo Microphone

High quality stereo microphone. For more information on your camera's audio settings, including recording from PYXIS Pro Handle microphone, refer to the 'audio settings' section.

2 Cold Shoe Mount

Cold shoe mount for lights, wireless microphone receivers and other accessories.

3 Record Button

Press the record button once to start recording immediately and press again to stop recording. Press and hold the record button to start pre-record, more information on your camera's pre-record feature is provided in the 'settings' section.

4 Zoom Rocker Switch


The zoom rocker switch lets you control compatible power zoom lenses, push the rocker forward to zoom in and backwards to zoom out. The rocker switch can also be mapped to control focus or iris on compatible lenses. For more information, refer to the 'settings' section.

5 Function Buttons

The F4 and F5 function buttons can be assigned to different functions in your camera's settings menu. For more information, refer to the 'settings' section.

Rear Panel

The rear of your Blackmagic PYXIS Pro Handle includes the viewfinder, diopter and tally light.

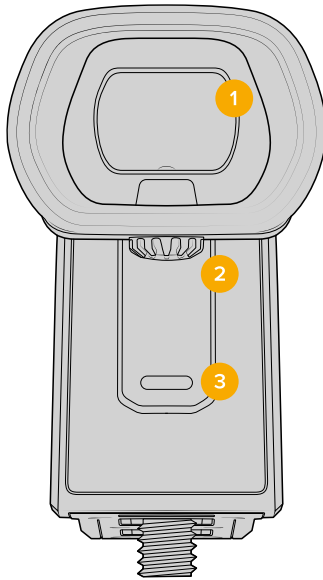

1 Viewfinder

The viewfinder tilts vertically to 70 degrees and comes with four eyecup types for left or right eye. A sensor in the viewfinder detects when it is in use, when the viewfinder is not in use the display will automatically dim to conserve battery power. You can set the viewfinder to overlay camera status information or display a clean feed. For more information, see the 'monitor settings' section.

2 Diopter


Turn the diopter knob to adjust the focus of the optional electronic viewfinder to suit your eyes. It's important to note the diopter adjusts the focus of the image presented in the viewfinder, and does not change the focus of the image attained by the camera sensor.

3 Rear Tally Indicator

The rear tally indicator shows your camera's recording status and will illuminate red when your camera is recording.

Front Panel

The front panel includes the record tally light and USB-C ports.

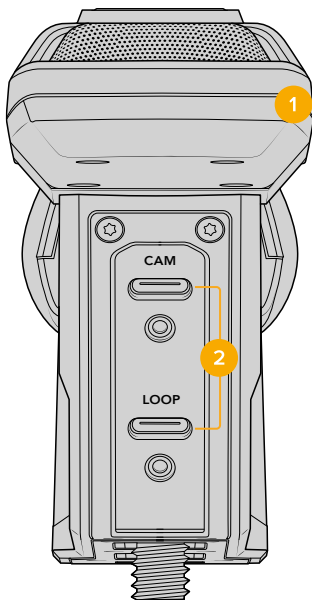

1 Front Tally Indicator

The LED on the front of your Blackmagic PYXIS Pro Handle indicates the recording status and will illuminate red when your camera is recording.

2 USB-C Ports

Use the 'cam' USB-C port to connect to the front USB-C port on your Blackmagic PYXIS, and the 'loop' port for connecting to Blackmagic PYXIS Pro Grip. The 'cam' port is also used for updating the internal software via Blackmagic Camera Setup.