

FUJIFILM

DIGITAL CAMERA

GFX 50sII

New Features Guide

Version 2.10







Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:










<https://fujifilm-x.com/support/download/firmware/cameras/>

Contents

GFX50S II firmware version 2.10 adds or updates the features listed below. For the latest manuals, visit the following website.

<https://fujifilm-dsc.com/en/manual/>

No.	Description	GFX50S II 	See 	Ver.
1	If a T/S lens is attached, the shift and rotate amounts are now displayed on the shooting screen and recorded in the EXIF data of new photos.	12 14 20 264	1 2 3 4	2.10
2	An  AREA SETTING option has been added under  USER SETTING in the setup menu, resulting in a change to the basic setup procedure and adjustments to TIME DIFFERENCE . In addition, DATE/TIME now offers a 24-hour clock.	205	5	2.00
3	The items listed in the setup menu under  USER SETTING > RESET have changed.	208	6	2.00
4	The  CONNECTION SETTING > Bluetooth SETTINGS item in the setup menu has been renamed Bluetooth/SMARTPHONE SETTING and now offers an IMAGE TRANSFER WHILE POWER OFF option. In addition, AUTO IMAGE TRANSFER and SMARTPHONE SYNC. SETTING have respectively been renamed AUTO IMAGE TRANSFER ORDER and SMARTPHONE LOCATION SYNC .	239	8	2.00
5	Upload timing has changed. Pictures can now be uploaded not only during playback or when the camera is off but also while shooting is in progress.	239	8	2.00

No.	Description	GFX50S II 	See 	Ver.
6	<p> CONNECTION SETTING > GENERAL SETTINGS has been reorganized as follows:</p> <ul style="list-style-type: none"> • LOCATION INFO has been moved to  SCREEN SET-UP, •  BUTTON SETTING has been moved to  BUTTON/DIAL SETTING and renamed  Fn1 BUTTON SETTING, • GEOTAGGING has been moved to  SAVE DATA SET-UP, and • NAME and RESIZE IMAGE FOR SMARTPHONE  have been moved to Bluetooth/SMARTPHONE SETTING. 	219 230 238 239	7 8	2.00
7	The procedure for connecting wirelessly to smartphones has changed.	280	10	2.00


Changes and Additions

Changes and additions are as follows.

GFX50S II Owner's Manual: 12

Ver. 2.10

 
The Electronic Viewfinder

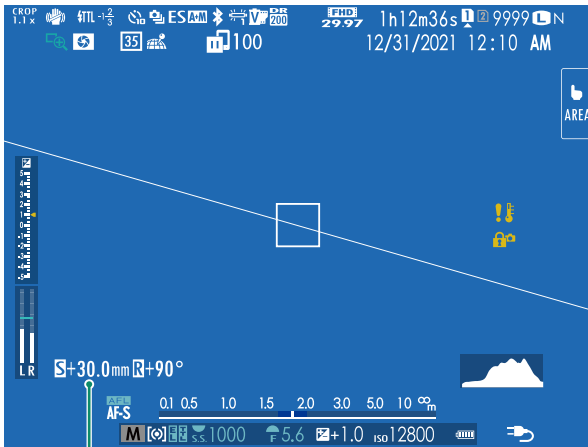

51

S+30.0mm R+90°

 - ⑤1 If a T/S lens is attached, the shift and rotate amounts are displayed.

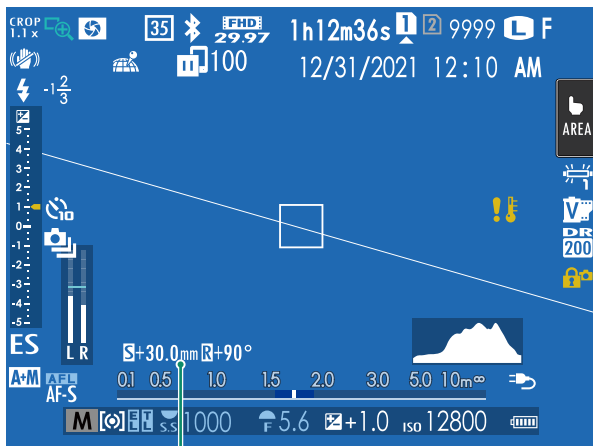

51
S+30.0mm R+90°

51 If a T/S lens is attached, the shift and rotate amounts are displayed.

To choose the items shown in the standard indicator display:


- 1 Display standard indicators.**
Use the **DISP/BACK** button to display standard indicators.
- 2 Select DISP. CUSTOM SETTING.**
Select **SCREEN SET-UP > DISP. CUSTOM SETTING** in the setup menu.
- 3 Choose items.**
Highlight items and press **MENU/OK** to select or deselect.

Item	Default		Item	Default	
	STILL	MOVIE		STILL	MOVIE
FRAMING GUIDELINE	<input type="checkbox"/>	<input type="checkbox"/>	DUAL IS MODE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
ELECTRONIC LEVEL	<input type="checkbox"/>	<input type="checkbox"/>	TOUCH SCREEN MODE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FOCUS FRAME	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WHITE BALANCE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
AF DISTANCE INDICATOR	<input type="checkbox"/>	<input type="checkbox"/>	FILM SIMULATION	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
MF DISTANCE INDICATOR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	DYNAMIC RANGE	<input checked="" type="checkbox"/>	—
HISTOGRAM	<input type="checkbox"/>	<input type="checkbox"/>	SHIFT AMOUNT OF T/S LENS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
LIVE VIEW HIGHLIGHT ALERT	<input type="checkbox"/>	<input type="checkbox"/>	ROTATE AMOUNT OF T/S LENS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
SHOOTING MODE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	FRAMES REMAINING	<input checked="" type="checkbox"/>	—
APERTURE/S-SPEED/ISO	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	IMAGE SIZE/QUALITY	<input checked="" type="checkbox"/>	—
INFORMATION BACKGROUND	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MOVIE MODE & REC. TIME	—	<input checked="" type="checkbox"/>
Expo. Comp. (Digit)	<input type="checkbox"/>	<input type="checkbox"/>	35mm FORMAT MODE	<input checked="" type="checkbox"/>	—
Expo. Comp. (Scale)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	IMAGE TRANSFER ORDER	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FOCUS MODE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MIC LEVEL	—	<input checked="" type="checkbox"/>
PHOTOMETRY	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	GUIDANCE MESSAGE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
SHUTTER TYPE	<input checked="" type="checkbox"/>	—	BATTERY LEVEL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FLASH	<input checked="" type="checkbox"/>	—	FRAMING OUTLINE	<input type="checkbox"/>	<input type="checkbox"/>
CONTINUOUS MODE	<input checked="" type="checkbox"/>	—			

- 4 Press **DISP/BACK** to save changes.
- 5 Press **DISP/BACK** as needed to exit the menus and return to the shooting display.

View the shift amount or rotate amount of lenses on the EVF or LCD. The shift and rotate amounts are displayed in increments of 0.5 mm and 3°, respectively.



 The shift amount and rotate amount are also recorded to the EXIF data of images that have been taken.

AREA SETTING

Adjust settings for your current time zone.

AREA SETTING

Choose your time zone from a map.


DAYLIGHT SAVINGS


Turn daylight saving time on or off.


Option	Description
ON	Daylight saving time on.
OFF	Daylight saving time off.

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

 
 Use  **AREA SETTING** to choose your home time zone before selecting a local time zone using  **LOCAL**.

- 1 Highlight  **LOCAL** and press **MENU/OK**.
- 2 Use the focus stick (focus lever) to choose the local time zone. Press **MENU/OK** when settings are complete.

 Select **ON** to enable daylight saving time.

To set the camera clock to local time, highlight **↔ LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select **🏠 HOME**.

Options	
↔ LOCAL	🏠 HOME

 If **↔ LOCAL** is selected, **↔** will be displayed in yellow for about three seconds when the camera is turned on.

GFX50S II Owner's Manual:  208 **Ver. 2.00**

RESET

Reset shooting or setup menu options to default values.

- 1 Highlight the desired option and press **MENU/OK**.

Option	Description
STILL MENU RESET	Reset all photo menu settings other than custom white balance and custom settings banks created using EDIT/SAVE CUSTOM SETTING to default values.
MOVIE MENU RESET	Reset all movie menu settings other than custom white balance and custom settings banks created using EDIT/SAVE CUSTOM SETTING to default values.
SET-UP RESET	Reset all setup menu settings other than DATE/TIME , 🏠 AREA SETTING , TIME DIFFERENCE , and COPYRIGHT INFO to default values.
INITIALIZE	Reset all settings other than custom white balance to default values.




- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.

LOCATION INFO

Select **ON** to display location info downloaded from a smartphone.

Options**ON****OFF****▶ Fn1 BUTTON SETTING**

Choose the role performed by the **Fn1** button during playback.



Option	Description
 SMARTPHONE TRANSFER ORDER	Pressing the button marks the current picture for transfer. If the camera is not currently paired with a smartphone, Bluetooth/SMARTPHONE SETTING options will be displayed.
 SELECT & SMARTPHONE TRANSFER ORDER	Pressing the button displays a dialog where pictures can be selected for upload to a smartphone with which the camera is paired. If the camera is not currently paired with a smartphone, Bluetooth/SMARTPHONE SETTING options will be displayed instead.
 WIRELESS COMMUNICATION	The button can be used for wireless connections.

GEOTAGGING

If **ON** is selected, location data downloaded from a smartphone will be embedded in pictures as they are taken.

Options**ON****OFF**

Adjust Bluetooth settings.

Option	Description
PAIRING REGISTRATION	Pair the camera with a smartphone or tablet to which the smartphone app has been installed.
SELECT PAIRING DESTINATION	Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION . Select NO CONNECTION to exit without connecting.
DELETE PAIRING REG.	Delete pairing information for selected devices. Choose the device in the device list. The selected device will also be removed from the devices listed in SELECT PAIRING DESTINATION .
Bluetooth ON/OFF	<ul style="list-style-type: none"> • ON: The camera automatically establishes a Bluetooth connection with paired devices when turned on. • OFF: The camera does not connect via Bluetooth.
AUTO IMAGE TRANSFER ORDER	Choose whether pictures are automatically marked for upload as they are taken.
SMARTPHONE LOCATION SYNC.	Choose whether to synchronize the camera to the location provided by a paired smartphone.
NAME	Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default).
IMAGE TRANSFER WHILE POWER OFF	Choose whether the camera uploads pictures to paired smartphones while off.
RESIZE IMAGE FOR SMARTPHONE 	Choose whether to resize images for upload to smartphones. Resizing applies only to the copy uploaded to the smartphone; the original is not affected. <ul style="list-style-type: none"> • ON: Larger images are resized to  for upload. • OFF: Images are uploaded at their original size.



- Be sure your smartphone is running the latest version of the applicable smartphone app. Different operating systems use different apps; for more information, visit:
<https://app.fujifilm-dsc.com/>
- Pictures will be uploaded during shooting and playback and while the camera is off if **ON** is selected for both **Bluetooth ON/OFF** and **AUTO IMAGE TRANSFER ORDER** or if images are currently selected for upload using the **IMAGE TRANSFER ORDER** option in the playback menu.
- The camera clock will automatically be set to the time reported by paired smartphones whenever the app is launched.

Connecting to Smartphones

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit:

<http://fujifilm-dsc.com/wifi/>

Smartphones and Tablets

Installing Smartphone Apps

Before establishing a connection between the smartphone and camera, you will need to install at least one dedicated smartphone app. Visit the following website and install the desired apps on your phone.

<https://app.fujifilm-dsc.com/>

 



 The apps available vary with the smartphone operating system.

Connecting to a Smartphone


Pair the camera with the smartphone and connect via Bluetooth®.

- 1 Press **DISP/BACK** while shooting information is displayed.

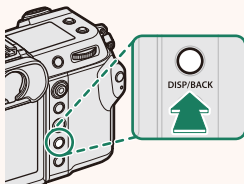


 You can also proceed directly to Step 3 by holding the **DISP/BACK** button during playback.

 2 Highlight **Bluetooth** and press **MENU/OK**.

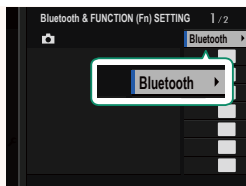

 
3 Highlight **PAIRING** and press **MENU/OK**.

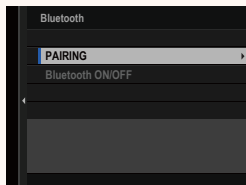

4 Launch the app on the smartphone and pair the smartphone with the camera.

More information is available at the following website:
<https://app.fujifilm-dsc.com/>

 
When pairing is complete, the camera and smartphone will automatically connect via Bluetooth. A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.

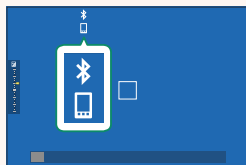

- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
- Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.


Using the Smartphone App

Read this section for information on the options available for downloading pictures to your smartphone using the smartphone app.

 Before proceeding, select **ON** for **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF**.


Selecting and Downloading Pictures Using the Smartphone App

You can download selected pictures to a smartphone using the smartphone app.

 More information is available from the following website:

<https://app.fujifilm-dsc.com/>

Uploading Pictures as They Are Taken

Pictures taken with **ON** selected for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > AUTO IMAGE TRANSFER ORDER** will automatically be marked for upload to the paired device.

-  • If **ON** is selected for both **Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF** and **IMAGE TRANSFER WHILE POWER OFF** in the  **CONNECTION SETTING** menu, upload to the paired device will continue even while the camera is off.
- Selecting **ON** for  **CONNECTION SETTING > Bluetooth/SMARTPHONE SETTING > RESIZE IMAGE FOR SMARTPHONE**  enables compression, reducing file size for upload.

Selecting Pictures for Upload in the Playback Menu

Use **IMAGE TRANSFER ORDER > SELECT FRAMES** to select pictures for upload to a paired smartphone or tablet via Bluetooth®.

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>

