

Thank you for choosing the **Yard Master 2** portable projection screen! Please read through this user guide before utilizing the screen. Correct usage and maintenance will ensure a long product life.

Care & Use Instructions

◆ During cold seasons it is best to assemble the screen in a warm environment to allow the screen material to properly stretch on the frame.

◆ Please be sure to distinguish between the front and back of the screen fabric when setting up the projection screen. CineWhite® UHD-B (front projection) has a black backing and WraithVeil® (rear projection) is labeled front, back.

◆ Be sure to use the screen only during a light breeze (up to 7 mph); it is not meant to withstand heavy winds

***Elite Screens is not responsible for damages due to negligence resulting from misuse under weather conditions and will void your warranty.**

◆ Dust, dirt and scratches on the projection surface will affect the picture quality, please take note of the points below to prevent that from occurring:

1. Do not touch the projection surface with your hands
2. Do not write or draw on the projection surface
3. Do not use fingers or sharp objects to point on the projection surface; this will damage the screen material.
4. Use a soft-damp cloth to clean the projection surface; do not use chemical cleaning agents or alcohol.
5. Use clean water when dampening the cleaning cloth and do not rub against the material to clean it.

◆ After using the screen, disassemble it and store it in the carrying bag provided.

Note: Please wipe off any moisture prior to packing it away to prevent damage to the product.

◆ To avoid damage and injury, the screen should only be operated by adults.

Product Description

Design: The aluminum frame is designed to be light weight and easily operated making it easy to carry, assemble and disassemble.

Screen Fabric: The screen fabric is attached to the rectangular frame and held in place by several press stubs, which ensure an evenly stretched and flat surface. The CineWhite® UHD-B (front projection) and WraithVeil® (rear projection) screen materials are durable and can be folded many times without causing damage or distortion to the surface.

 
 
Correct usage of the projection screen will ensure better viewing results.

For front projection (CineWhite® UHD-B), assemble and view the screen as indicated in Fig. 1.

For rear projection (WraithVeil®), assemble and view the screen as indicated in Fig. 2.





Hardware and Parts List

A. Folding frame x1 	B. Left and right folding legs x2 	C. Screen material bag x1 
D. Projection screen material x1 	E. Knob screw x2 (small) x4 (Large) 	F. Eyebolt x2 
G. Rope x2 	H. Carrying Bag x1 	I. Stake x4 
J. Support Leg x2 		



Note: The parts list above is subject to change without notice.

Frame Assembly and Screen Material Attachment



1. Take the **folding frame (A)** out of the **carrying bag (H)** and place it on a flat surface. Unfold the longer sections first as shown in Fig.3-4.

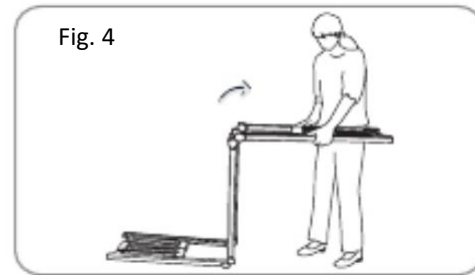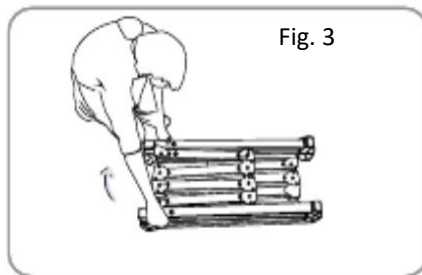


2. Unfold the frame until the latch on the hinge "clicks" into place. Repeat the procedure for the shorter sections. (Fig. 5-6)

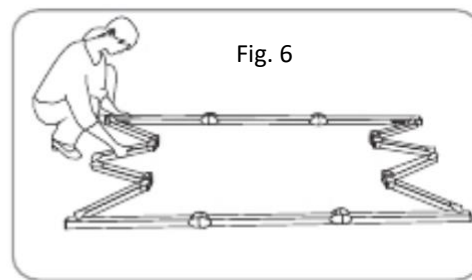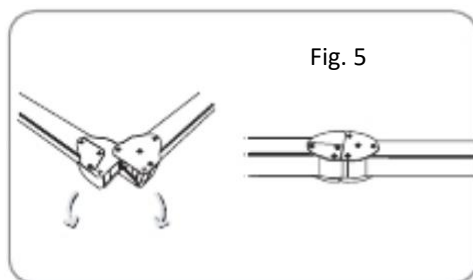


3. Make sure all 4 corners of the frame are at a 90° angle and the hinged support bar is straight and not bending. (Fig. 7-9)

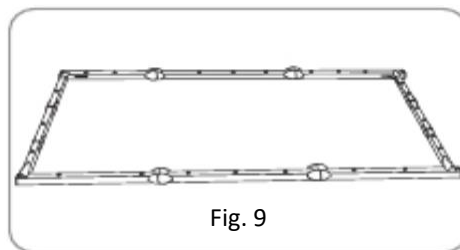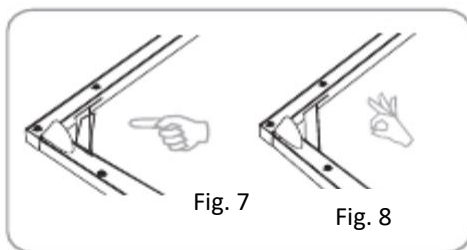



4. Insert the frame **legs (B)** into the openings located at the left and right bottom sides of the **folding frame (A)**. Secure them by fastening the **knob screw (E)** into the adjacent hole. The added support behind the leg will be added in a later step.

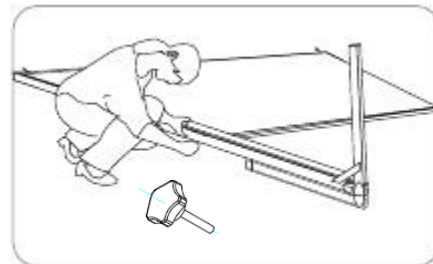




5. Next, screw the **eyebolts (F)** into the openings located at the top of the frame (Fig.11).

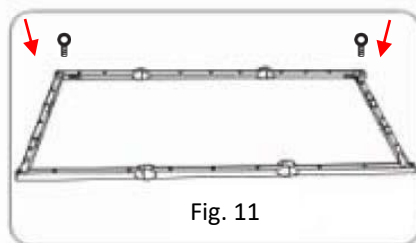



6. Take the **screen material (D)** out of the **screen material bag (C)** and align the corners of the screen material with the inside corners of the frame. Unfold as shown in the diagram (Fig.12-13).

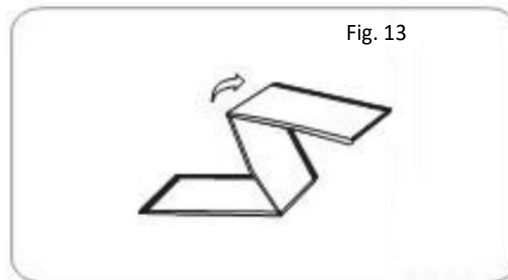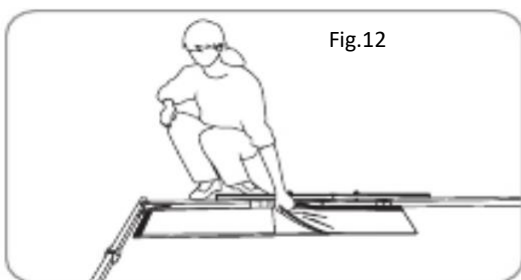

7. Once the **screen material (D)** is fully extended, secure the material by snapping the buttons onto the frame studs as shown in Fig. 14-16. Fasten the buttons in the following order AB→CD→EF→GH.

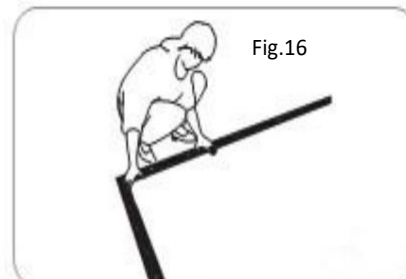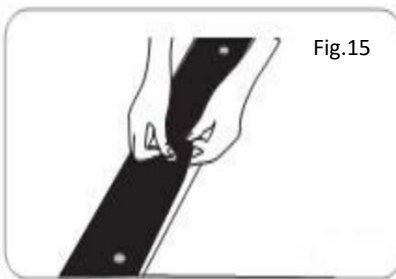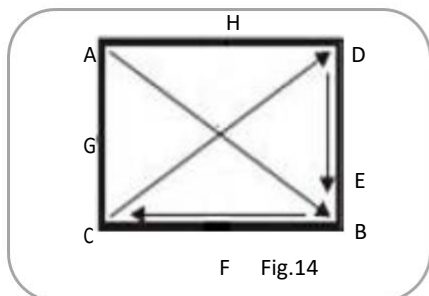



8. If you have a bit of difficulty attaching the material, try this alternate option. Unlatch the sides of the frame, then carefully place the **material (D)** over it. Begin attaching the material by snapping the buttons on all four corners and horizontal sides of the frame.

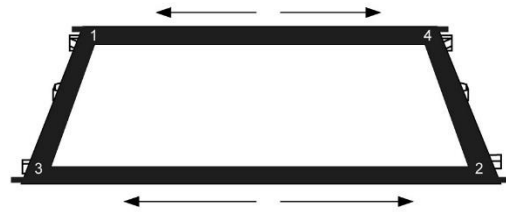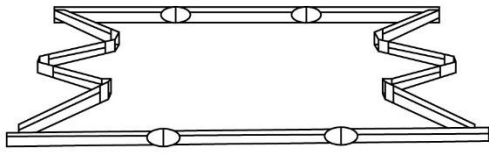




9. Carefully latch the sides of the frame so it's completely unfolded, then snap the rest of the buttons on the vertical sides of the material.



10. Tie 4 pieces of **rope** (2 on the left and 2 on the right) to the **eyebolts (F)** that are located at the top of the frame. Next, lift the screen up while simultaneously opening the frame legs. Two people are needed for this step. Fig.17-18

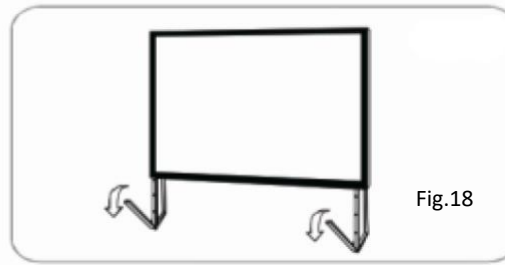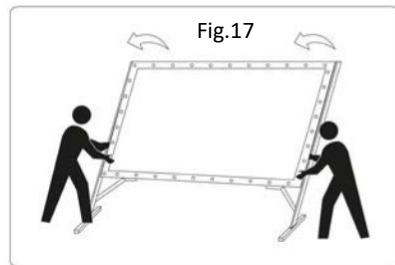

11. Next, carefully place the support leg (**J**) behind the folding leg (**B**) and attach it securely using a **knob screw (E)**. Do this for both left and right legs.

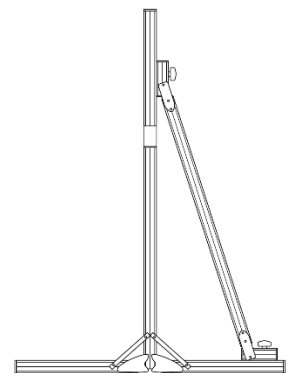
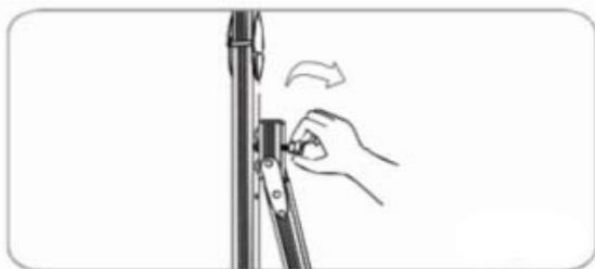
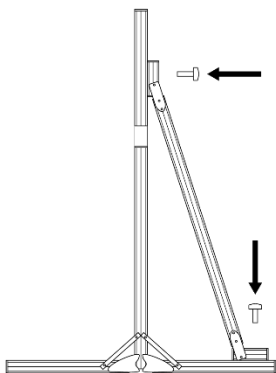


12. To secure the frame, place a **stake (I)** into each hole located on the frame footing, and hammer it into the ground. Finally, tie the 4 **ropes (G)** to the stakes to prevent the screen from tilting or falling over. As shown in fig.19.



Screen Disassembly

1. Remove **ropes (G)** and **stakes (I)** from the ground.
2. Unscrew the knobs from the support legs (J) and remove them.
3. Unlatch the hinged support bars on front side of each leg so that it is bent and fold that half of the legs up for the next step.
4. Slowly lower the screen to the ground (towards the closed legs). Two people are needed for this step.
4. Loosen and remove the ropes, **knob screws (E)** and **eyebolts (F)** from each leg.
5. Unlatch the hinged support bars and fold down other half of legs
6. Remove the frame **legs (B)** from the **folding frame (A)**.

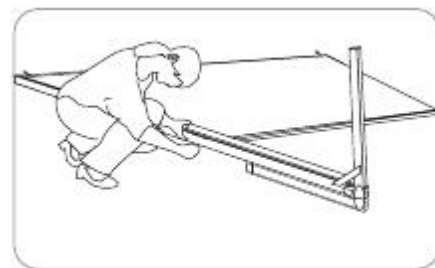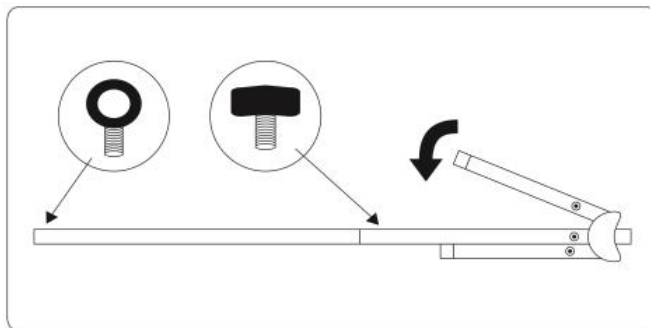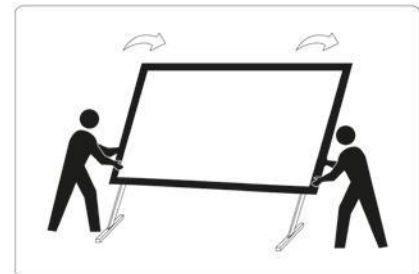

7. Detach the **screen material (D)** from the **folding frame (A)** by carefully unsnapping each button as shown.



8. Fold **screen material (D)** in half, folding the bottom of the screen towards the top. Then, fold in half again in the same way. Lastly, fold the material into thirds to condense the length, see Fig. 20 – 22.

*If you prefer to roll the material, instead of folding into thirds, roll from one end to the other after folding in half twice.

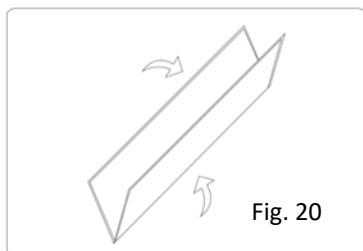


Fig. 20

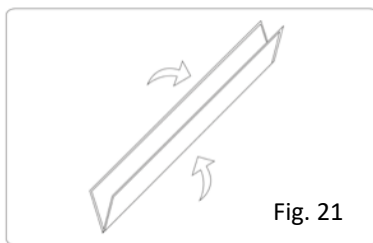


Fig. 21



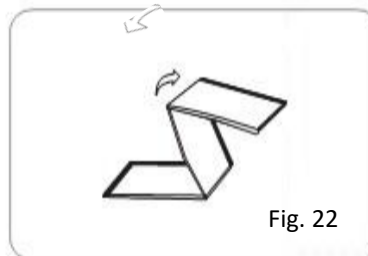


Fig. 22

9. Unlatch the hinged support bars in each corner of the **folding frame (A)**.

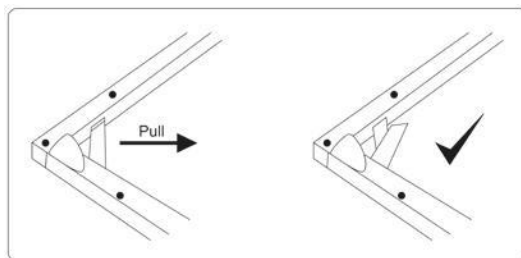

10. Press in the silver locking buttons, near the folding joints, and slowly gather the sides of the folding frame.

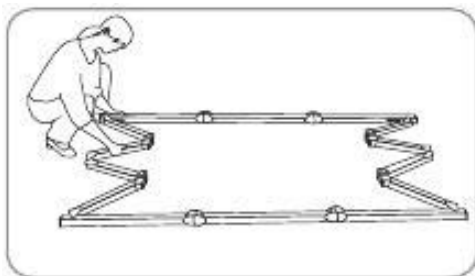

11. Again, press in the silver locking buttons. Then, pick up one end of the folding frame, and walk it to the other end, folding the longer sections into thirds.

12. Store the screen in the provided **carrying bag (h)**. Be sure to place folding frame, legs, and smaller parts into the carrying bag first and place the material on top to keep material from creasing or tearing.

For a local Elite Screens contact or Technical Support, please visit
www.elitescreens.com



Material Creases Disclaimer

Yard Master 2, Yard Master 2 WraithVeil® Dual,
Yard Master Plus Series, Yard Master 2 Rear Series

Dear Screen user,
Thank you for choosing Elite Screens!

To provide the most economical means of shipping, our Yard Master 2 series projection material is folded to fit in a small package. In rare occasions this may initially result in faint packaging lines on the material. These lines should dissipate over time once the material is stretched out on the main frame. Please make sure to view the projected image at the minimum recommended viewing distance (1.5x image width) to further reduce any visible lines. When projecting onto the screen, lines may be slightly visible, but will not affect your projected image.



Q: How do I alleviate screen creases?

A: The Yard Master 2 screen material is folded so that it can fit into a smaller package to decrease freight cost. If you notice crease lines on the material upon opening the box, there are a couple of things that can be done to alleviate them. The easiest method would be to allow the material to stretch on the Yard Master 2 frame.

Over time, the creases will alleviate to a minimal.

If after a few days you do not see any improvement, the second method in alleviating them would be the use of a hairdryer. Set the dryer on medium heat and blow on the material from its back side from about 3 feet away, concentrating only on the crease lines. Do not apply excessive heat as this will cause for the material to deform. You may need to repeat this process for a couple of consecutive days depending on the severity of the creases.



Material when first unpackaged



Material when fully tensioned on frame