

## Application Range of the Cable

### SCSC-C1 Shutter Control Cable Camera Compatibility:

Canon 70D、60D、700D、650D、600D、550D、500D、450D、400D、  
3S0D、300D、1100D、100D、1000D、G10、G11、G12

Fuji: X-T2 (could control recording)

### SCSC-C2 Shutter Control Cable Camera Compatibility:

Canon 7D、6D、5D2、5D3、5D、50D、40D、30D、20D、10D、1D、1DX、  
1DsM3、1DsM4、D60/30、EOS-1v、HS/EOS-3、5D4、5DSR、7D2、6D2

### SCSC-N1 Shutter Control Cable Camera Compatibility:

Nikon: D850、D810、D800、D700、D300、D300S、D200、D100、N90S、  
D1 series, D2 series, D3, D3S, D3X, D4, D200, D1H, D1X, D2, D2H,  
D2X, D2XS, D2HS, F5, F6, F90, F90X, F100.

### SCSC-N3 Shutter Control Cable Camera Compatibility:


Nikon D600、D610、D7100、D7000、D90、D5200、D5100、D90、D3200、  
D3100、D7200、D750、D600、D3300、D5300、D5600、D3400、D7500

### SCSC-S2 Shutter Control Cable Camera Compatibility:

Sony ILCE-6600、ILCE-6500、ILCE-6400、ILCE-6300、ILCE-6100、ILCE-6000、  
ILCE-5100、ILCE-7M3、ILCE-7RM3、ILCE-7RM4、ILCE-7RM2、ILCE-7SM2、  
ILCE-7M2、ILCE-7S、ILCE-7R、ILCE-7、ILCE-5000、ILCE-3000、NEX-3N、  
a58、HX50、HX60、HX300、HX400、RX100M2、RX100M3、RX100M4、  
RX100M5、RX100M6、RX100M7、RX10 II、RX10 III、RX10 IV、RX1 R、RX1  
R II、HX99、A99 II etc.

Note: Incompatible with RX100 (first generation), RX10, RX1R etc.

## Operation Instruction

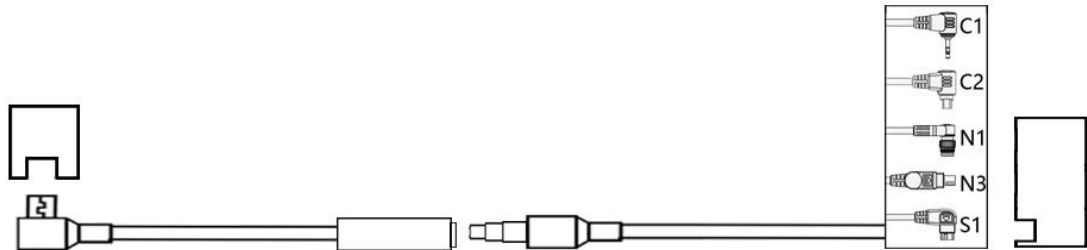

Slypod type-c port → type-c to 2.5mm female connector shutter control cable  
→ 2.5mm male connector shutter control cable → camera

## Produce Knowledge About the USB Adapter



C1



C2



N1



N3



S2