

EOS 5Ds EOS 5Ds R

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS 5DS/EOS 5DS R Instruction Manual.




CPQ-E140-000 © CANON INC. 2015

English

Quick Start Guide


- 1 Insert the battery.**
- 2 Insert the card.** The camera-front side slot is for a CF card, and the camera-back side slot is for an SD card.
 * Shooting is possible with either a CF card or an SD card in the camera.
- 3 Attach the lens.** Align it with the red dot.
- 4 Set the lens's focus mode switch to <AF>.**
- 5 Set the power switch to <ON>.**

- 6 While holding down the center of the Mode Dial, set it to <A+> (Scene Intelligent Auto).**
 - 7 Focus on the subject.** Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
 - 8 Take the picture.** Press the shutter button completely to take the picture.
 - 9 Review the picture shot.** The image just captured will be displayed for 2 sec. on the LCD monitor.
- A ☆ icon to the right of a function title indicates a function that can be used only in these modes: <P> <Tv> <Av> <M> .
- **Number of Possible Shots (Viewfinder Shooting)**
- | | | |
|----------------|-------------------|-------------------|
| Temperature | At 23°C / 73°F | At 0°C / 32°F |
| Possible shots | Approx. 700 shots | Approx. 660 shots |

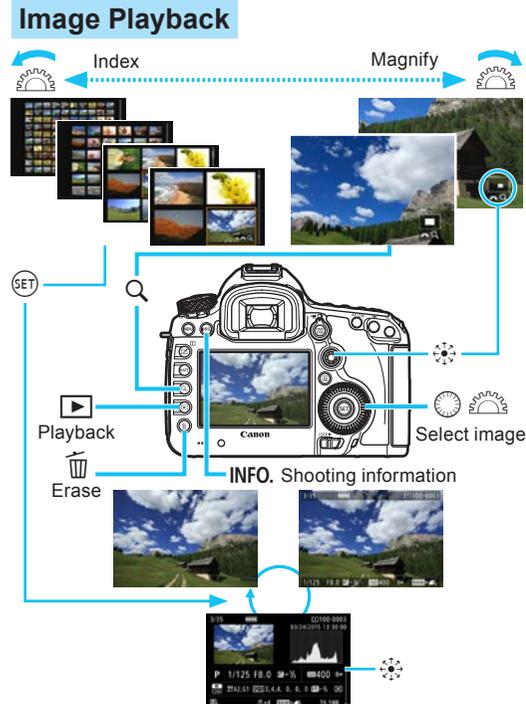


Preparation

Menu Operations

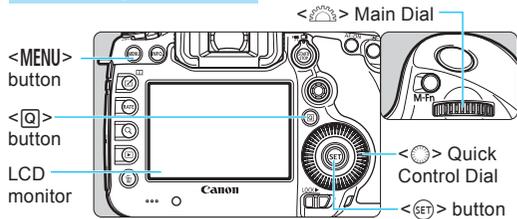

- Press the <MENU> button to display the menu.
- Each time you press the <Q> button, the main tab will switch.
- Turn the <Main Dial> to select a secondary tab, then turn the <Quick Control Dial> to select the desired item.
- Press <SET> to display the setting.
- Turn the <Main Dial> to select the setting, then press <SET>.

 Mode

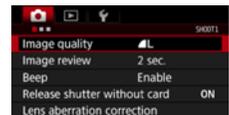

P/Tv/Av/M/B Modes


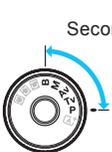 


Image-recording Quality

- Select [Image quality], then press <SET>.
- Turn the <Main Dial> or <Quick Control Dial> to select the image-recording quality, then press <SET>.

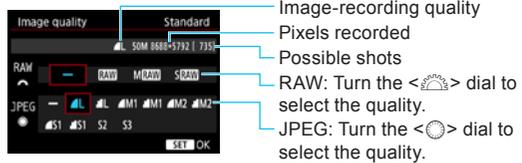

Picture Style ☆

- Press the <Picture Style> button.
- Select [Picture Style], then press <SET>.
- Turn the <Main Dial> to select the Picture Style, then press <SET>.




Style	Description
Auto	Color tones optimized for each scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly soft images.
Landscape	Vivid blue skies and greenery, and very sharp images.
Fine Detail	Detailed outlines and fine textures description.
Monochrome	Black-and-white images.

• For <Neutral> (Neutral) and <Faithful> (Faithful), refer to the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

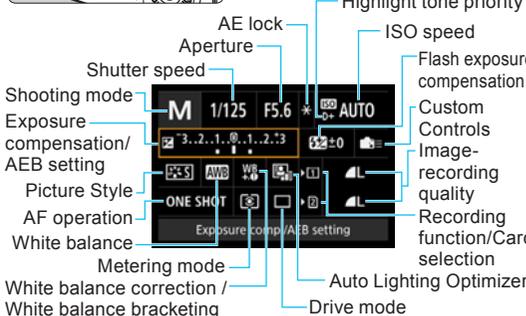

- Tilt the <Main Dial> to select the function, then turn the <Quick Control Dial> to set it.
- In the <A+> mode, you can only select or set the recording function, card, image-recording quality and drive mode.

Electronic Level


- Press the <INFO.> button to display the electronic level.

Custom Functions ☆


1: Exposure	3: Others
Exposure level increments	Warnings in viewfinder
ISO speed setting increments	Dial direction during Tv/Av
Bracketing auto cancel	Multi function lock
Bracketing sequence	Custom Controls
Number of bracketed shots	Add cropping information
Safety shift	Default Erase option
Same exposure for new aperture	Retract lens on power off
2: Exposure	4: Clear
Set shutter speed range	Clear all Custom Function (C.Fn)
Set aperture range	

Shooting Operation


Nomenclature

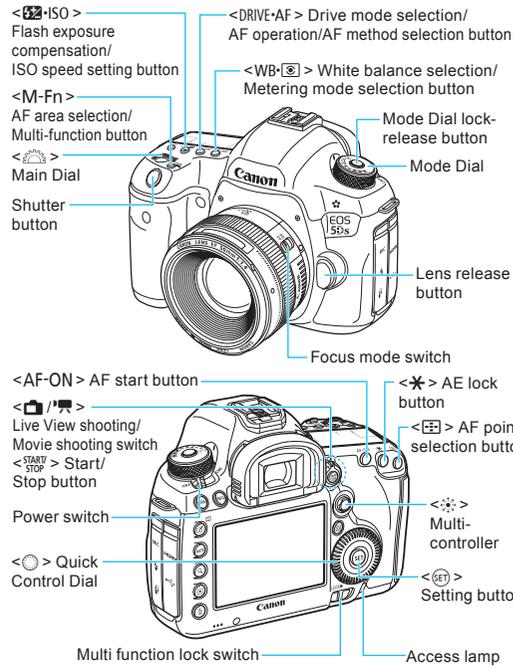

LCD Panel

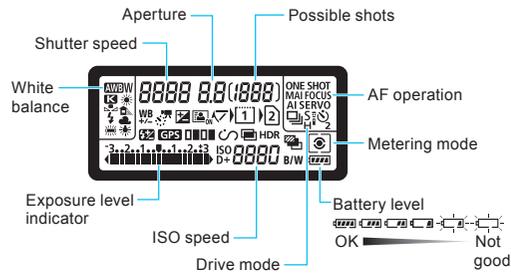

Viewfinder Information

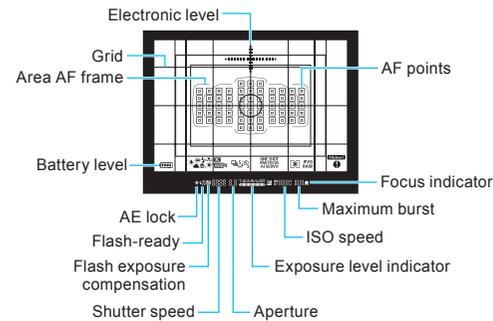

A+ Mode



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

P/Tv/Av/M/B Modes




You can change the camera settings as desired to shoot in various ways.

* Set the <LOCK> switch to the left (Multi function lock released).

P: Program AE


- Set the Mode Dial to <P>.
- When focus is achieved, the camera automatically sets the shutter speed and aperture as in the <A+> mode.

Tv: Shutter-priority AE

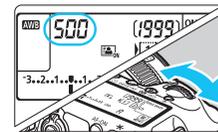


- Set the Mode Dial to <Tv>.
- Turn the <A> dial to set the desired shutter speed, then focus on the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <A> dial until it stops blinking.

Av: Aperture-priority AE

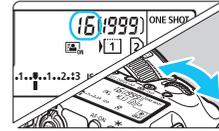


- Set the Mode Dial to <Av>.
- Turn the <A> dial to set the desired aperture, then focus on the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <A> dial until it stops blinking.

M: Manual Exposure

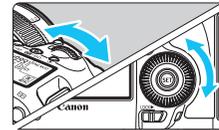


- Set the Mode Dial to <M>.
- Turn the <A> dial to set the desired shutter speed.
- Turn the <A> dial to set the desired aperture.
- Focus on the subject and check the exposure level indicator.

ISO: ISO Speed*

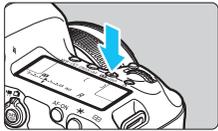


- Press the <ISO> button, then turn the <A> dial.
- ISO 100 to ISO 6400 can be set in 1/3-stop increments.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.

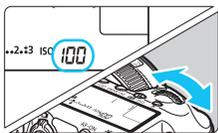


Drive Mode




- Press the <DRIVE> button, then turn the <A> dial.
- Single shooting
- High-speed continuous shooting
- Low-speed continuous shooting
- Silent single shooting
- Silent continuous shooting
- 10-sec. self-timer/remote control
- 2-sec. self-timer/remote control

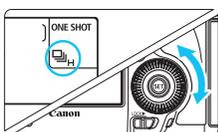

AF: AF Operation*

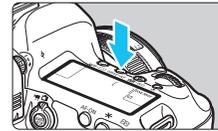


- Set the lens's focus mode switch to <AF>.
- Press the <DRIVE> button, then turn the <A> dial.

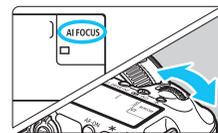


- ONE SHOT** (One-Shot AF): For still subjects
- AI FOCUS** (AI Focus AF): Switches the AF operation automatically
- AI SERVO** (AI Servo AF): For moving subjects


AF Point Selection*

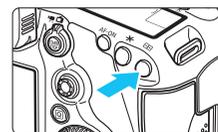

- Look through the viewfinder and press the <AF-ON> button.
- The AF point selection will change in the direction you tilt the <A>. If you press <A> straight down, the center AF point (or center zone) will be selected.
- You can shift the AF point horizontally by turning the <A> dial, and vertically by turning the <A> dial to select an AF point (toggles among zones in Zone AF).

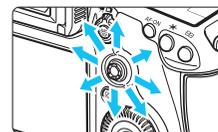


AF Area Selection*

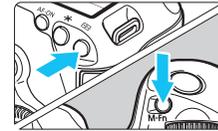


- Look through the viewfinder and press the <AF-ON> button.
- Press the <M-Fn> button.
- Each time you press the <M-Fn> button, the AF area selection mode changes.

Live View Shooting

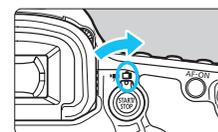

- Set the switch to <Live View>.
- Press the <START/STOP> button, and the image will appear on the LCD monitor.

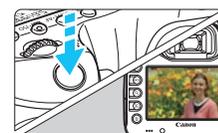


- Press the shutter button halfway to focus, then press it completely to take the picture.
- Press the <START/STOP> button to exit the Live View shooting.


Number of Possible Shots (Live View Shooting)

Temperature	At 23°C / 73°F	At 0°C / 32°F
Possible shots	Approx. 220 shots	Approx. 210 shots

Shooting Movies

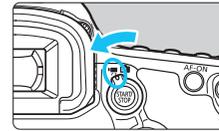

- Set the switch to <Movie>.
- The image will appear on the LCD monitor.

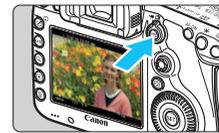

- Press the shutter button halfway to focus.
- Press the <START/STOP> button to start shooting a movie.
- To stop movie shooting, press the <START/STOP> button again.
- To shoot still photos, press the shutter button completely.



Microphone

Movie shooting modes

- <A+>/P/B> : Autoexposure shooting
- <Tv> : Shutter-priority AE shooting
- <Av> : Aperture-priority AE shooting
- <M> : Manual exposure shooting