

SxS Memory Card Reader / Writer

Lecteur/Scripteur de carte mémoire SxS

Устройство чтения/записи карт памяти SxS

SxS Жады картасын жазу/оку

қырылгысы

SxS 存储卡读写卡器

取扱説明書	Bedienungsanleitung
Operating Instructions	Istruzioni per l'uso
Mode d'emploi	Инструкция по эксплуатации
Manual de Instrucciones	使用说明书

お買い上げいただきありがとうございます。
警告 電気製品は安全のための注意事項を守らないと、火災や人身事故になることがあります。

この取扱説明書には、事故を防ぐための重要な注意事項と製品の取り扱いかを示してあります。この取扱説明書をよく読むのうえ、製品を安全に扱ってください。お読みになったあとは、いつでも見られるところに必ず保管してください。




SBAC-T40

SxS **CE** **FCC**

© 2019 Sony Corporation Printed in Japan

5006453120

http://www.sony.net/

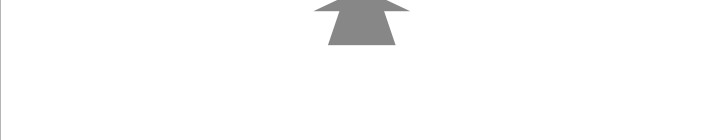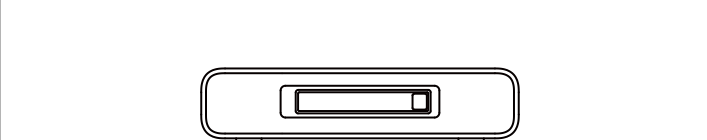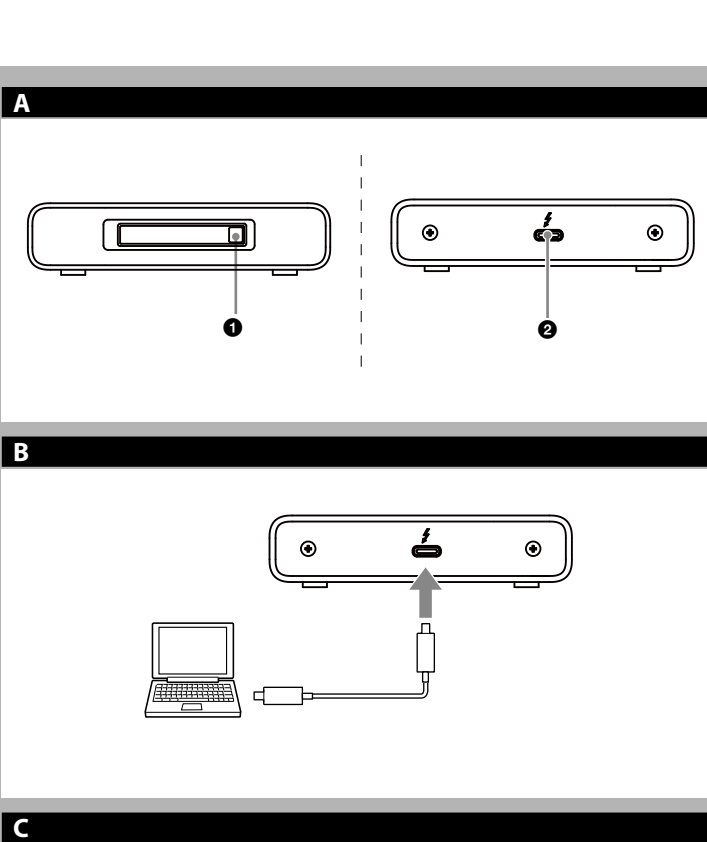

日本語

お読み 安全のために

ソニー製品は安全に充分配慮して設計されています。しかし、電気製品はすべて、まちがった使いかたをすると、火災や感電などにより人身事故につながる場合があります。事故を防ぐために次のことを必ずお守りください。

安全のための注意事項を守る
製品全般の注意事項が記載されています。

定期的に点検する

設置時や年1に度は、Thunderbolt™ 3 ケーブルに傷みがないか、Thunderbolt 3端子にほりこがっていないか、コネクタがしっかり差込まれているか、などを点検してください。

万一、異常が起きたら

- 煙が出たら
異常な音、においがしたら
- 内部に火や熱が伝わった場合、電源を切ったとき

Thunderbolt 3 ケーブルをコンピュータのThunderbolt 3端子から抜く

お買い上げ店またはソニーのサービス窓口に連絡する

警告 取扱説明書および製品では、次のような表示をしています。表示の内部のアイコンを理解してから本文をお読みください。

注意 この表示の注意事項を守らないと、火災・感電などにより死亡や大けがなど人身事故の原因となります。

注意 この表示の注意事項を守らないと、感電やその他の事故によりけがをしたり周辺の物品に損害を与えたりすることがあります。

注意 下記の注意事項を守らないと、**火災・感電**などにより**死亡や大けがの原因**となります。

Thunderbolt 3 ケーブルを傷つけない
Thunderbolt 3 ケーブルを傷つくと、火災や感電の原因となります

設置時に、製品と壁や棚との間にはさみ込みたりしない。
Thunderbolt 3 ケーブルを加工したり、傷つけたりしない。
重いものをのせたり、引っ張ったりしない。
製品間に近づけない。加熱したりしない。
移動させるときは、Thunderbolt 3 ケーブルを抜く。
Thunderbolt 3 ケーブルを抜くときは、必ずコンピュータを持って抜く。

万一、Thunderbolt 3 ケーブルが傷んだら、お買い上げ店またはソニーのサービス窓口へ交換をご依頼ください。

直射日光の当たる場所や熱源の近くに設置・保管しない

内部の温度が上がると、火災や故障の原因となることがあります。真夏の窓を締め切った自動車内では50℃を超えることがありますので、ご注意ください。

内部に水や異物を入れない

水や異物が入ると火災や感電の原因となります。万一、水や異物が入った場合はThunderbolt 3 ケーブルをコンピュータのThunderbolt 3端子から抜いて、お買い上げ店またはソニーのサービス窓口にご相談ください。

分解や改造をしない

火災や感電、けがの原因となることがあります。内部の回路や修理は、お買い上げ店またはソニーのサービス窓口にご相談ください。

ケーブル類は正しく配置する

Thunderbolt 3 ケーブルは、足に引っかけると本機の落下や転倒などによりけがの原因となることがあります。充分注意して接続・配置してください。
Thunderbolt 3 ケーブルは強く折り曲げないでください。

雨の当たる場所や、油煙、潮気、湿気、ほこりの多い場所には設置しない

上記のような場所やこの取扱説明書に記載している使用条件以外の環境に設置すると、火災や感電の原因となることがあります。

注意 下記の注意事項を守らないと、**けが**をしたり**周辺の物品に損害**を与えたりすることがあります。

ぬれた手でThunderbolt 3 ケーブルにさわらない

感電の原因となることがあります。

風通しの悪い所に置かない

布をかかたり、毛足の長いじゅうたんや布団の上または壁や家具に密着して置いて、自然放熱の妨げになるようなことはしないでください。通熱して火災や感電の原因となることがあります。

安定した場所に設置する
製品が傾いたり、搭載した機器が落下してけがをすることがあります。十分な強度がある水平な場所に設置してください。

運搬時には、接続ケーブルを取り外す
本機を運搬する際には、Thunderbolt 3 ケーブルを必ず取り外してください。接続ケーブルに引っかかるなど、転倒や落下の原因となることがあります。

長期間使わないときは、Thunderbolt 3 ケーブルを抜く
長期間使用しないときは安全のためThunderbolt 3 ケーブルをコンピュータのThunderbolt 3端子から抜いてください。絶縁劣化、腐蝕などにより火災の原因となることがあります。

お手入れの際、Thunderbolt 3 ケーブルを抜く
Thunderbolt 3 ケーブルを差し込んだままお手入れをすると、感電の原因となることがあります。

水のある場所に置かない
水が入ったり、ぬれたり、風呂場で使うと、火災や感電の原因となります。

付属のThunderbolt 3 ケーブル以外は使用しない
火災や感電の原因になります。

雷が鳴り出したら、本体には触れない
本体に触れると感電の原因となります。

通電中の本体に長時間触れない
長時間皮膚が触れたままになっていると、低温やけどの原因となることがあります。

曲げたり、落としたり、強い衝撃を与えない

重いものを載せない
発熱・火災の原因となることがあります。

本機のSxSメモリーカード挿入口に異物を入れない
発熱・火災の原因となることがあります。

SxSメモリーカード以外のカードを入れない
本機が故障したり、取り出せなくなることがあります。

電機を水滴のかかる場所に置かないこと。および水の入ったもの、花類などを機器の上に置かないこと。

その他安全上のご注意

重要
接続板は、製品の底面に貼付されています。この接続板は子供がいない可能性のある場所での使用には適していません。

故障が起きたら
動作がおかしくなったり、Thunderbolt 3 ケーブルなどが破損しているの気づいたら、お買い上げ店またはソニーのサービス窓口にご相談ください。

万一、異常が起きたら

- 煙が出たら
異常な音、においがしたら
- 内部に火や熱が伝わった場合、電源を切ったとき

Thunderbolt 3 ケーブルをコンピュータのThunderbolt 3端子から抜く

お買い上げ店またはソニーのサービス窓口に連絡する

警告 取扱説明書および製品では、次のような表示をしています。表示の内部のアイコンを理解してから本文をお読みください。

注意 この表示の注意事項を守らないと、火災・感電などにより死亡や大けがなど人身事故の原因となります。

注意 この表示の注意事項を守らないと、感電やその他の事故によりけがをしたり周辺の物品に損害を与えたりすることがあります。

Thunderbolt 3 ケーブルを傷つけない
Thunderbolt 3 ケーブルを傷つくと、火災や感電の原因となります

設置時に、製品と壁や棚との間にはさみ込みたりしない。
Thunderbolt 3 ケーブルを加工したり、傷つけたりしない。
重いものをのせたり、引っ張ったりしない。
製品間に近づけない。加熱したりしない。
移動させるときは、Thunderbolt 3 ケーブルを抜く。
Thunderbolt 3 ケーブルを抜くときは、必ずコンピュータを持って抜く。

万一、Thunderbolt 3 ケーブルが傷んだら、お買い上げ店またはソニーのサービス窓口へ交換をご依頼ください。

直射日光の当たる場所や熱源の近くに設置・保管しない

内部の温度が上がると、火災や故障の原因となることがあります。真夏の窓を締め切った自動車内では50℃を超えることがありますので、ご注意ください。

内部に水や異物を入れない

水や異物が入ると火災や感電の原因となります。万一、水や異物が入った場合はThunderbolt 3 ケーブルをコンピュータのThunderbolt 3端子から抜いて、お買い上げ店またはソニーのサービス窓口にご相談ください。

SxSメモリーカードを装着する (B)

メモリーカードを奥まで挿入する

SxSメモリーカードを取り出す

Windowsの場合

1 クラスレイトで<ハードウェアの安全な取り外し>アイコンを選択する
現在コンピュータに接続されているデバイスが表示されます。

2 SxSメモリーカードの項目を選択する

3 「ハードウェアの取り外し」のメッセージを確認する

4 本機からメモリーカードを取り出す

Macの場合

1 SxSメモリーカードのアイコンを「ゴミ箱」に移動させる

2 本機からメモリーカードを取り出す

詳細はコンピュータやOSの取扱説明書をご確認ください。

注意
長時間のご使用時にはメモリーカードが熱くなることがあります。抜くときにはご注意ください。

トラブル時の対処

症状

SxSメモリーカードのアイコンが表示されない。

- 正しくなっていない。
→ 正しくなる。
- コンピュータがThunderbolt 3に対応していない。
→ Thunderbolt 3 対応のコンピュータを使う。
- コンピュータのThunderboltドライバーが最新ではない。
→ コンピューターでアップデート情報を確認する。
- コンピュータにSxSファイブドライバーがインストールされていない。
→ 以下のサイトからインストールする。
http://www.sony.net/SxS-Support/
- SxSメモリーカードが挿入されていない。
→ SxSメモリーカードを挿入する。
- 非対応カードが挿入されている。
→ 対応カードを挿入する。
- SxSメモリーカードのドライプロテクトスイッチが「WP」になっている。
→ SxSメモリーカードのドライプロテクトスイッチをスライドさせ書き込み禁止を解除する。
- 静電気などの影響があったためと考えられる。
→ Thunderbolt 3 ケーブルを抜き、もう一度接続する。
- 安全な取り外しをする前にSxSメモリーカードを抜いた。
→ 「SxSメモリーカードを取り出す」手順に従い再出す。
- SxSメモリーカードのドライプロテクトスイッチが「WP」になっている。
→ SxSメモリーカードのドライプロテクトスイッチをスライドさせ書き込み禁止を解除する。

エクスプローラーまたはFinder「SxSメモリーカード」フォルダにアクセスできない。

正常に動作しない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

記録・消去ができない。記録・消去ができていない。

お買い得です。

「**ソニー業務用商品相談窓口のご案内**」にある窓口へ

ソニー株式会社 〒108-0075 東京都港区港南1-7-1
http://www.sony.co.jp

English
Before operating the unit, please read this manual thoroughly and retain it for future reference.

WARNING
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

This equipment is not suitable for use in locations where children are likely to be present.

All interface cables used to connect the equipment to peripherals must be shielded type to comply with EMC standard(s) and to prevent undesired operation due to radiated emissions. When cables are supplied, always use them for this purpose.

IMPORTANT
The nameplate is located on the bottom.

For the customers in the U.S.A.
This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Caution
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

If you have any questions about this product, you may call: Sony Customer Information Service Center 1-800-222-7669 or http://www.sony.com/

Supplier's Declaration of Conformity

Trade Name: SONY

Model Name: SBAC-T40

Responsible Party: Sony Electronics Inc.

Address: 16555 Via Esprillo, San Diego, CA 92127 U.S.A.

Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For the customers in Canada
CAN ICES 3 (A)/NMB-3(A)

WARNING
Operation of this equipment in a residential environment could cause radio interference.

For the Customers in Europe
For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

This apparatus shall not be used in the residential area.

Reduction in the Use of Hazardous Substances in Electrical & Electronic Equipment (Applicable in Republic of India)

This product and its components, consumables, parts or spares comply with the hazardous substances restriction of India's E-Waste (Management) Rules.

The maximum allowable concentrations of the restricted substances are 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polychlorinated Biphenyls (PBB) and Polybrominated Diphenyl Ethers (PBDE), and 0.01% by weight in homogenous materials for Cadmium, except for the exemptions specified in Schedule I of the aforesaid Rules.

Overview

The SBAC-T40 is an SxS memory card Reader/Writer, used to transmit data which is recorded on an SxS memory card, using Thunderbolt 3 high speed transfer. The unit is bus power drive compatible and can therefore be used without an AC adapter.

Precautions on use

• Use this unit with a computer that supports Thunderbolt 3.

• The latest version of the Thunderbolt™ driver is necessary. Check the update information for your computer.

• The SxS driver needs to be installed on your computer. Download and install it from the following link: <http://www.sony.net/SxS-Support/>

• To disconnect the Thunderbolt 3 cable, never pull on the cable. Instead, firmly grip it by its connector.

• If the unit becomes dirty, clean it using a soft cloth. Never use benzine, alcohol or thinner because these solvents will deform the unit and cause it to malfunction.

• Sony accepts absolutely no responsibility for problems in data recorded or played if the SxS memory card is used incorrectly.

• To prevent accidentally recording, deleting or editing of data recorded on the SxS memory card, set the write-protect switch of the SxS memory card to "WP".

• Do not engage the write-protect switch while the SxS memory card is inserted into the unit. Depending on the computer OS, write-protect will not function even if that switch is engaged.

Do not place this unit vertically.
The unit must be placed horizontally. If the unit uses or placed vertically, malfunction will occur.

OS

Windows 10, Windows 11
macOS 12.4, macOS 13.6, macOS 14.4

Note
Not all proper operations of the PC are guaranteed.

Identifying the parts (A)

❶ eject button

❷ Thunderbolt 3 port

CAUTION
When you connect the Thunderbolt 3 cable of the unit to peripheral device, use the supplied cable to prevent malfunction due to radiation noise.

Connect the unit to the computer (B)

1 Securely connect the specified Thunderbolt 3 cable (supplied) to the Thunderbolt 3 port of the unit.

Make sure that the Thunderbolt 3 cable is connected to the Thunderbolt 3 port. Otherwise, malfunction occurs.

2 Connect the specified Thunderbolt 3 cable to the Thunderbolt 3 port of the computer.

Notes

• The unit is recognized by inserting the SxS memory card to the unit.

• Not all operations are guaranteed on all computers, even when running under the recommended environment.

Install the SxS memory card (Q)

Insert the SxS memory card into the unit.

Remove the SxS memory card from the computer

For Windows user

1 Select [Safely Remove Hardware] icon on the task tray.

The devices currently connected to the computer appear on the screen.

2 Select the icon of the SxS memory card.

3 Wait until the message "Safe to Remove Hardware" appears.

4 Remove the memory card.

For Mac user

1 Move the SxS memory card icon to the Trash icon.

2 Remove the memory card.

For details, refer to the operating instructions supplied with the computer/OS.

Long time use may make the attached memory cards hot. Be careful when removing them from the unit.

Troubleshooting

