




2a: Attach 4" Handlebar Rod to Handlebar Clamp.3a: Insert Carbon Fiber Rods into Handlebar Clamp2b: Thread Handlebar Clamp Tightening Screw3b: Attach 4" Grip Rod to CF Rod3c: Add Handgrips to both Handlebar Rod and Rear Grip Rod

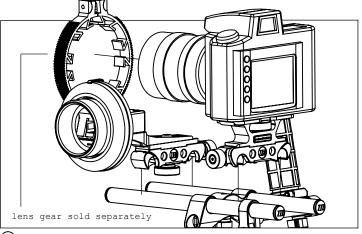

Attach Lens Gear / Follow Focus / Camera Assembly 4a: Attach Lens Gear to Camera Lens 4b: Attach Follow Focus to CF Rods 4c: Attach Camera / DSLR Baseplate Assembly to CF Rods HELPFUL HINT: Lens Gear and Follow Focus need to be aligned properly. Make sure that Gear / Follow Focus / Camera

alignment is set appropriately

