



# Getting Started with Looking Glass Portrait

Advance Beta Edition

## **Setup + Viewing Holograms**

Standalone Mode

#### Attach the base plate.

- Remove the base plate off of the back of the unit.
- Align the plate openings onto the 2 studs - the 2 foam pads should be facing down.
- Slide the plate forward to lock it in place.

#### 2 Attach the USB-C Cable.


- Connect the included USB-C cable to Looking Glass Portrait's USB-C port.
- (If provided) Install your conversion head into the provided adapter.
- Attach the USB-C cable to the adapter and plug into a wall outlet.

The LED indicator will pulse white to indicate that your unit is ready for Standalone Mode.

# 3 Switch Looking Glass Portrait ON to Standalone Mode.

- Press the ON/OFF button.
- Wait 5-8 seconds for Looking Glass Portrait to boot up.

To switch Looking Glass Portrait OFF, hold the ON/OFF button for 2 seconds. Only disconnect the power after switching off the unit.

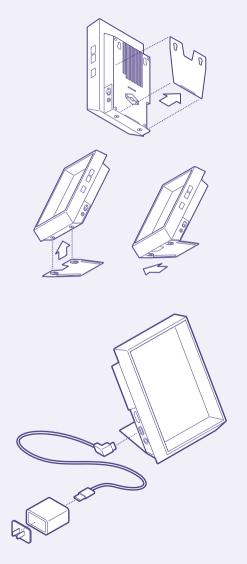

#### 4) View & navigate through the included demo reel.

· When switched ON, the unit will automatically loop through the included demo reel Manual Button Controls: Forward Back Play-Pause-Loop To freeze frame a demo tap Play-Pause-Loop. Forward To loop a particular Back demo on repeat, hold Play-Pause-Loop for Play-Pause-Loop 2 seconds. LED Indicator · To return to cycling through all demos in the ON/OFF reel, tap Forward or Back. Edge Lighting

(5) Adjust the edge lighting (if needed).

 Use the Edge Lighting button to scroll through 4 light levels + OFF.

#### Hoo! Ray!

The included demo reel you just experienced is just the beginning. Start making content of your own by heading to the link below:

#### HTTP://LOOK.GLASS/PORTRAIT-START

 Note that some software may not be available by the time your Advance Beta Looking Glass Portrait gets to you.
 Once it is ready, we will send out a sengrate note.

### Setup + Creating Holograms

#### Desktop Mode

- 1) Connect the USB-C cable to your Windows / Mac.
  - (If you were in Standalone Mode) Disconnect the USB-C cable from your power adapter.
  - · Connect the USB-C cable to your computer USB-C port.
- 2) Connect the HDMI cable.
  - · Connect the HDMI cable to your computer's HDMI port.
  - · Connect the HDMI cable to Looking Glass Portrait's HDMI port.

The LED indicator will pulse blue to indicate that your unit is ready for Desktop Mode.

- 3 Switch Looking Glass Portrait ON to Desktop Mode.
  - Press the ON/OFF button.
- Start creating content.
   Go to HTTP://L00K.GLASS/PORTRAIT-START

   HDMI Display Cable
   USB-C Cable

Your PC / Mac

**IMPORTANT:** Whether you're in Desktop or Standalone Mode, switch off your Looking Glass Portrait before unplugging from the power source.

You can do this by holding the ON/OFF button for 2 seconds.

