

Aputure Gel Holder


For Dome

Product Manual


English

Thank you for purchasing aputure product.

Material list

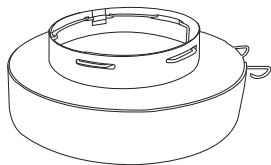


Gel holder

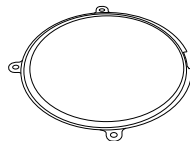



Hanging Ring

Unscrew speeder ring

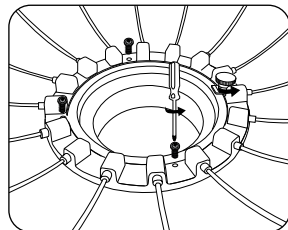


Detailed product manual for Light Dome can be found on the movie solution page on www.aputure.com.

Place Hanging Ring and screw it

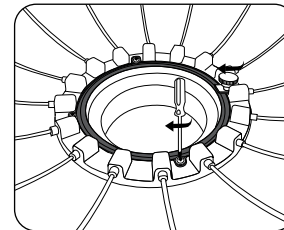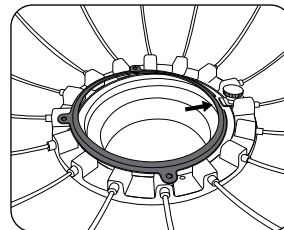

Insert Gel holder

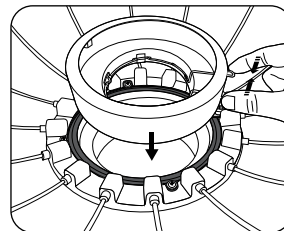


***Caution:** When using color gels with powerful LED lights, such as the Aputure C300D, the heat will cause the filter gels to distort or burnt after a period of time. You are advised to change new sheets of color filters once every 3 hours during constant usage; You are recommended to use ROSCO or LEE for better results.

Specifications

Item	Dimension	Net Weight
Gel holder	Φ185x65 mm (7.3x2.6")	0.43 kg (0.95 lbs)
Hanging Ring	Φ 545mm(21.5")	

折页方式：

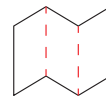

为折线(不印刷)

折页成型 (英文在正面) :



Aputure® 深圳市爱图仕影像器材有限公司			
设计项目	122 Gel holder 说明书	图号	AP-122-PR-03
尺寸(mm)	270*140mm 折页尺寸: 90*140mm	版本	V1.0
材质工艺	70g 书纸, 正反两面印刷	设计师	Dick
备注	料号: S12200230001	日期	20180810


抛物线反光罩色纸夹

使用者指南


中文

感谢您购买爱图仕产品。

物品清单

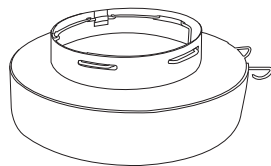


色纸夹

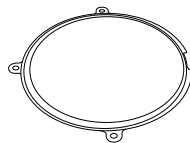



挂圈

拆掉卡盘螺丝

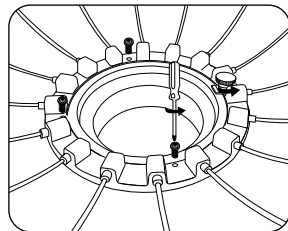


您可以在本公司网站 <http://www.aputure.com/cn> 下载本产品的详细使用者指南。

放置挂圈并打好螺丝

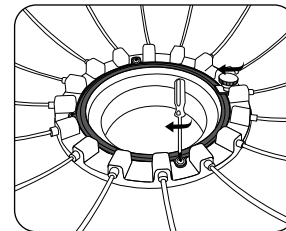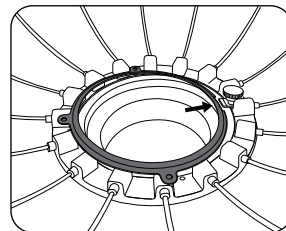

插入色纸夹

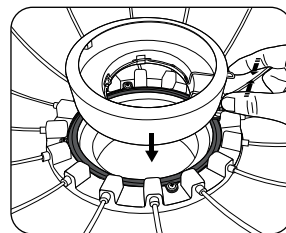

注意: 在给大功率灯加色纸的时候, 尤其是LS C300D, 经过一段时间使用, 热量会使色纸褪色, 建议用户在持续使用时, 每3小时更换一次色纸。为了更好的校色效果, 建议用户使用Rosco或者Lee的专用色纸。

规格参数

物料	尺寸	净重
色纸夹	Φ185x65 mm (7.3x2.6")	0.43 kg
挂圈	Φ 545mm(21.5")	(0.95 lbs)