


Connecting a BTA-2 (dedicated wireless adapter)


By connecting a BTA-2, audio can be input through the smartphone connection jack via Bluetooth.

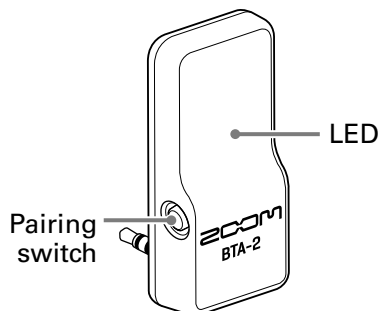

Connecting


Pairing must be conducted the first time connecting.

1. While the **P4** power is off, connect the BTA-2 to the smartphone connection jack and the BTA-2 power supply connector.

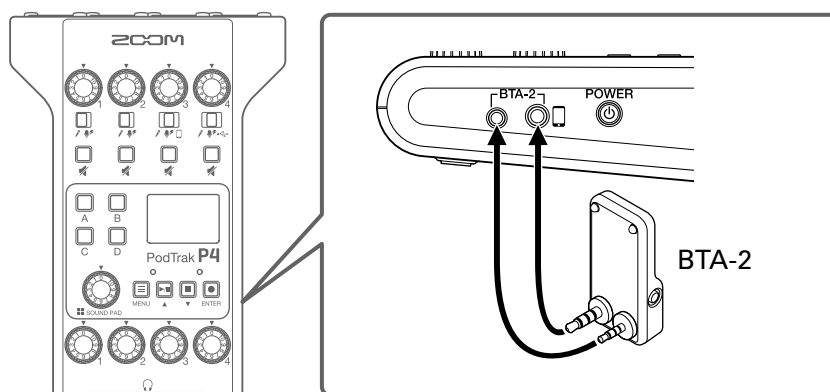

2. Turn the **P4** power on (→ [“Turning the power on”](#) on page 16).
The LED lights white when power is being supplied to the BTA-2.
If a smartphone has already been paired, it will automatically be connected at this time.
3. Press and hold the pairing switch until the BTA-2 LED blinks white.
This puts the BTA-2 into connection standby.
4. Conduct connection procedures on the smartphone.
The LED will light blue when connection completes.

NOTE

When connecting to a smartphone using a BTA-2, set INPUT SELECT switch 3 to .

Disconnecting

1. Conduct disconnection procedures on the smartphone.
This disconnects it.
2. The **P4** power should be off when disconnecting a BTA-2.