


Cartoni Ragno Pod Setup Instructions



RAGNO POD Setup Instructions


STEP 1

Remove the RAGNO POD from its padded carrying case. Set the unit on the floor with all legs pointing upward. Rotate the **Patented Secure Locking (PSL)** mechanism counterclockwise (**right to left**) all the way up to release it from the locked position. Continue unscrewing the PSL until it is fully disengaged.

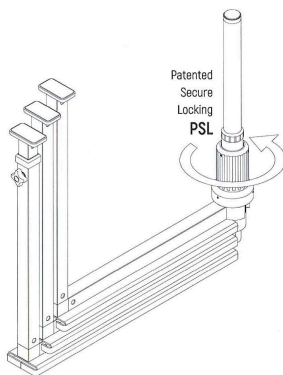


STEP 2

Rotate the PSL back (**left to right**) about one quarter-turn clockwise until you feel a **click**. This will indicate that the locking screw has been released.

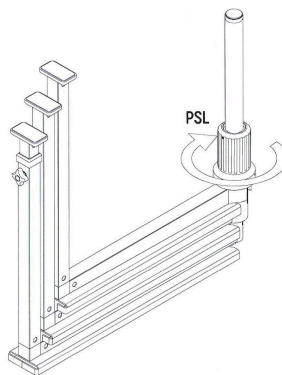


STEP 3

With one hand, hold the RAGNO POD's adjustable **Leg 1**. With your other hand, pull and rotate **Leg 3** counterclockwise (**right to left**). As Leg 3 rotates, **Leg 2** will be pulled outward easily. Continue rotating until both internal legs reach the **120° stop position**. Ensure that Legs 2 and 3 are fully symmetrical and firmly seated against their stops before proceeding.

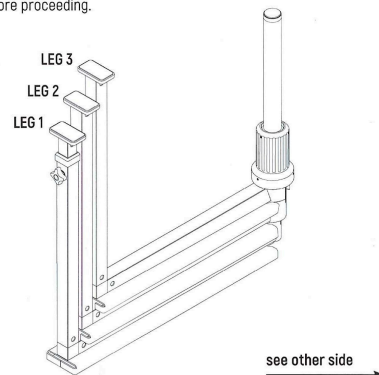


STEP 4

Rotate the PSL clockwise (left to right) all the way up to lock all three legs securely into their operating positions.

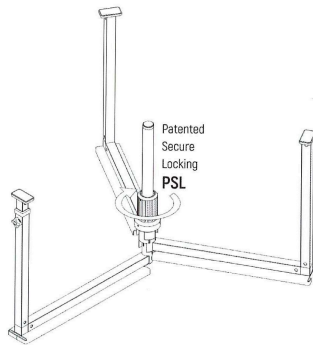


STEP 5

Turn the RAGNO POD upside down into its operating position. If needed, fine-tune the adjustable Leg 1 to achieve perfect surfacing across all three legs, ensuring proper levelling on uneven surfaces.

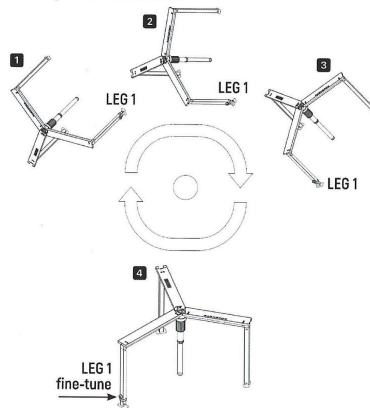

STEP 6

Place your tripod onto the three wide tripod footpaths. Ensure that the tripod's rubber feet, or its floor spreader, are securely seated and properly aligned before use. **Do not use the tripod without padded feet and/or a built-in spreader, as this may cause the tripod to slip from the platform and create a safety hazard.**

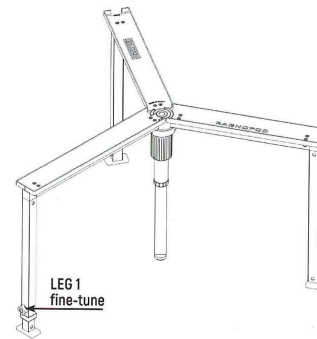

OPTIONAL OPERATOR PLATFORM

The optional foldable standing platform provides a spacious, anti-slip surface for operators. By keeping the platform separate from the tripod base, vibration transference is minimized, ensuring steady, professional footage. It attaches neatly to the Ragno Pod for transport and fits easily into the padded carrying case for effortless mobility.

